

W32

ED19

W33

Inside




Complete Installation of Window Frames.
Ensure with a laser level both frames
are at a perfect 90 degree angle.

STEP 1


W32

ED19

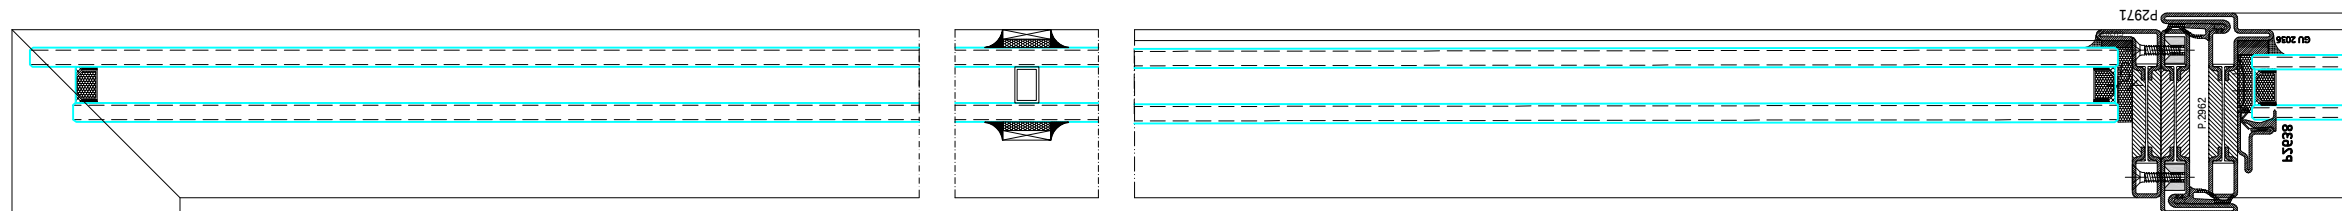

W33

Inside

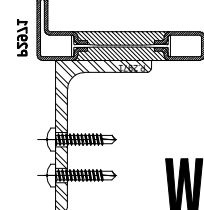

WALL

Install Glass into First Window Frame

STEP 2


W32

ED19

W33

Inside

WALL

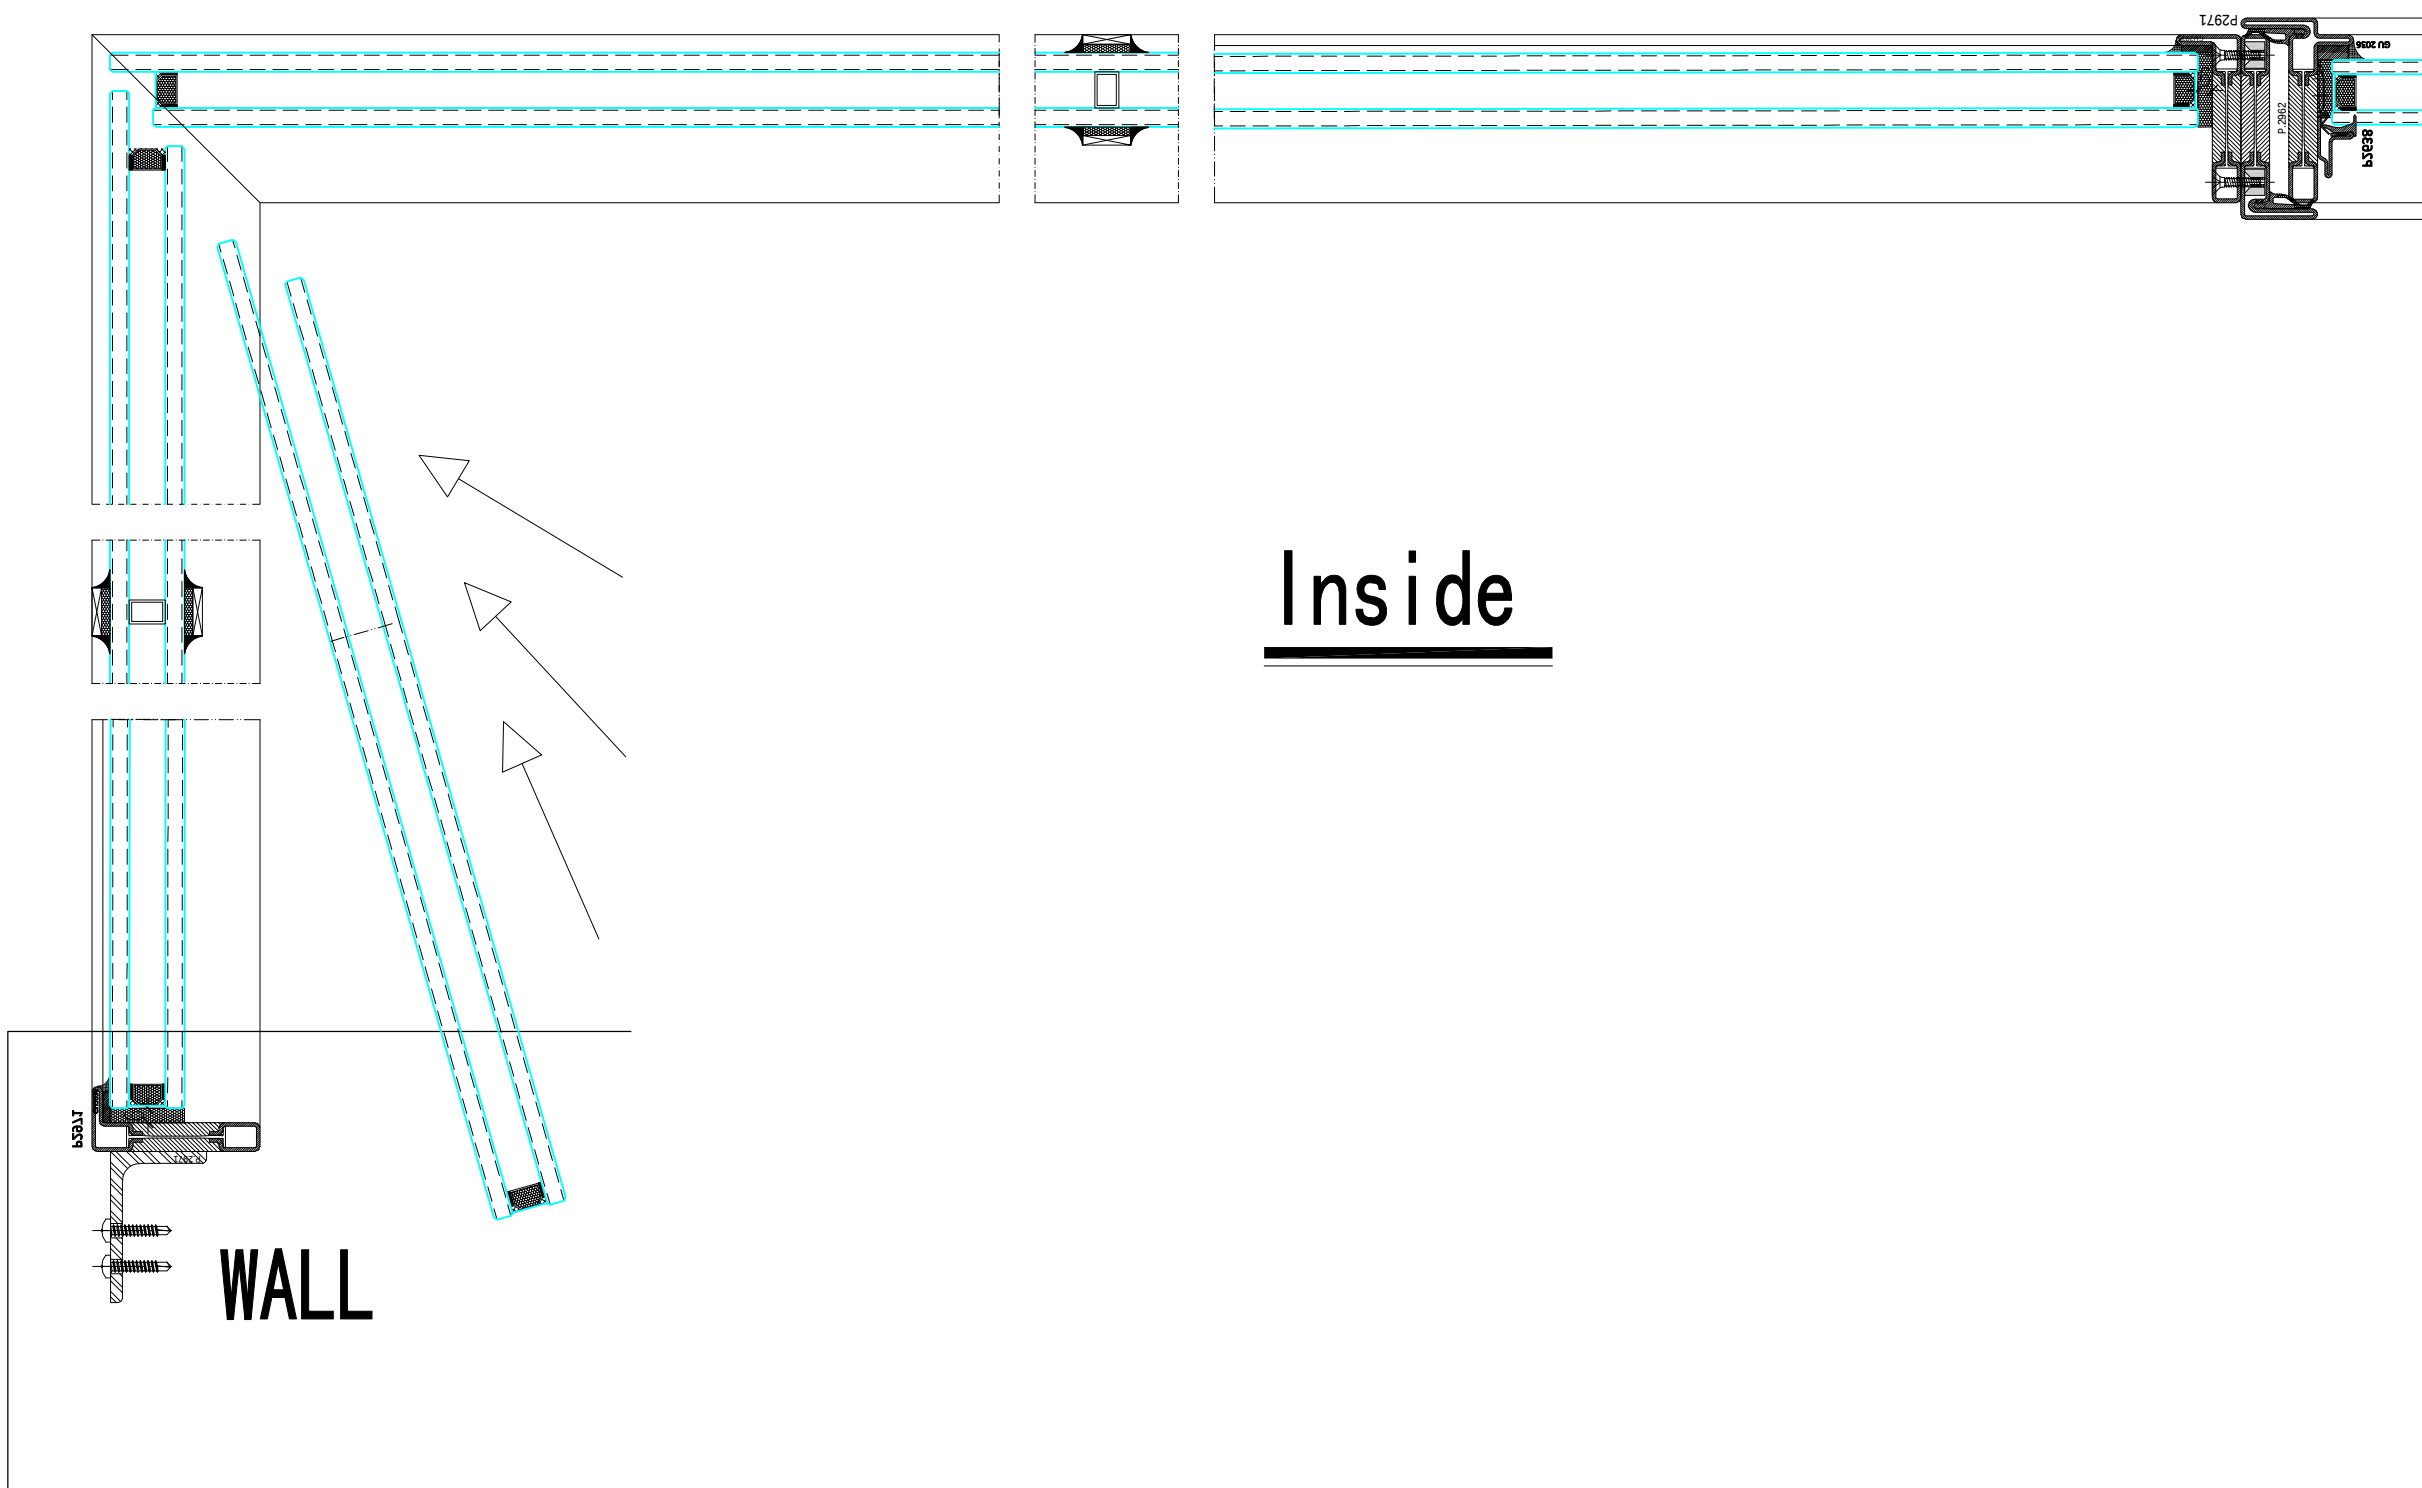


Install Glass into Second Window Frame,
Keeping Glass Panel at an Angle to
Interlock the Offset Glass Pieces and
create a Seal.


STEP 3

W32


ED19

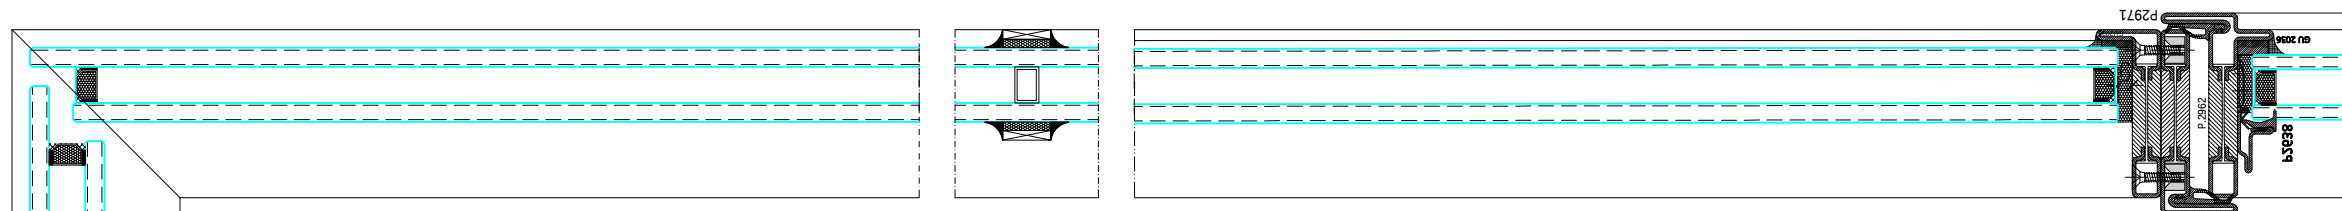

W33

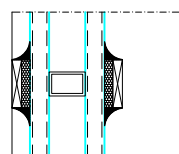



Inside

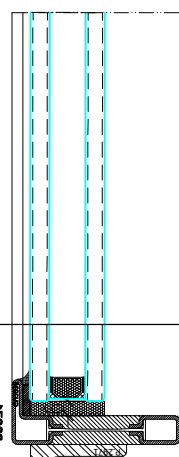

WALL

Use Laser to Ensure Both Glass
Panels are Installed at Exactly
90 Degrees.

STEP 4

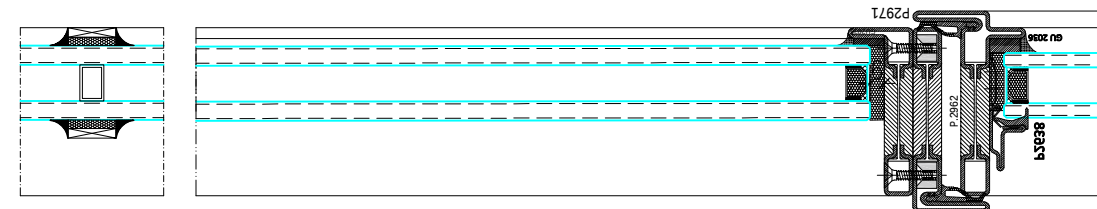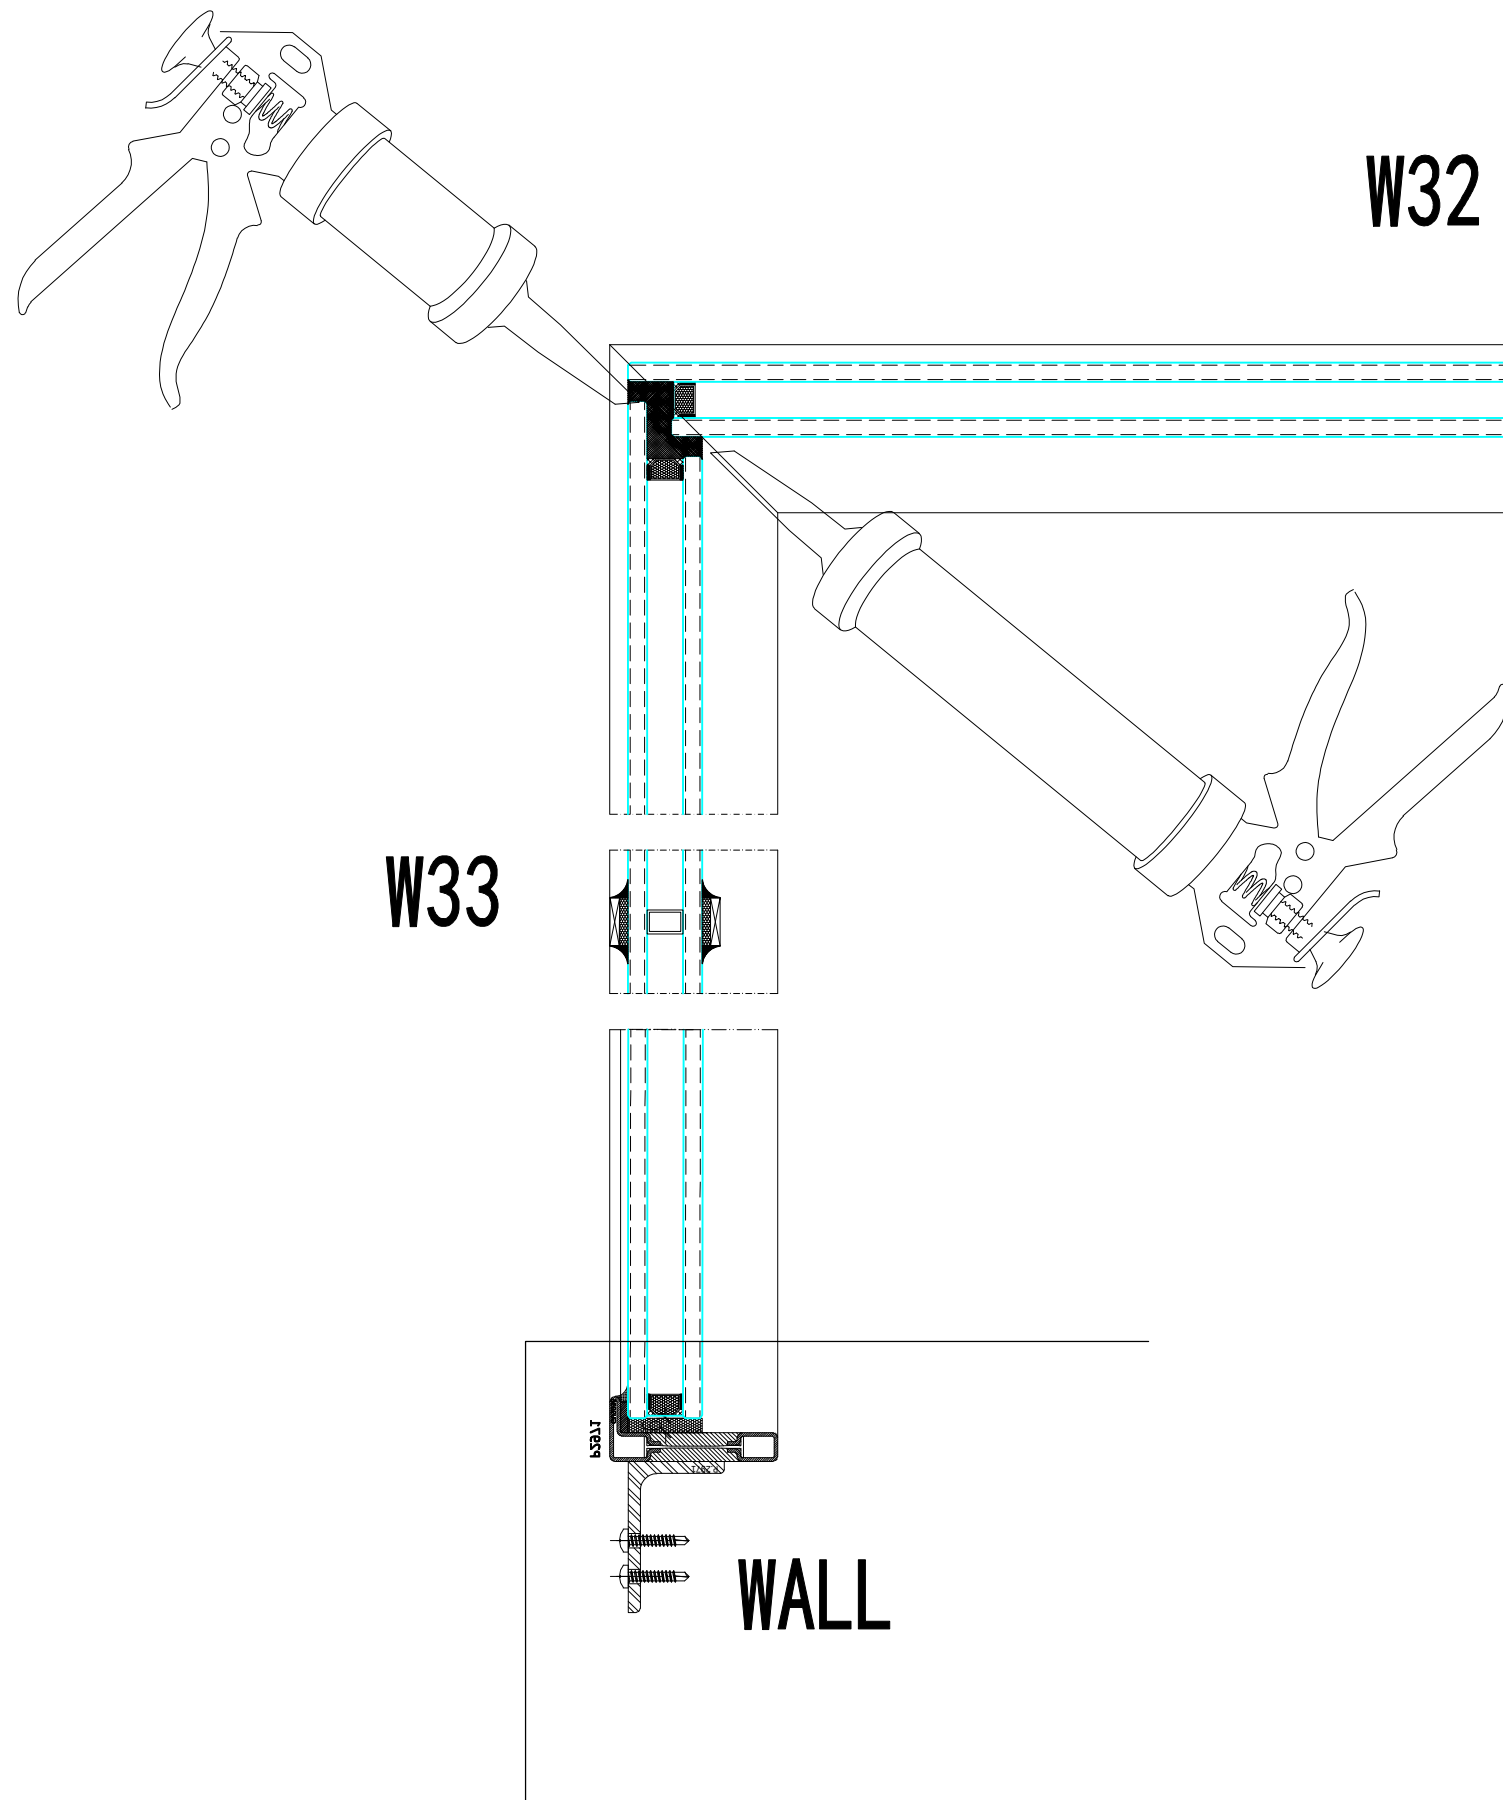

Inside

Inject Dow995 (or Equivalent) Silicone into Pocket Created at Corner so it is Completely Filled

STEP 5

Inside


W32

ED19

W33

Inside

WALL

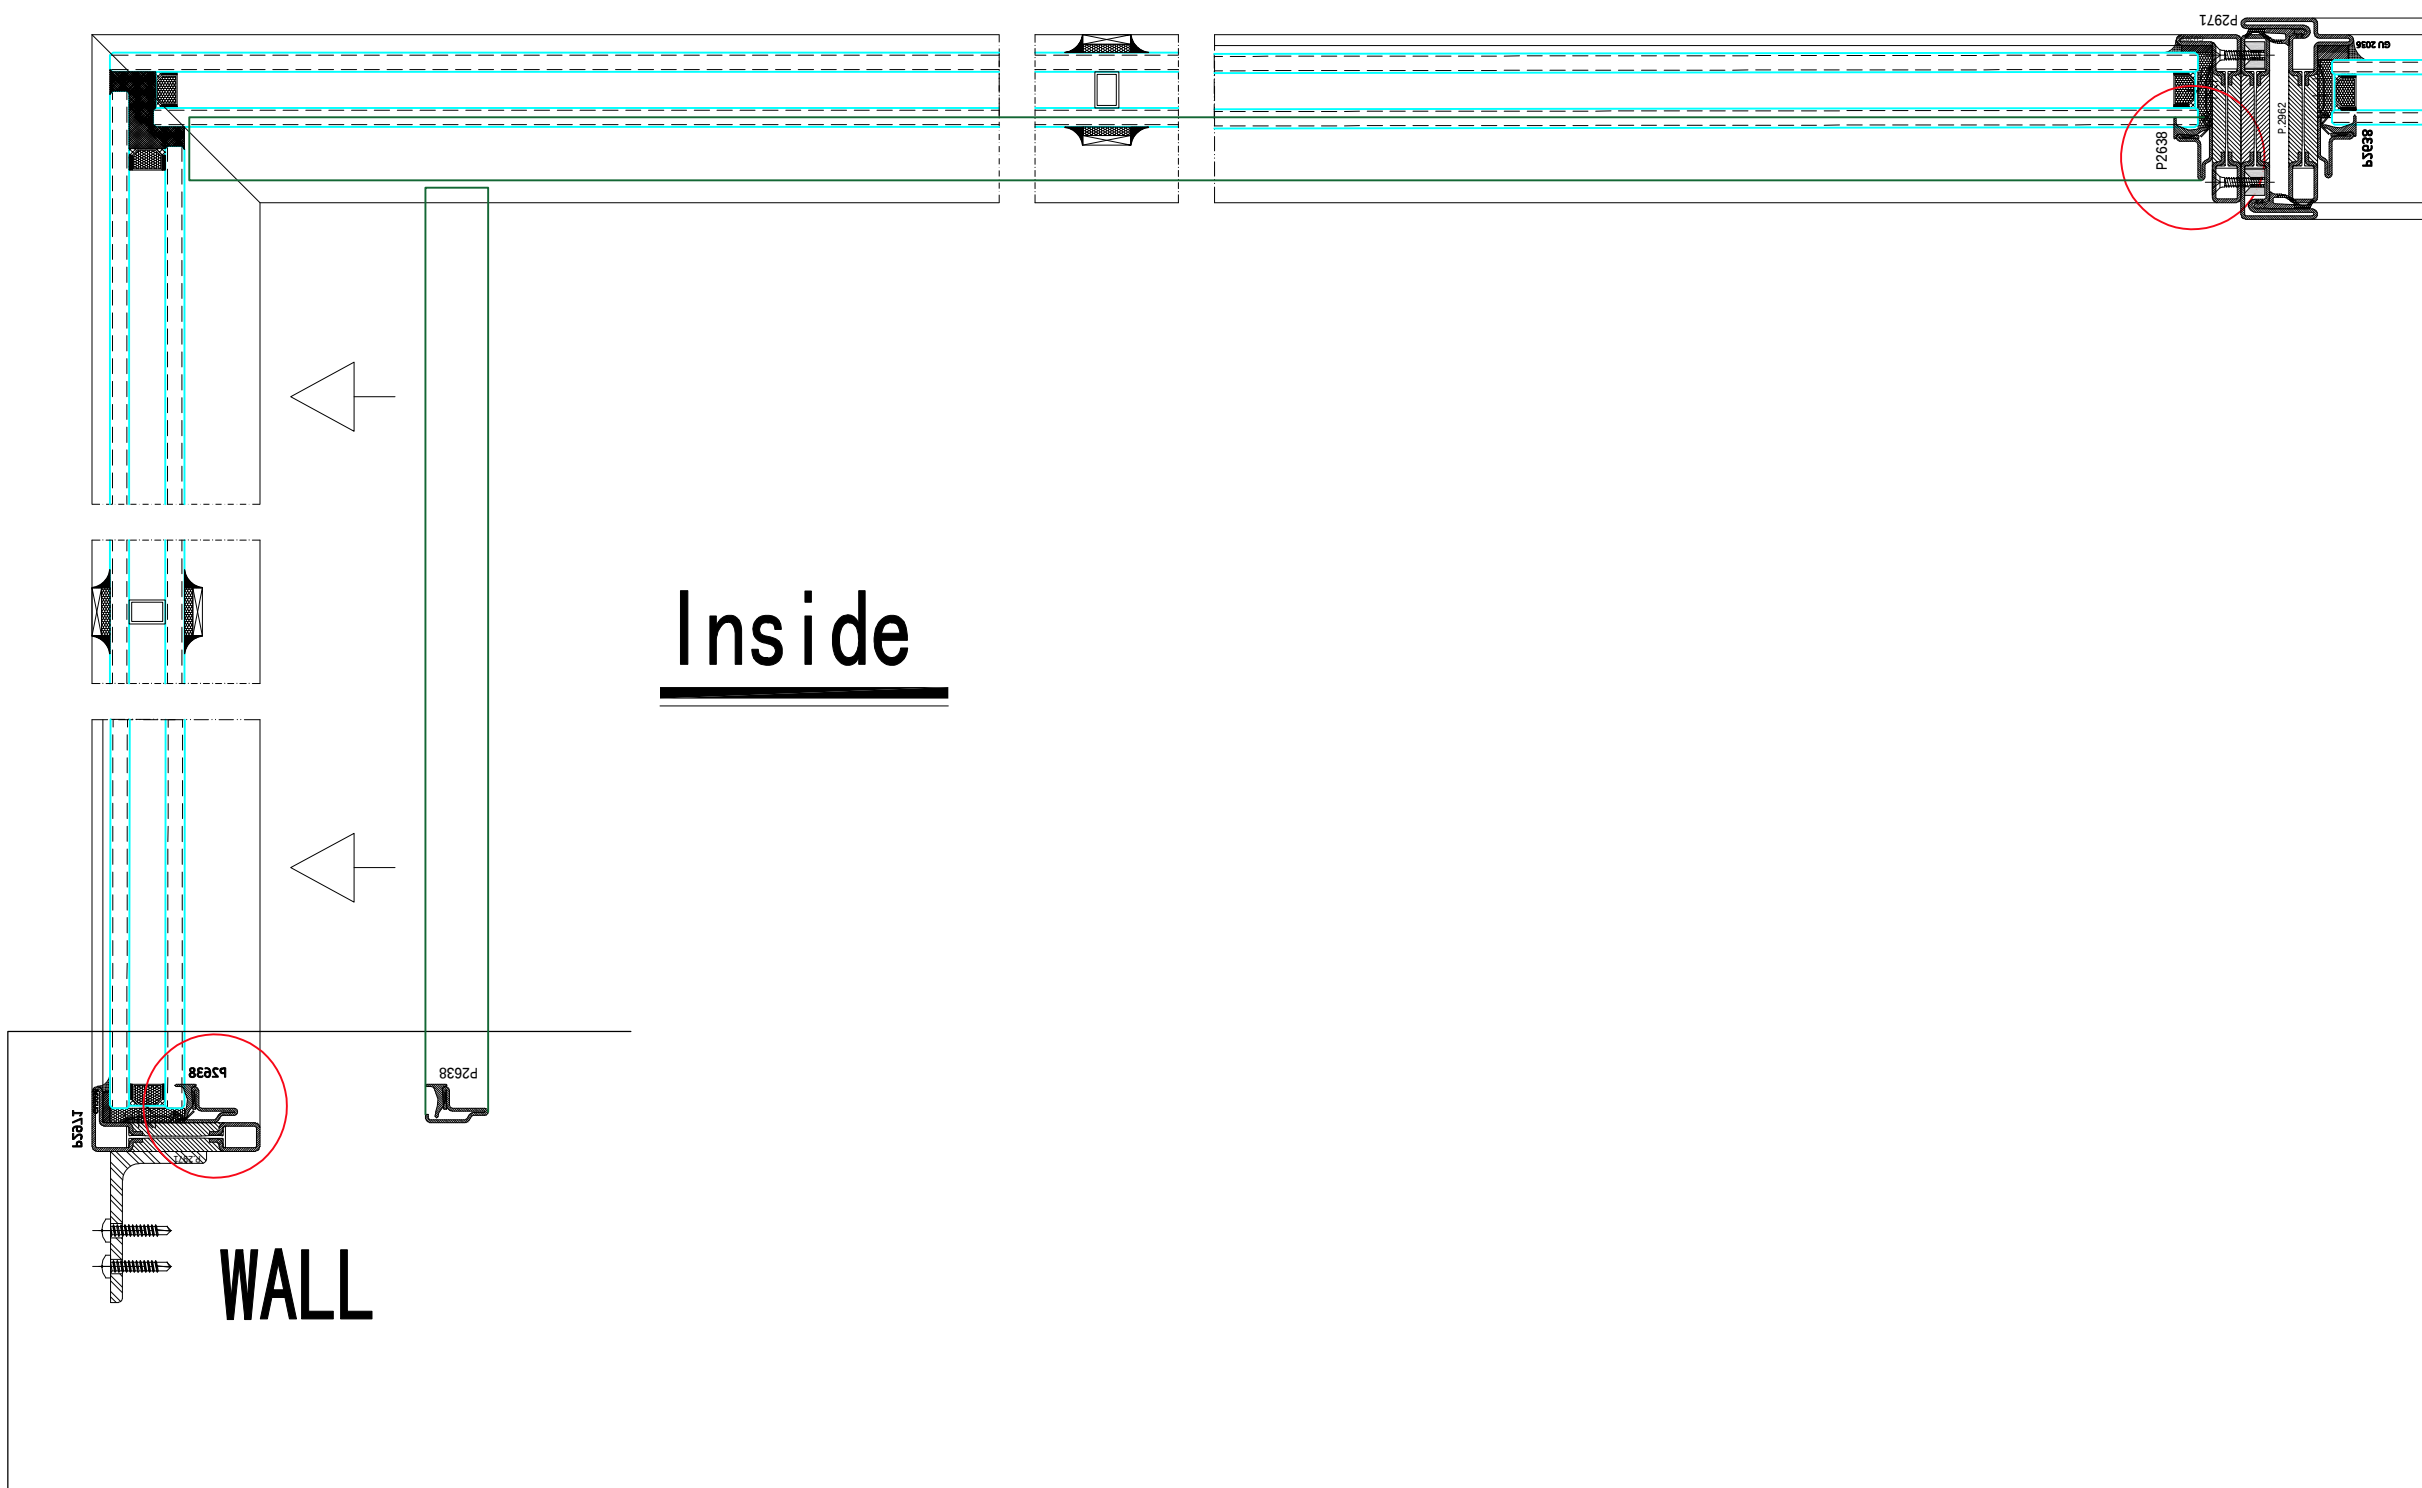

Install Glass Stop (glazing bead)
for Second Window

STEP 7