




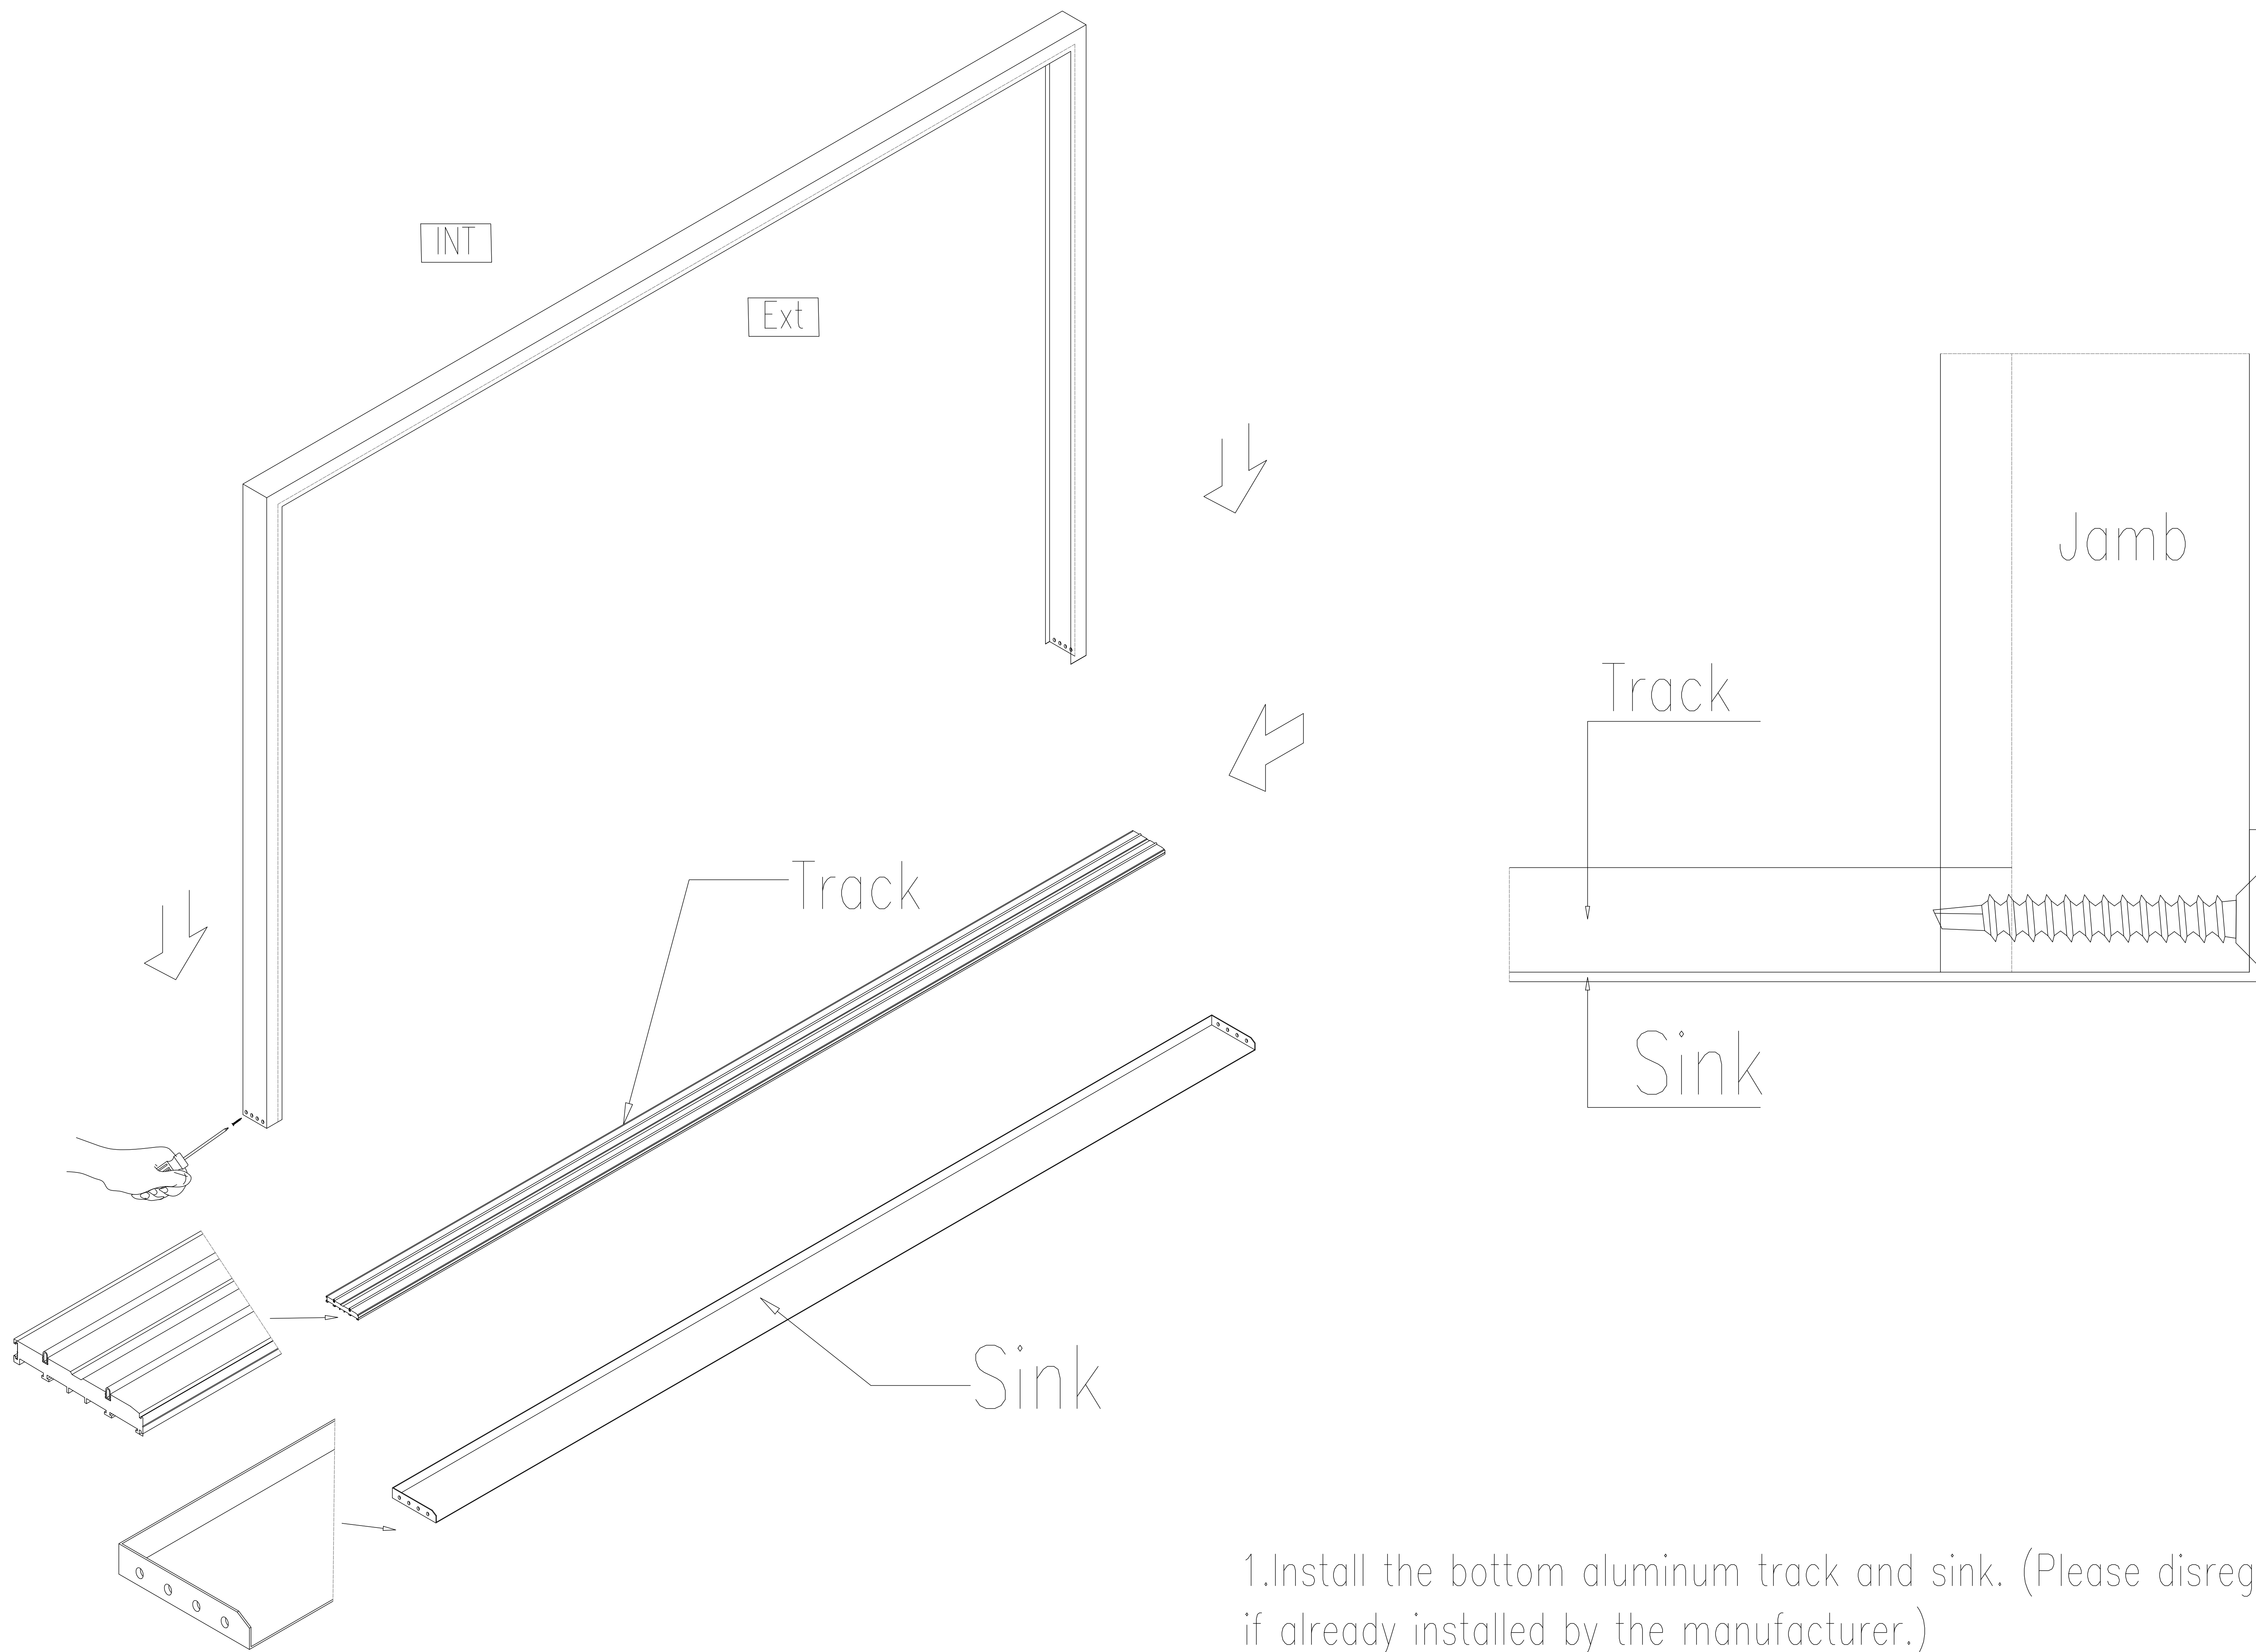


1. Install the bottom aluminum track and sink. (Please disregard if already installed by the manufacturer.)

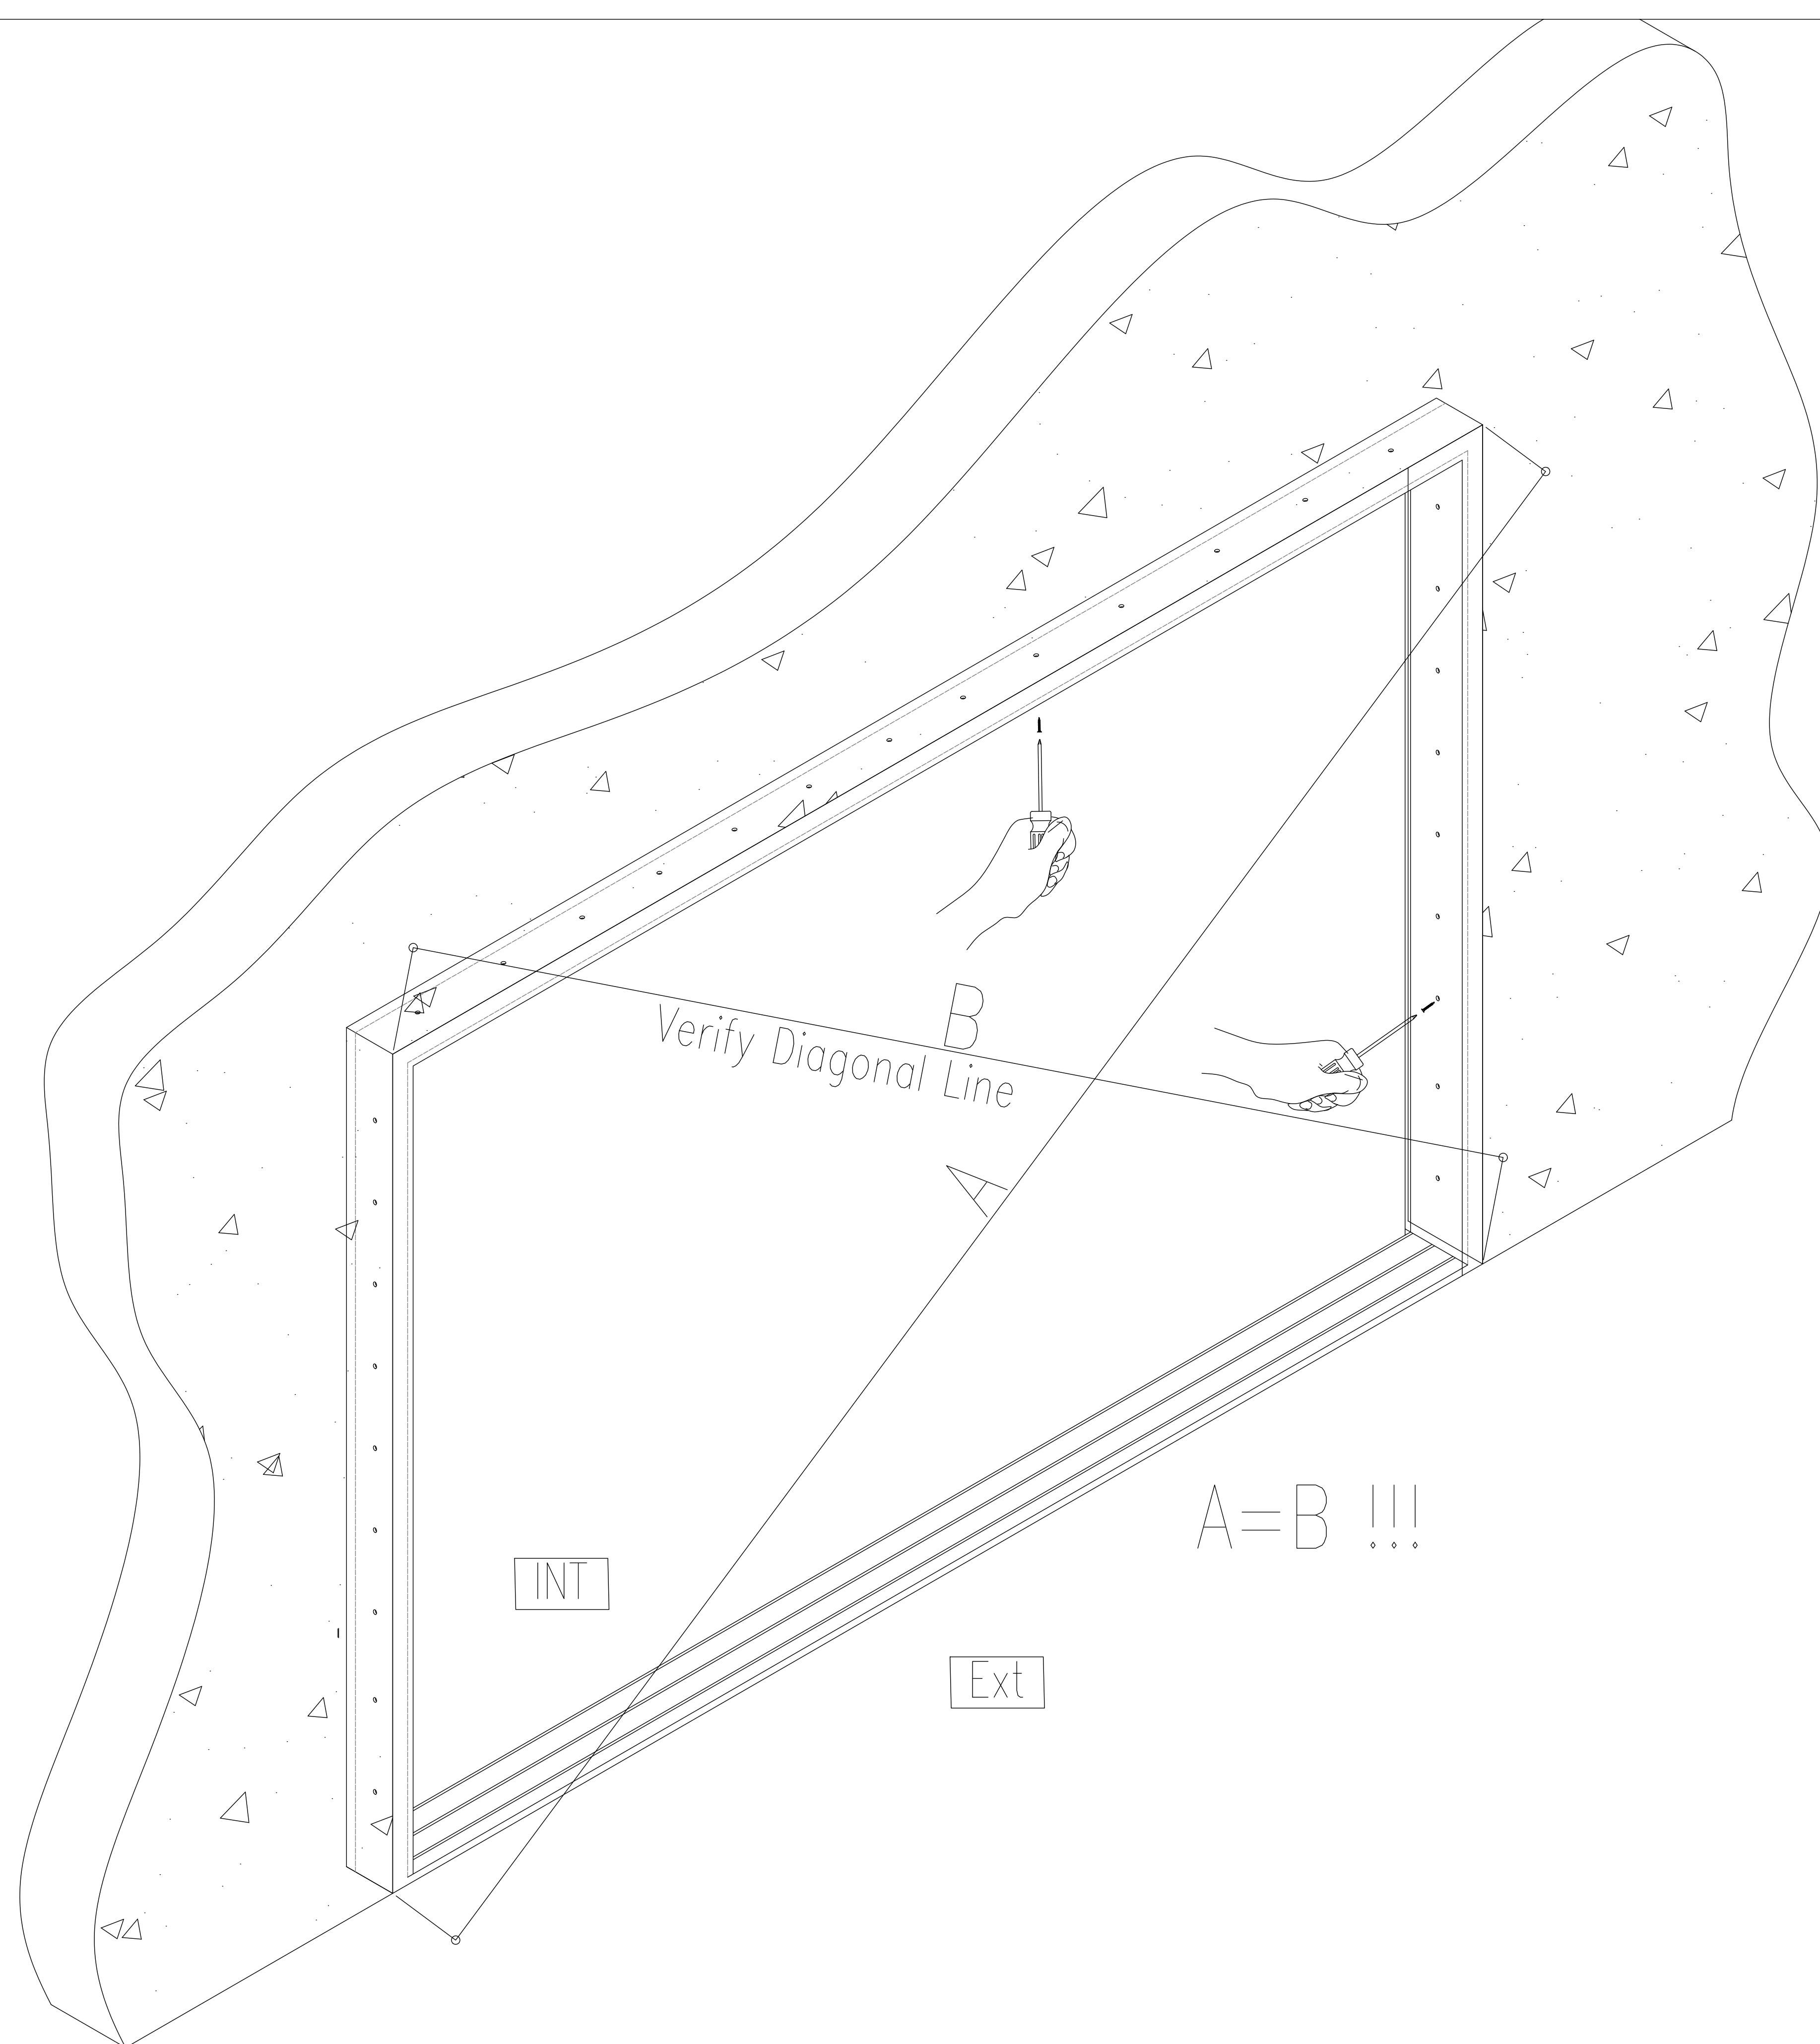


2. Place the outer frame into the door opening, adjust it to ensure it is vertical, and then secure it to the wall within the door opening.

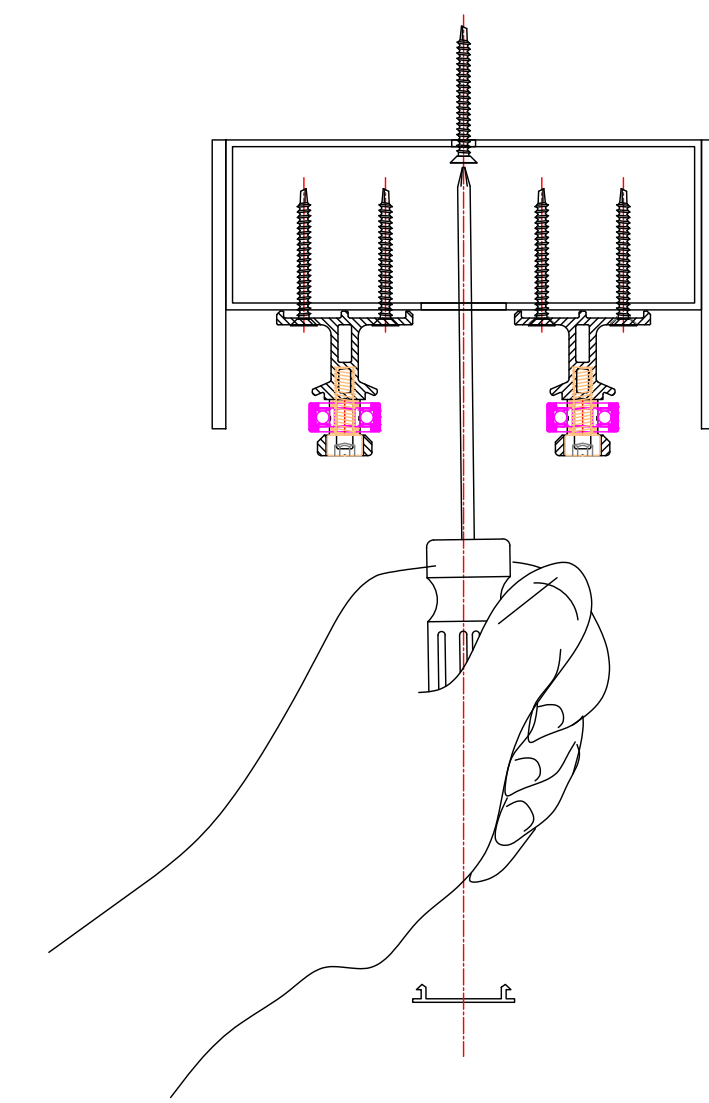


securing the top frame with screws, cover them with plastic caps.


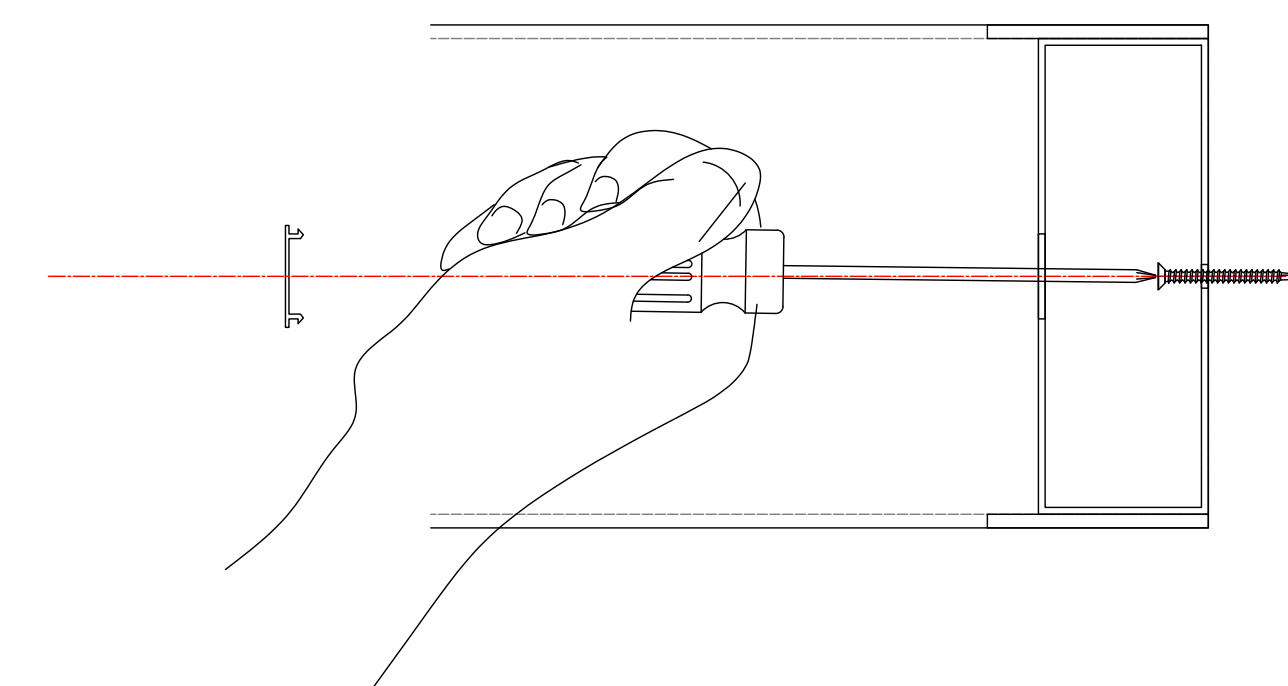


Securing the side frames with screws, cover them with plastic caps.

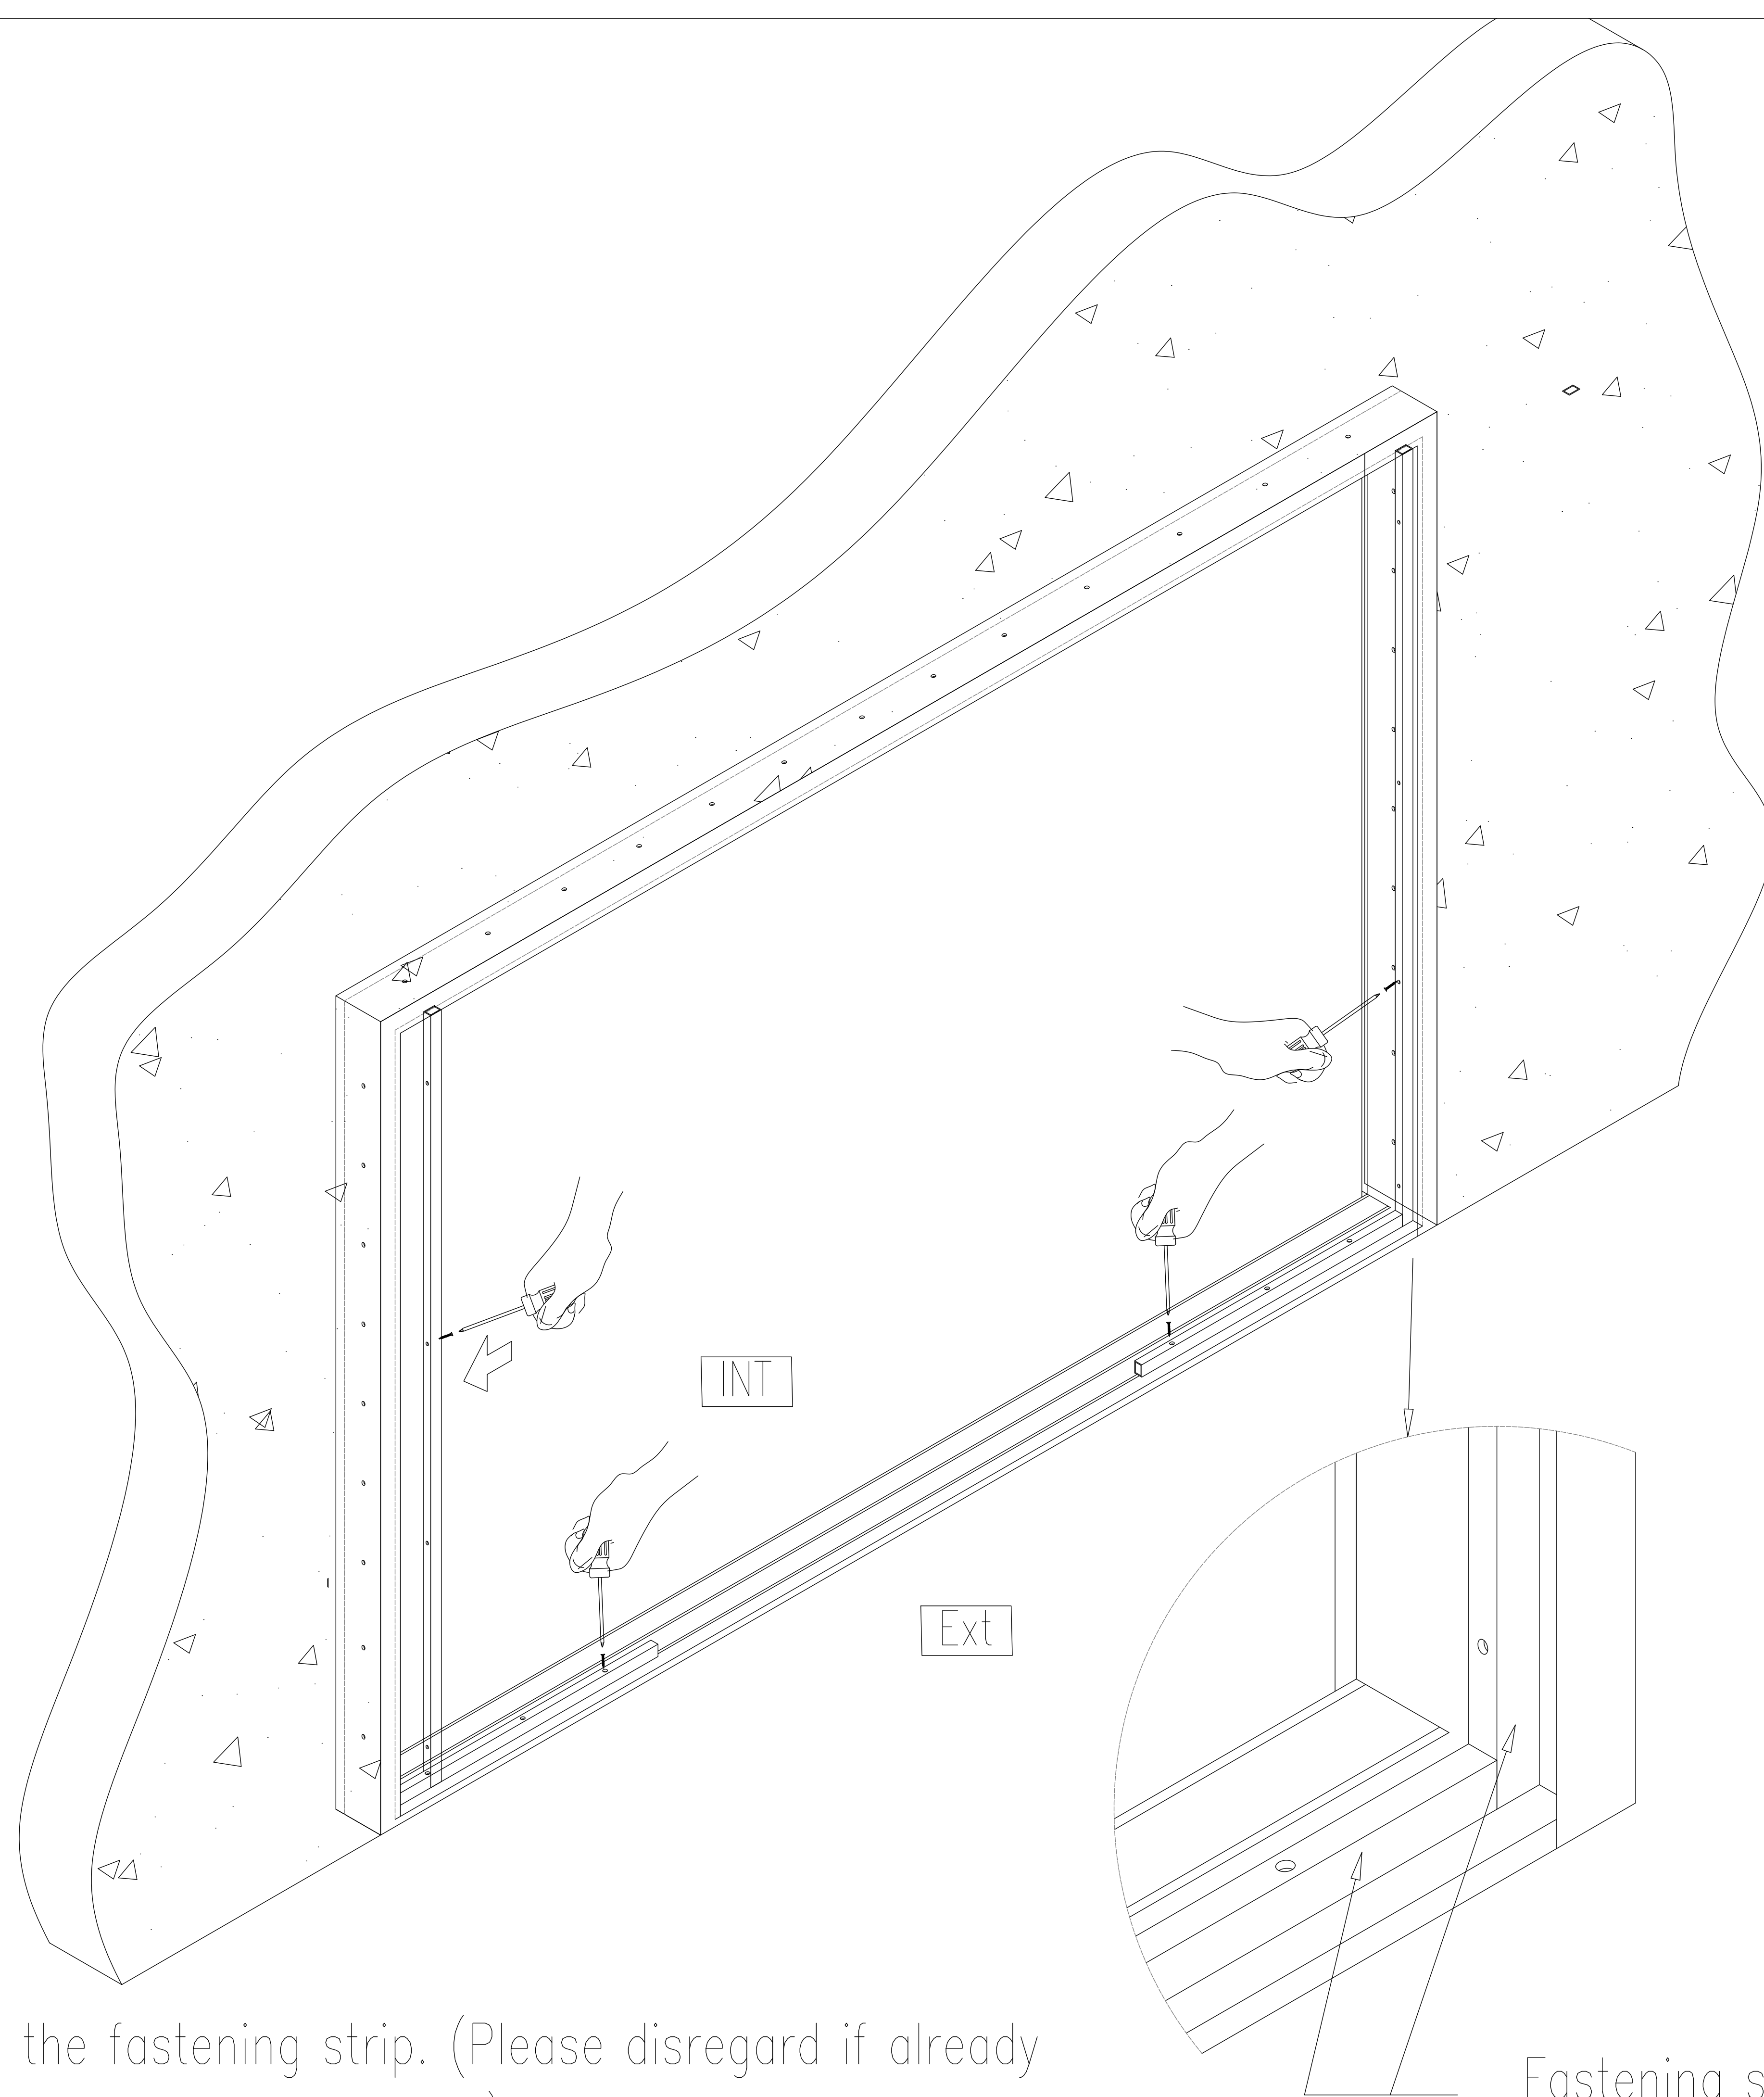


3. Install the fastening strip. (Please disregard if already installed by the manufacturer.)

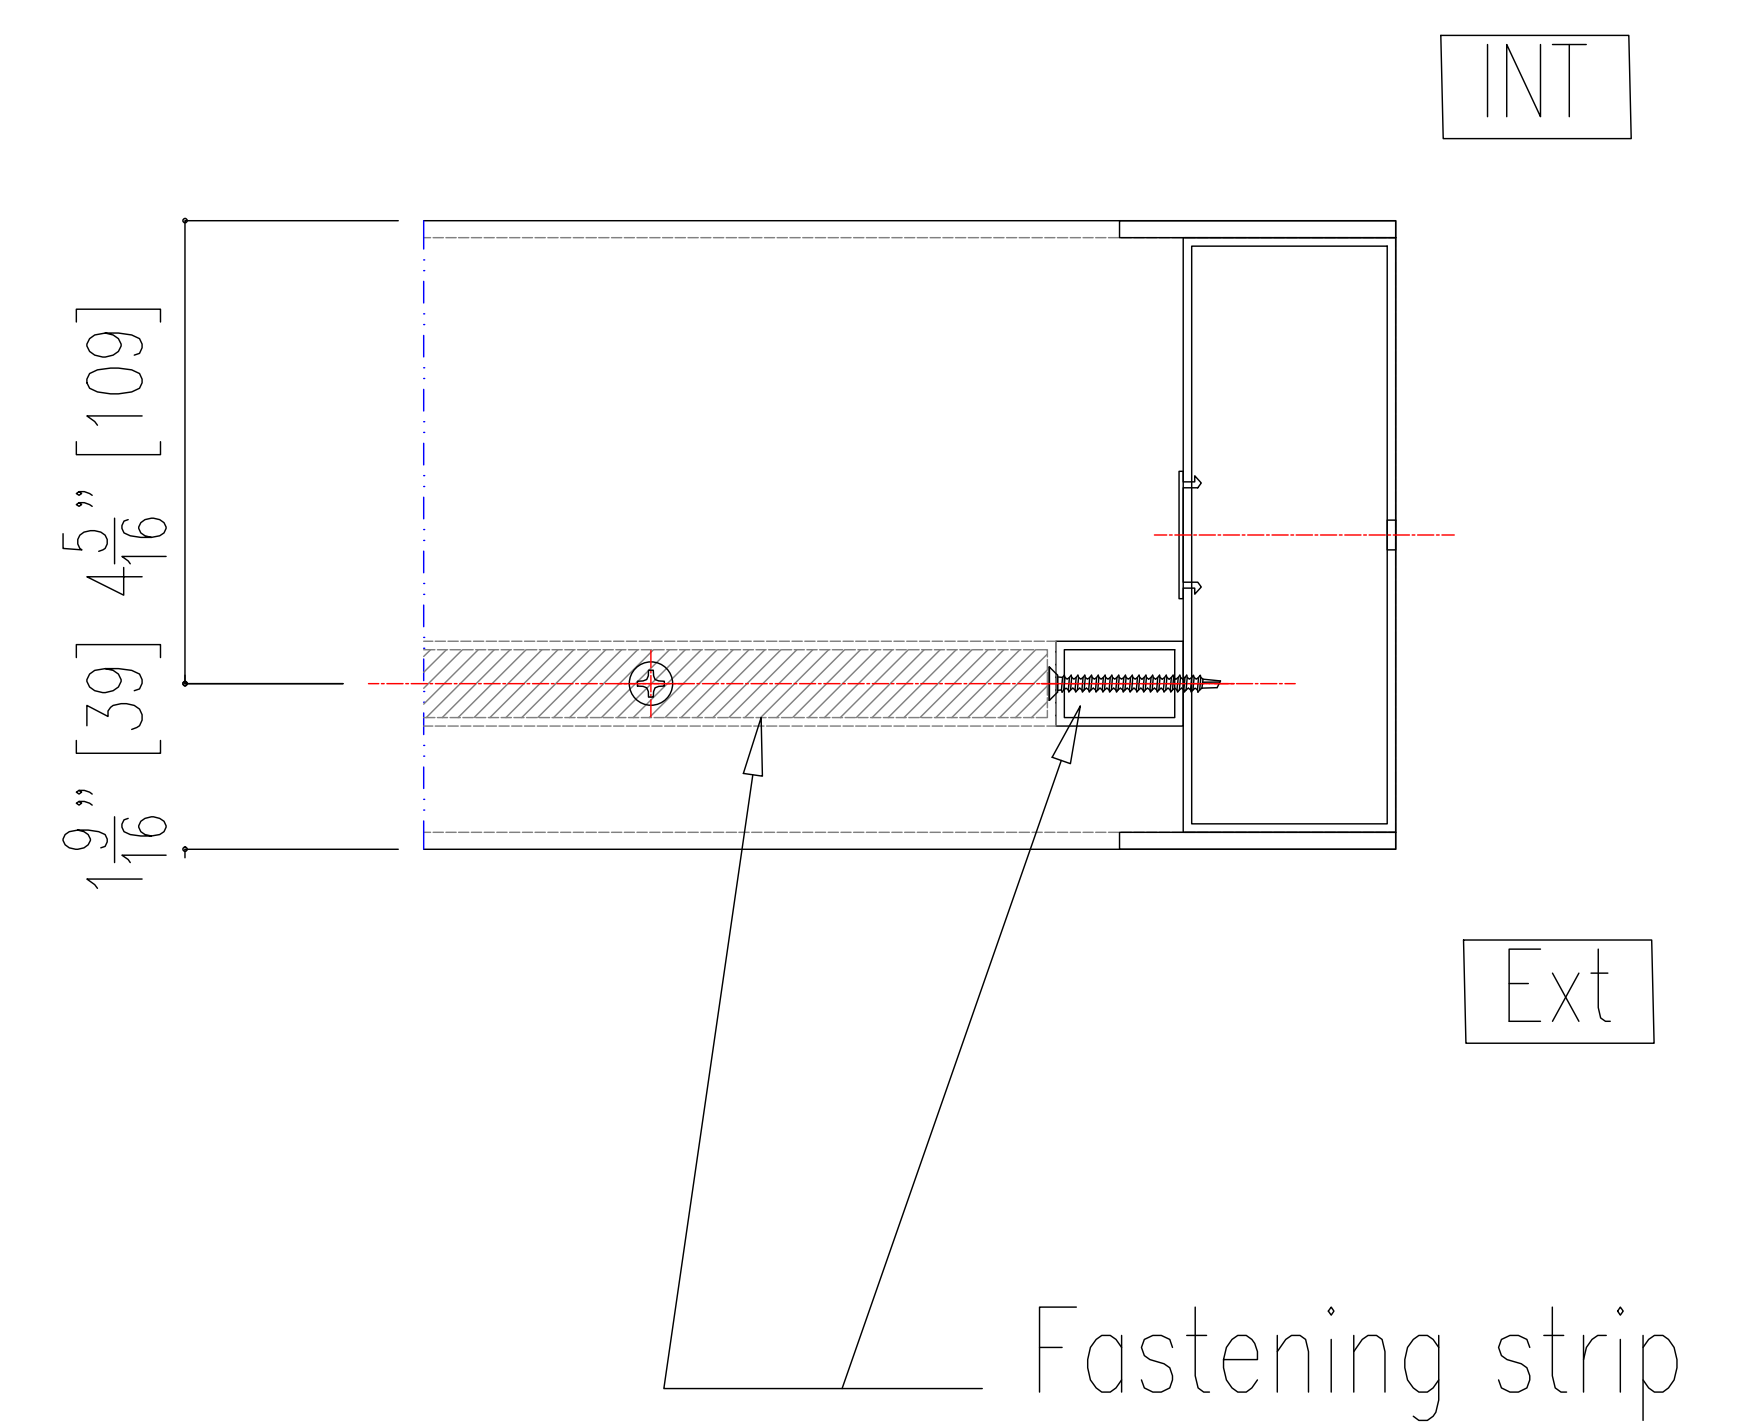


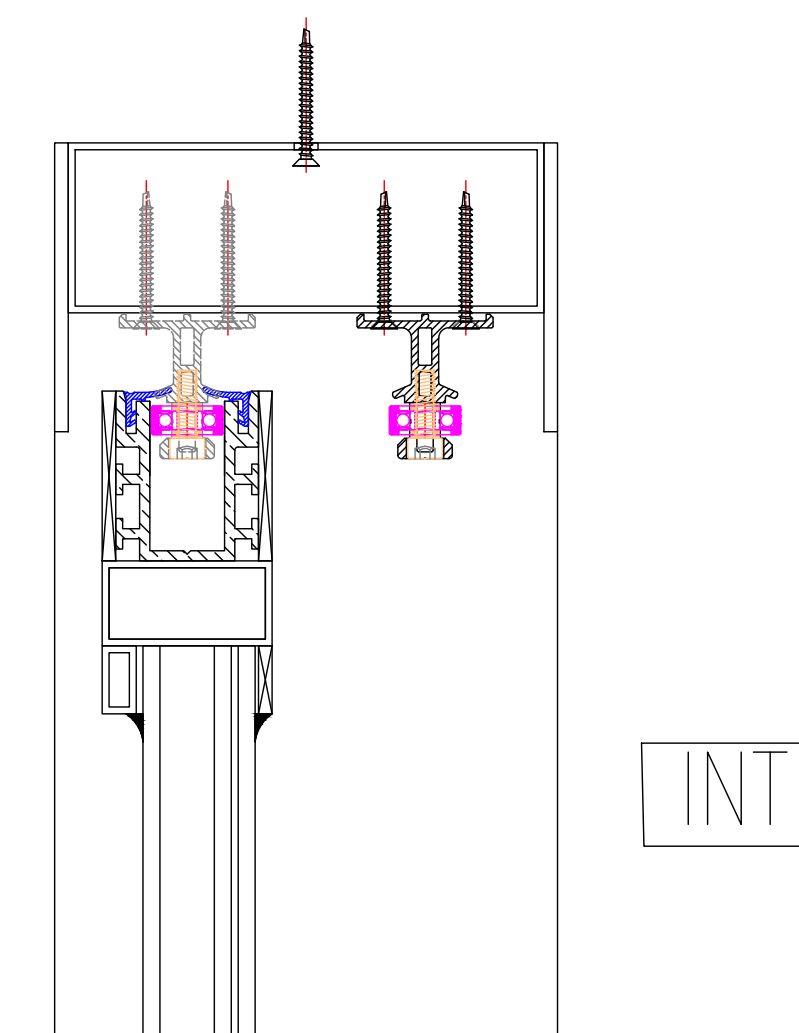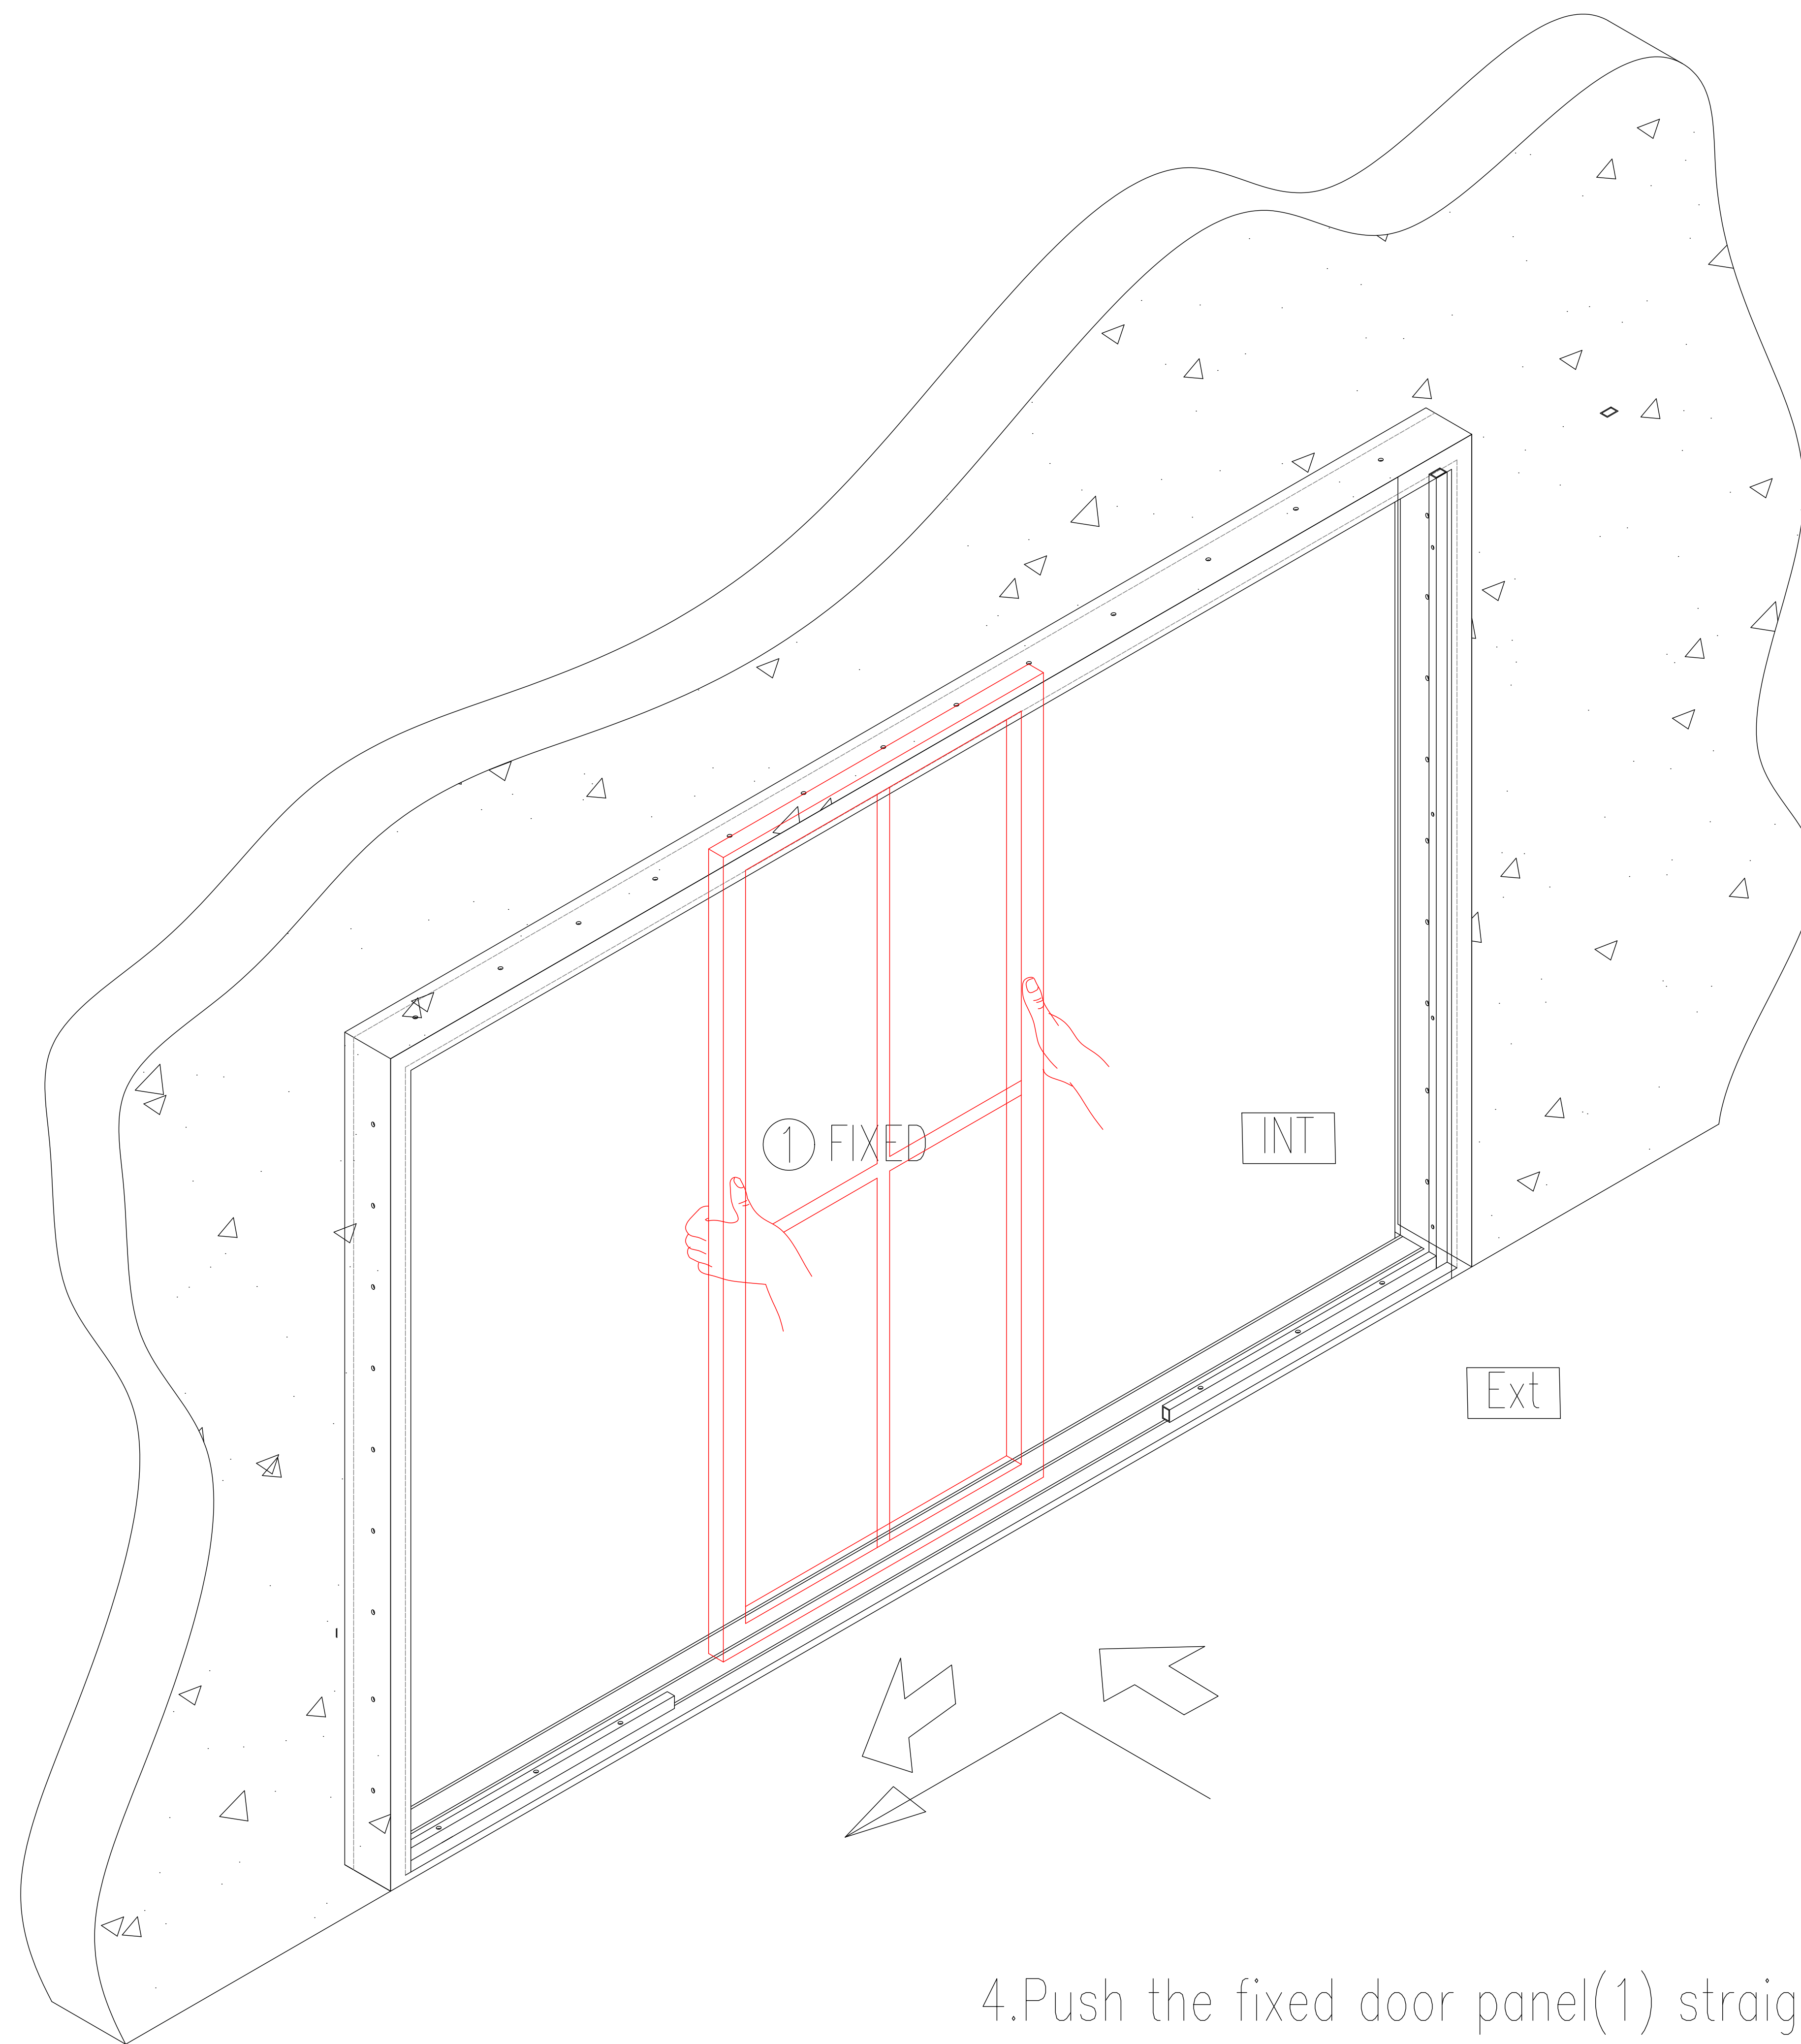


4. Push the fixed door panel(1) straight into the middle of the frame, then slide it toward the edge.

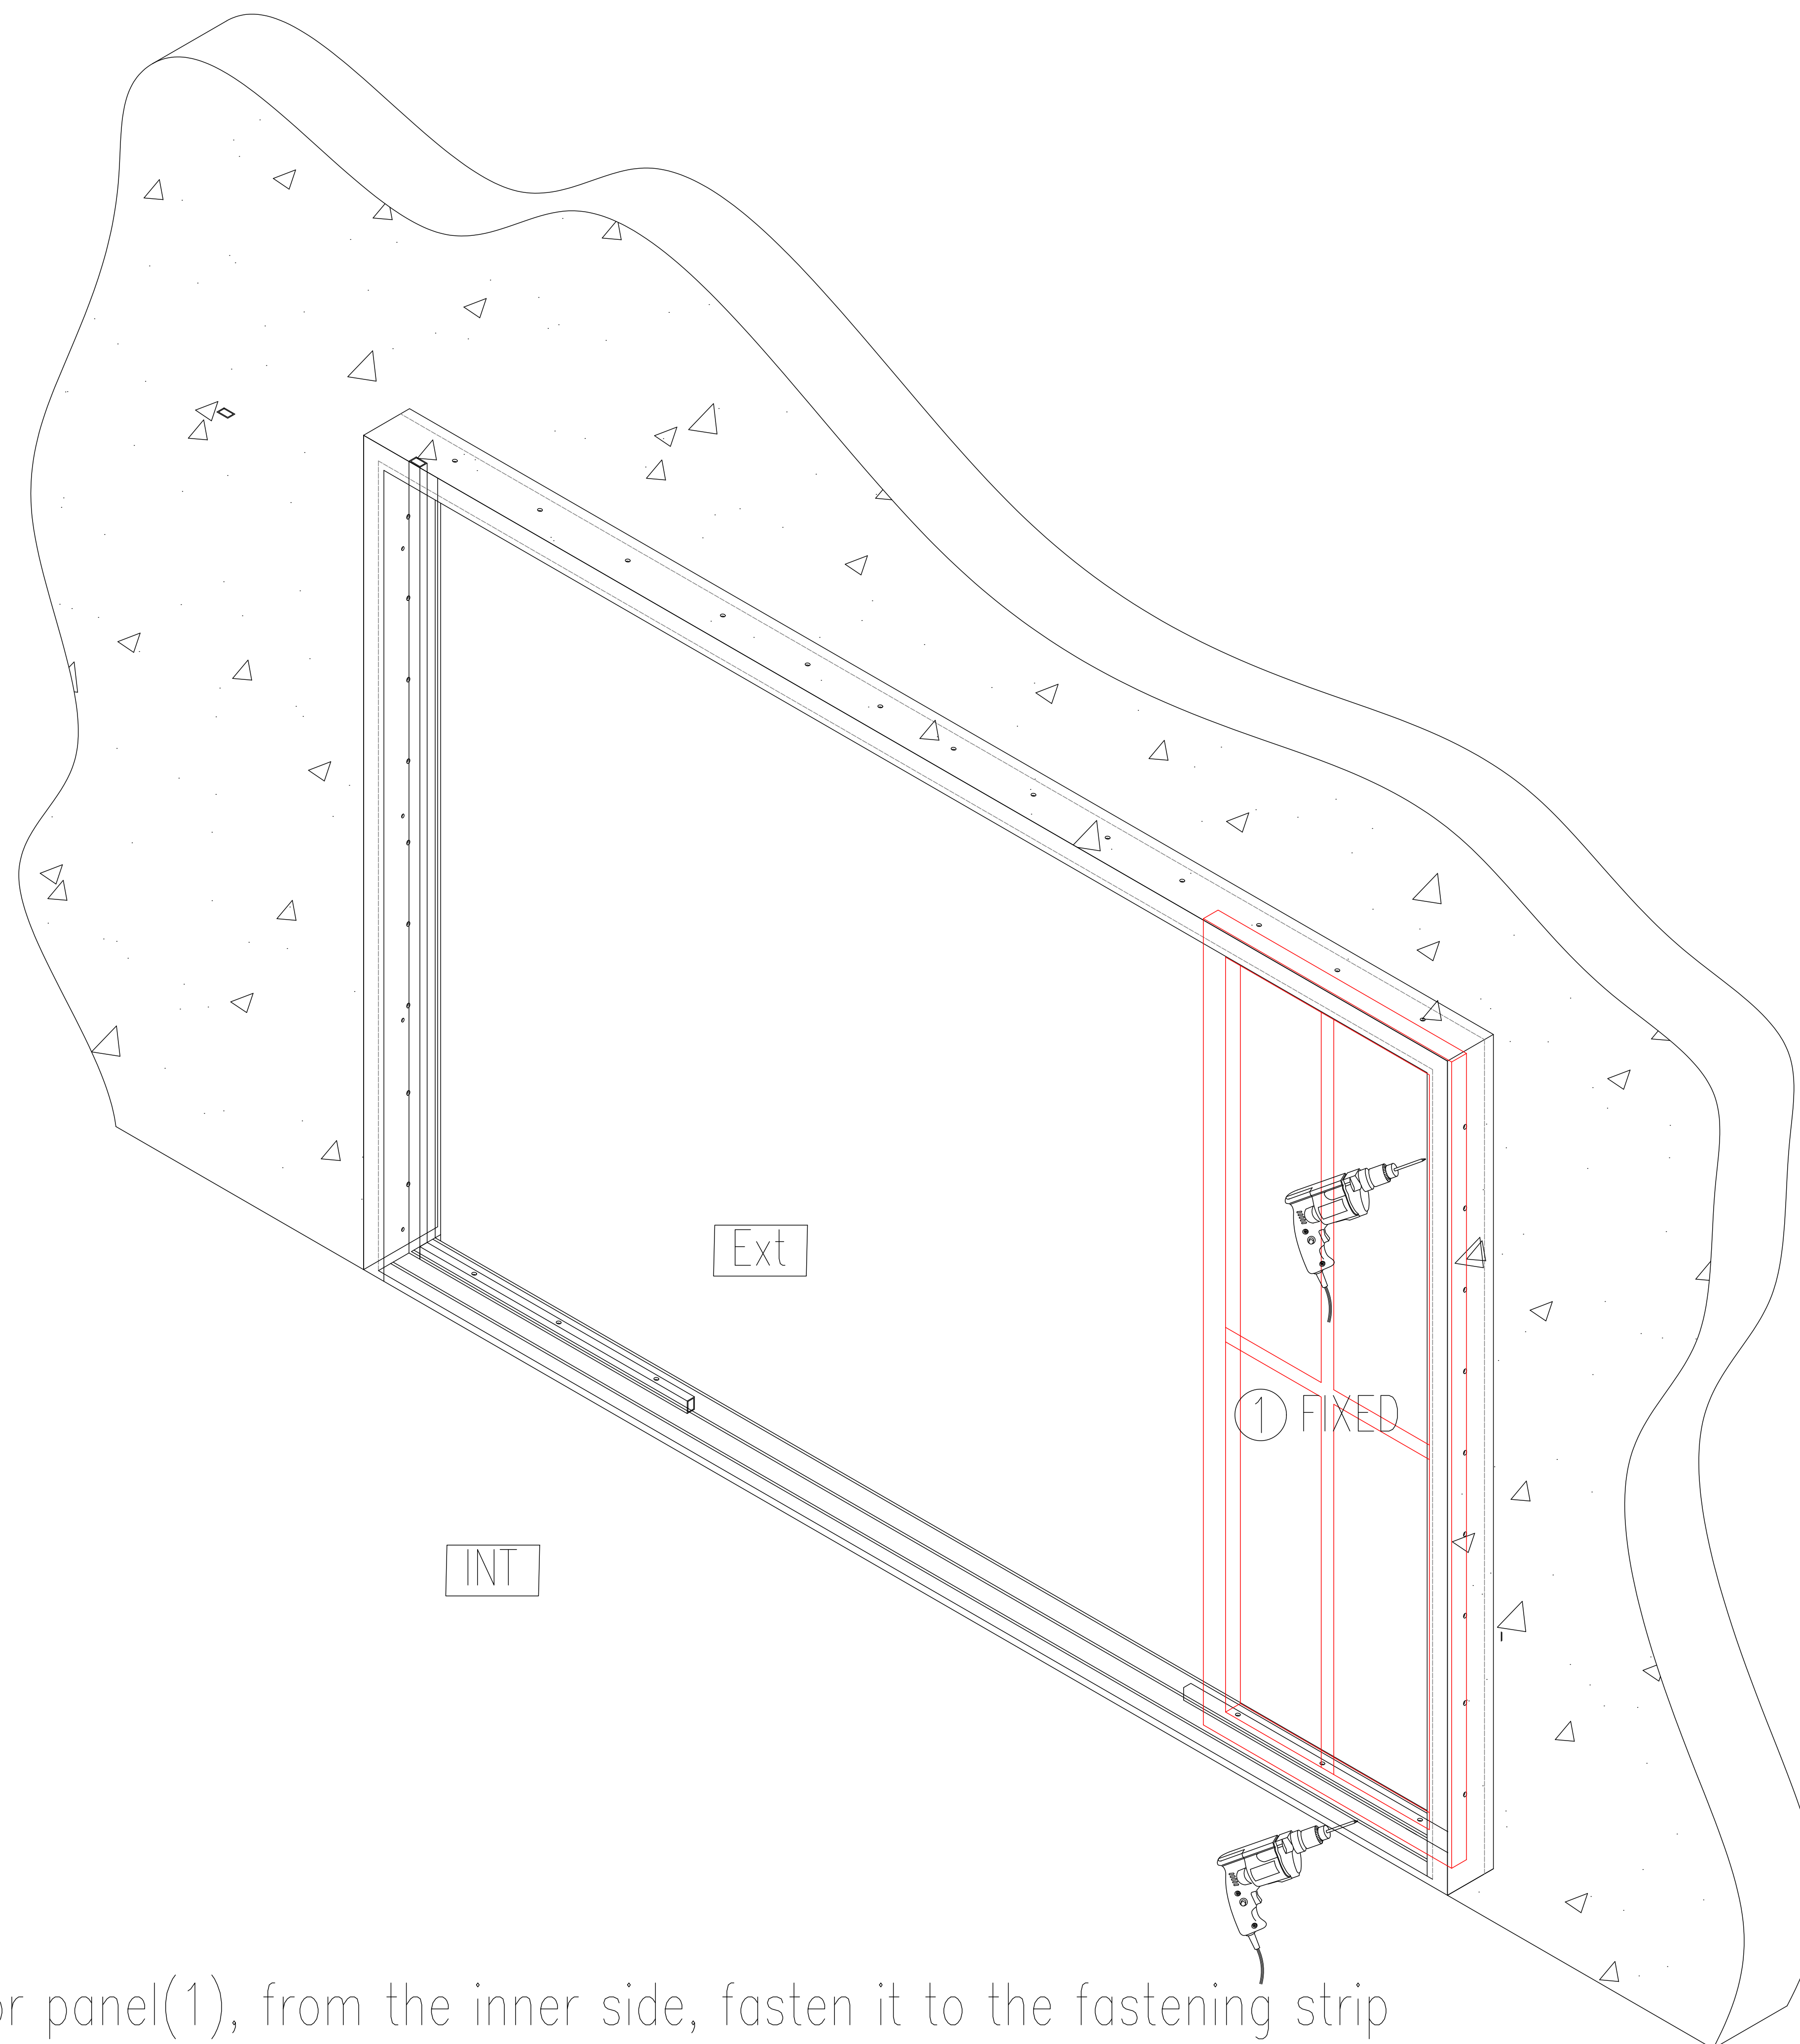


5. Secure the fixed door panel(1), from the inner side, fasten it to the fastening strip with screws.

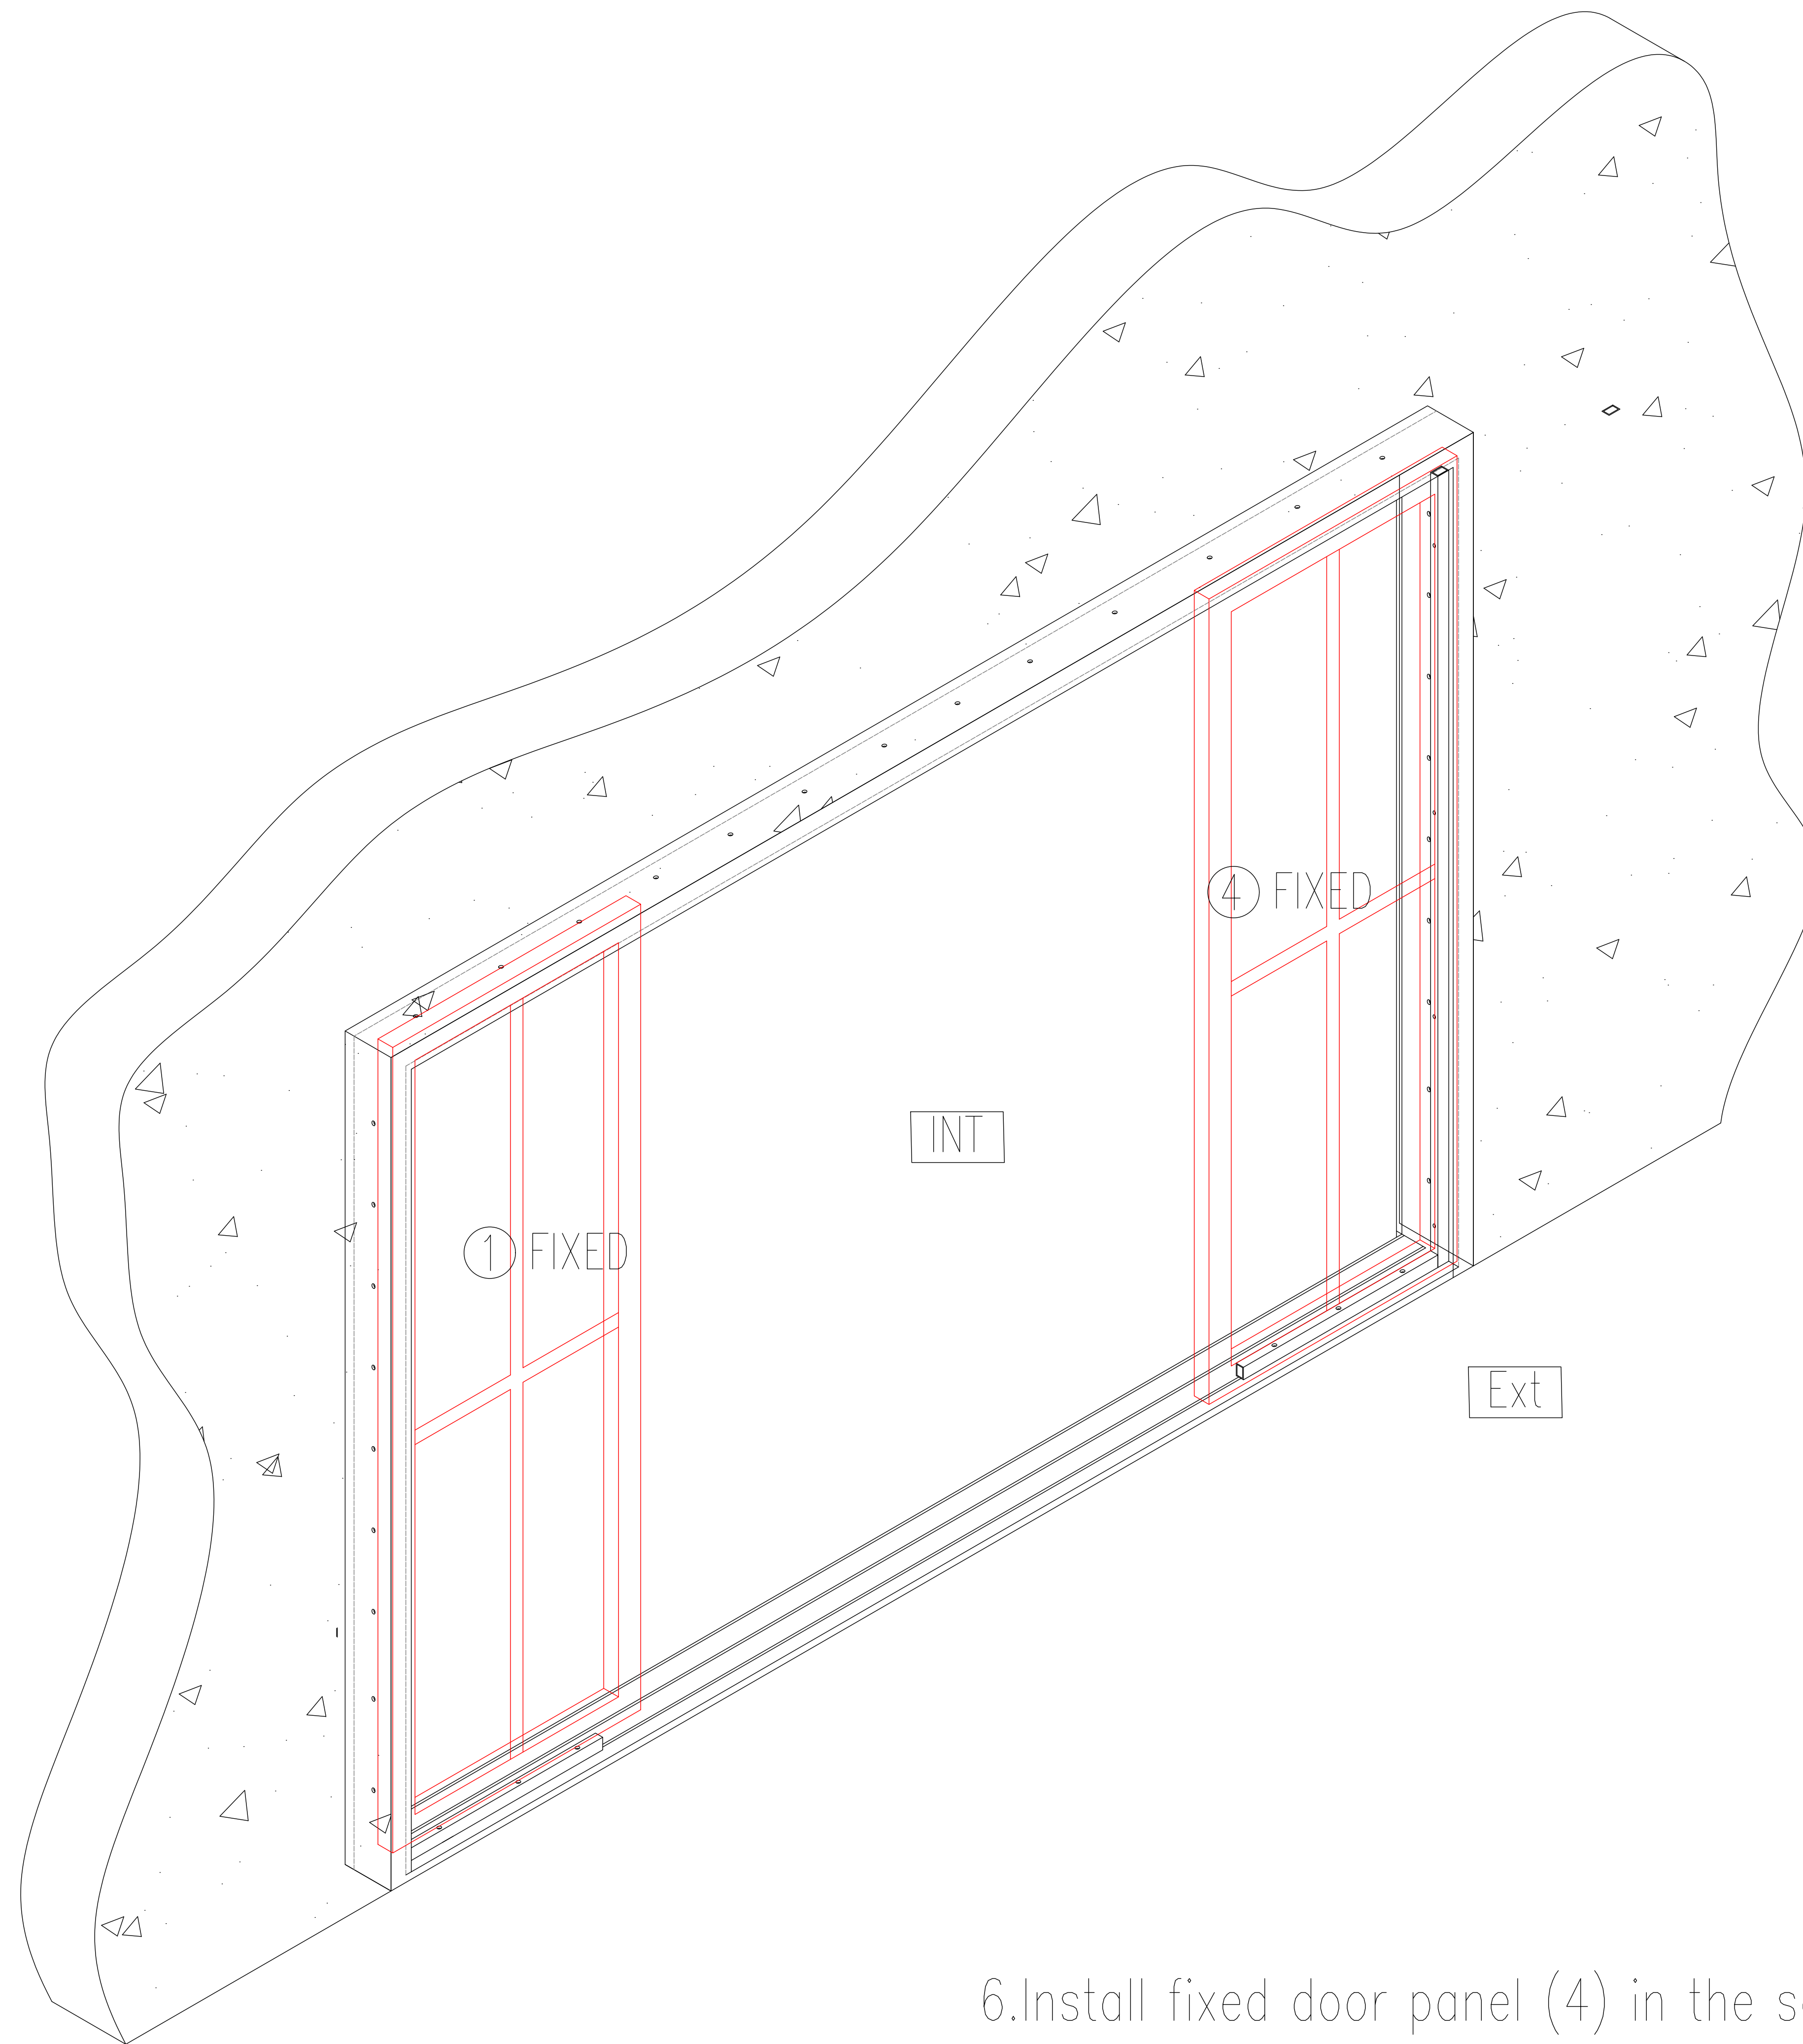


6.Install fixed door panel (4) in the same way as fixed door panel (1).


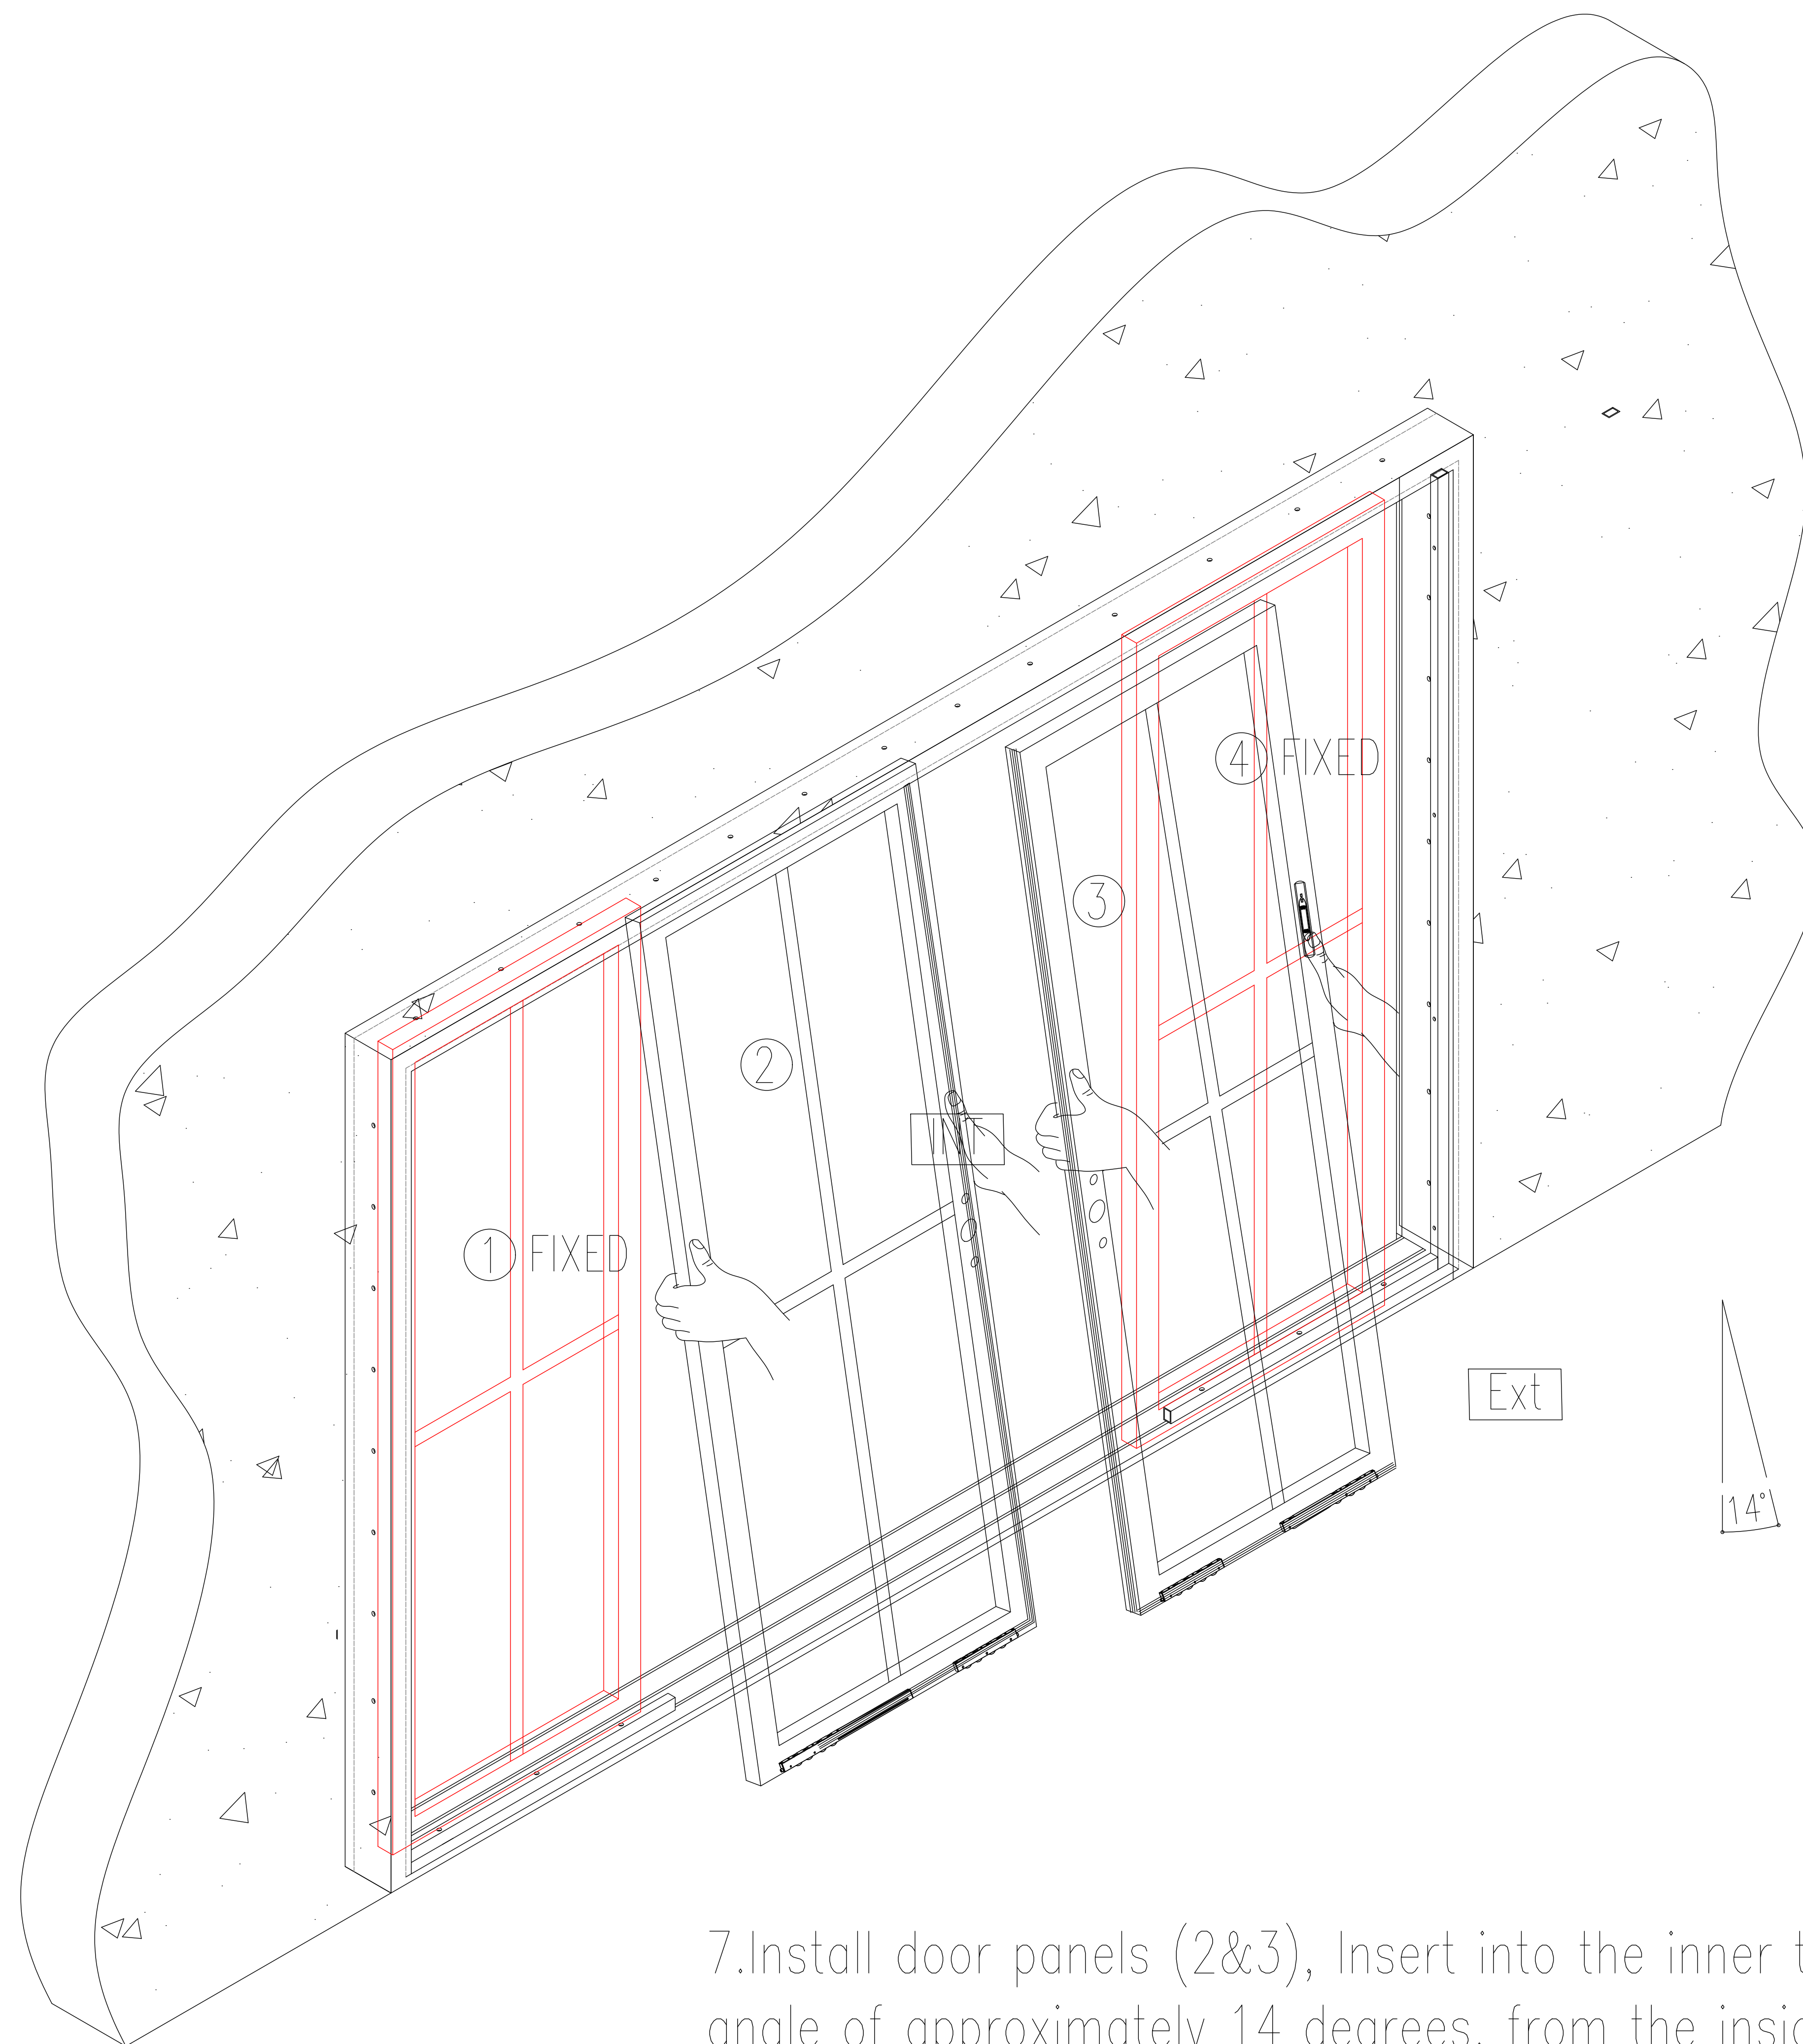


7. Install door panels (2&3), Insert into the inner track from the top at an angle of approximately 14 degrees, from the inside out.


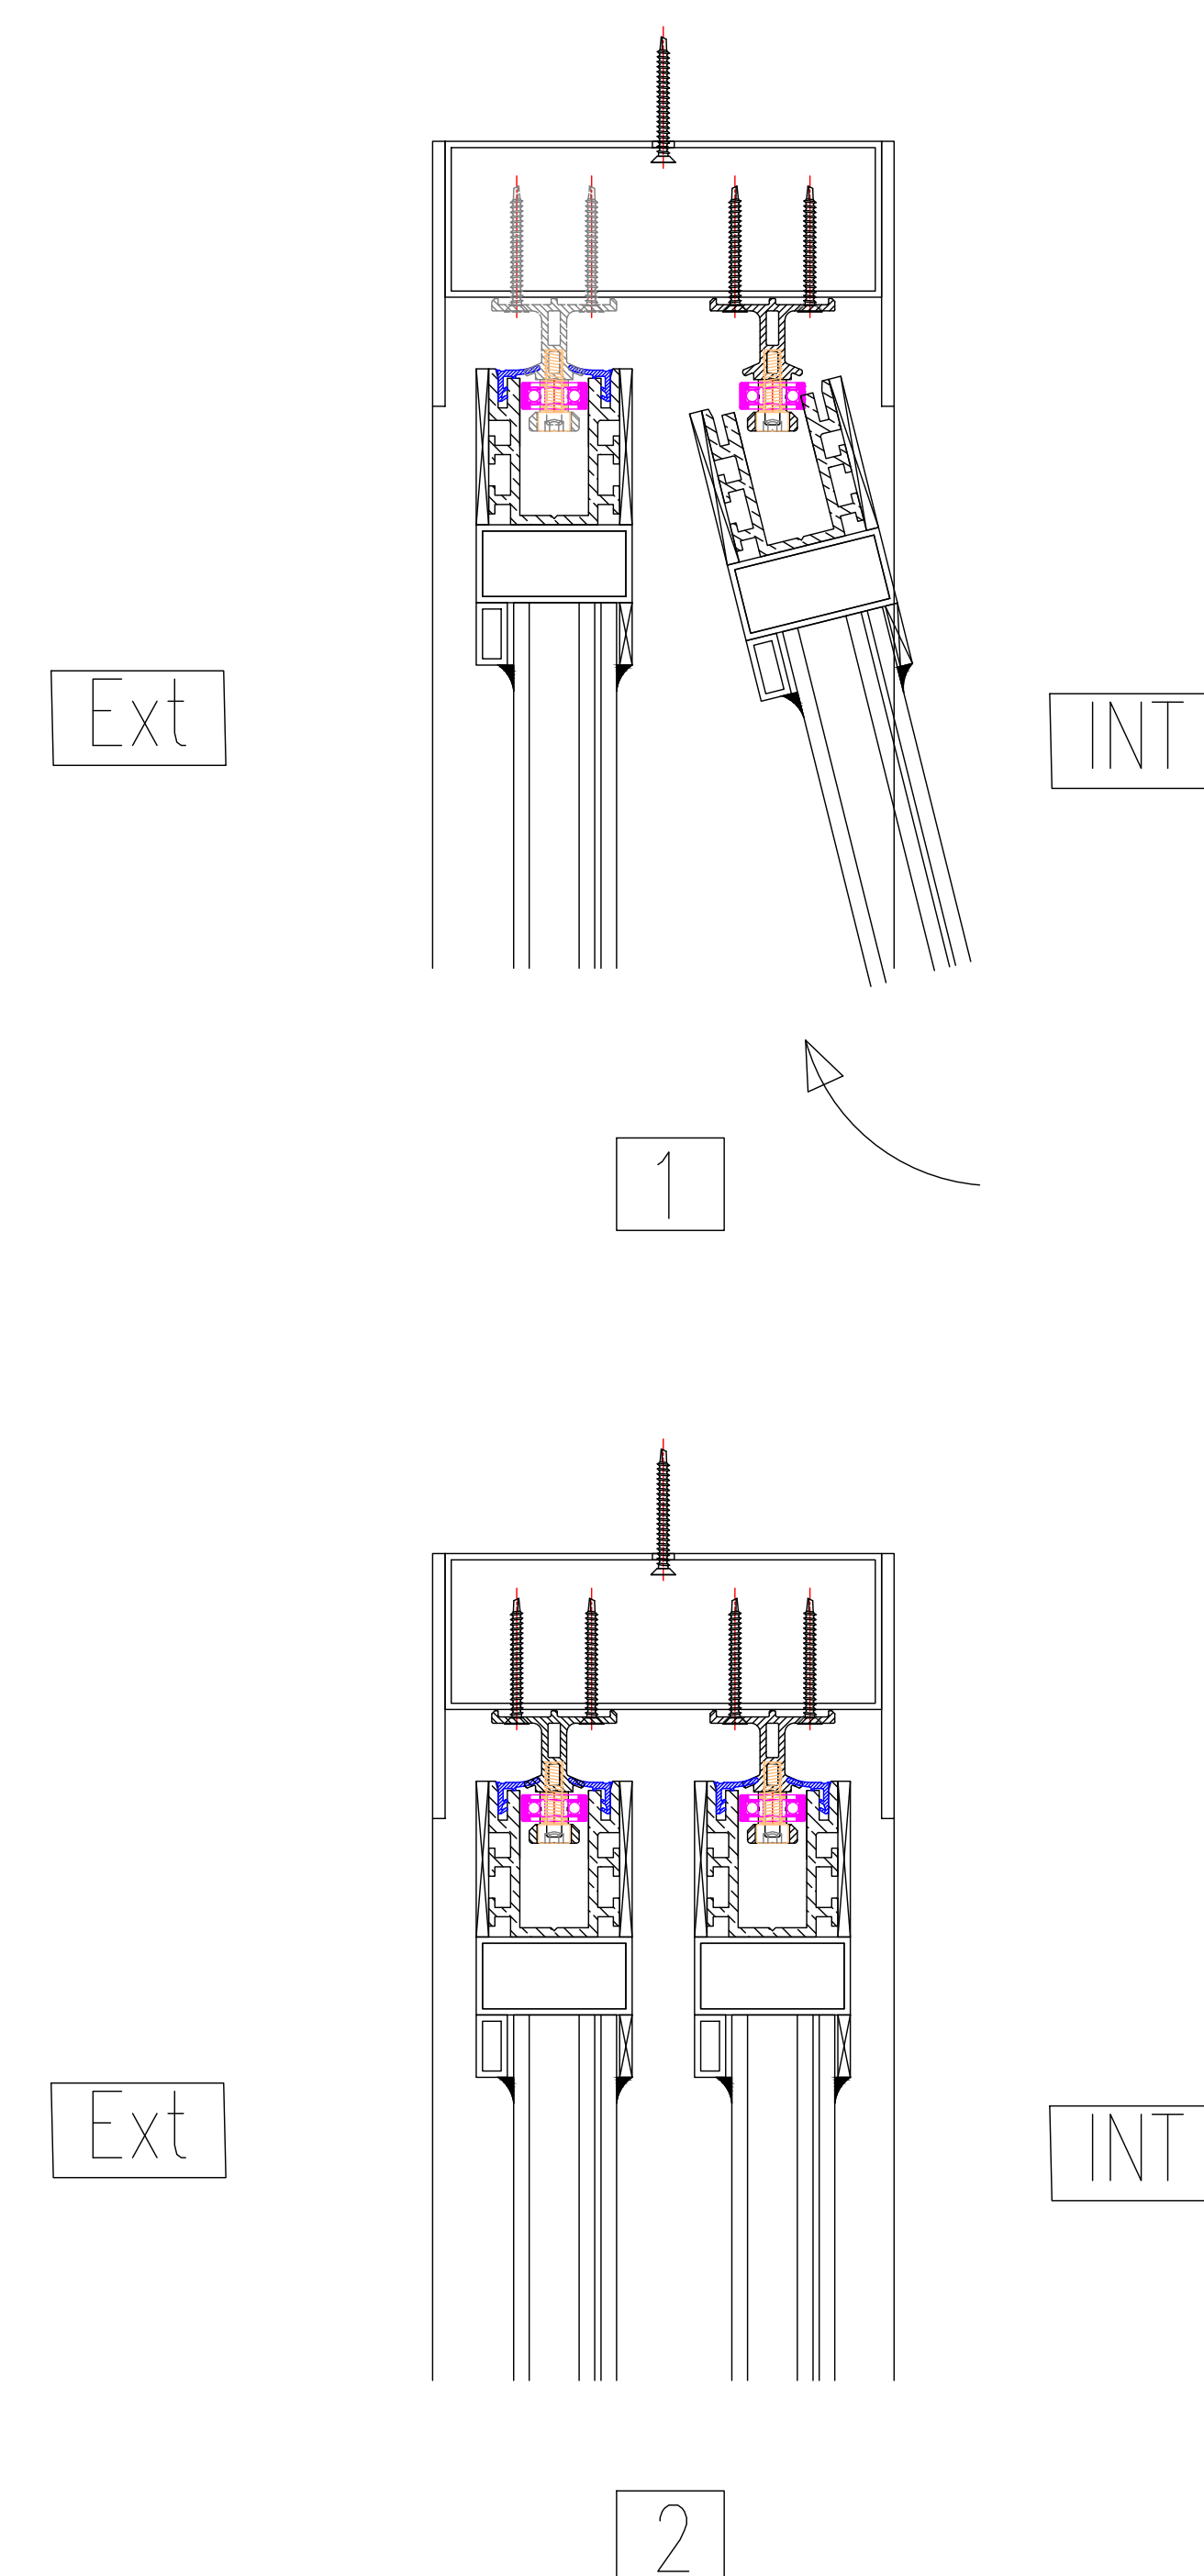


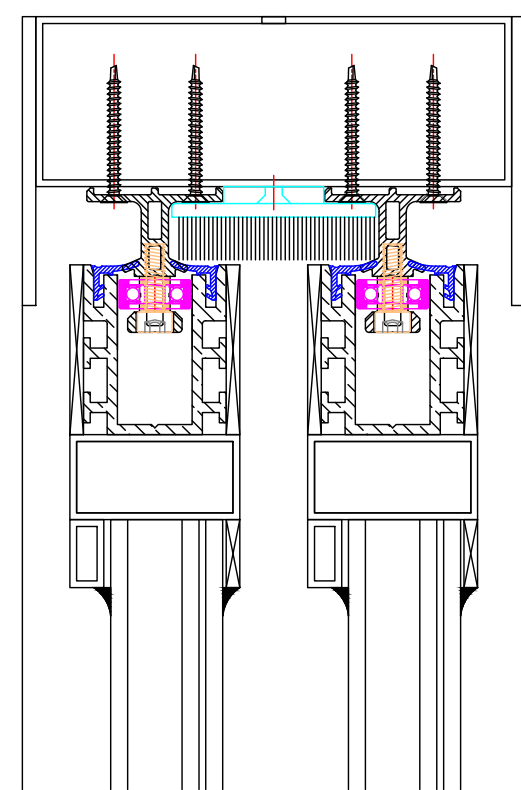

install seal strip

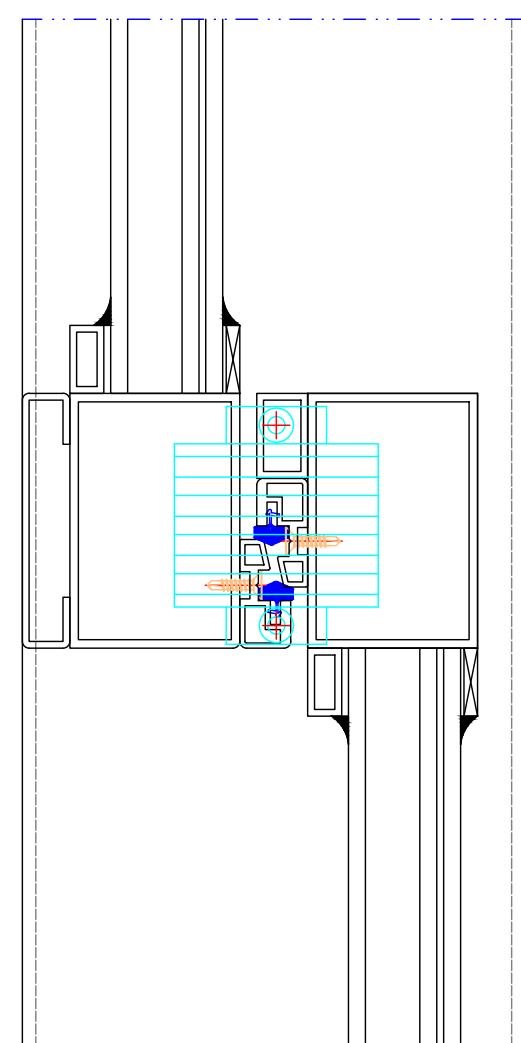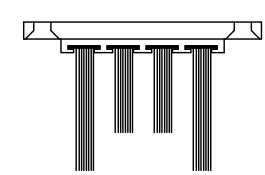

install positioning block

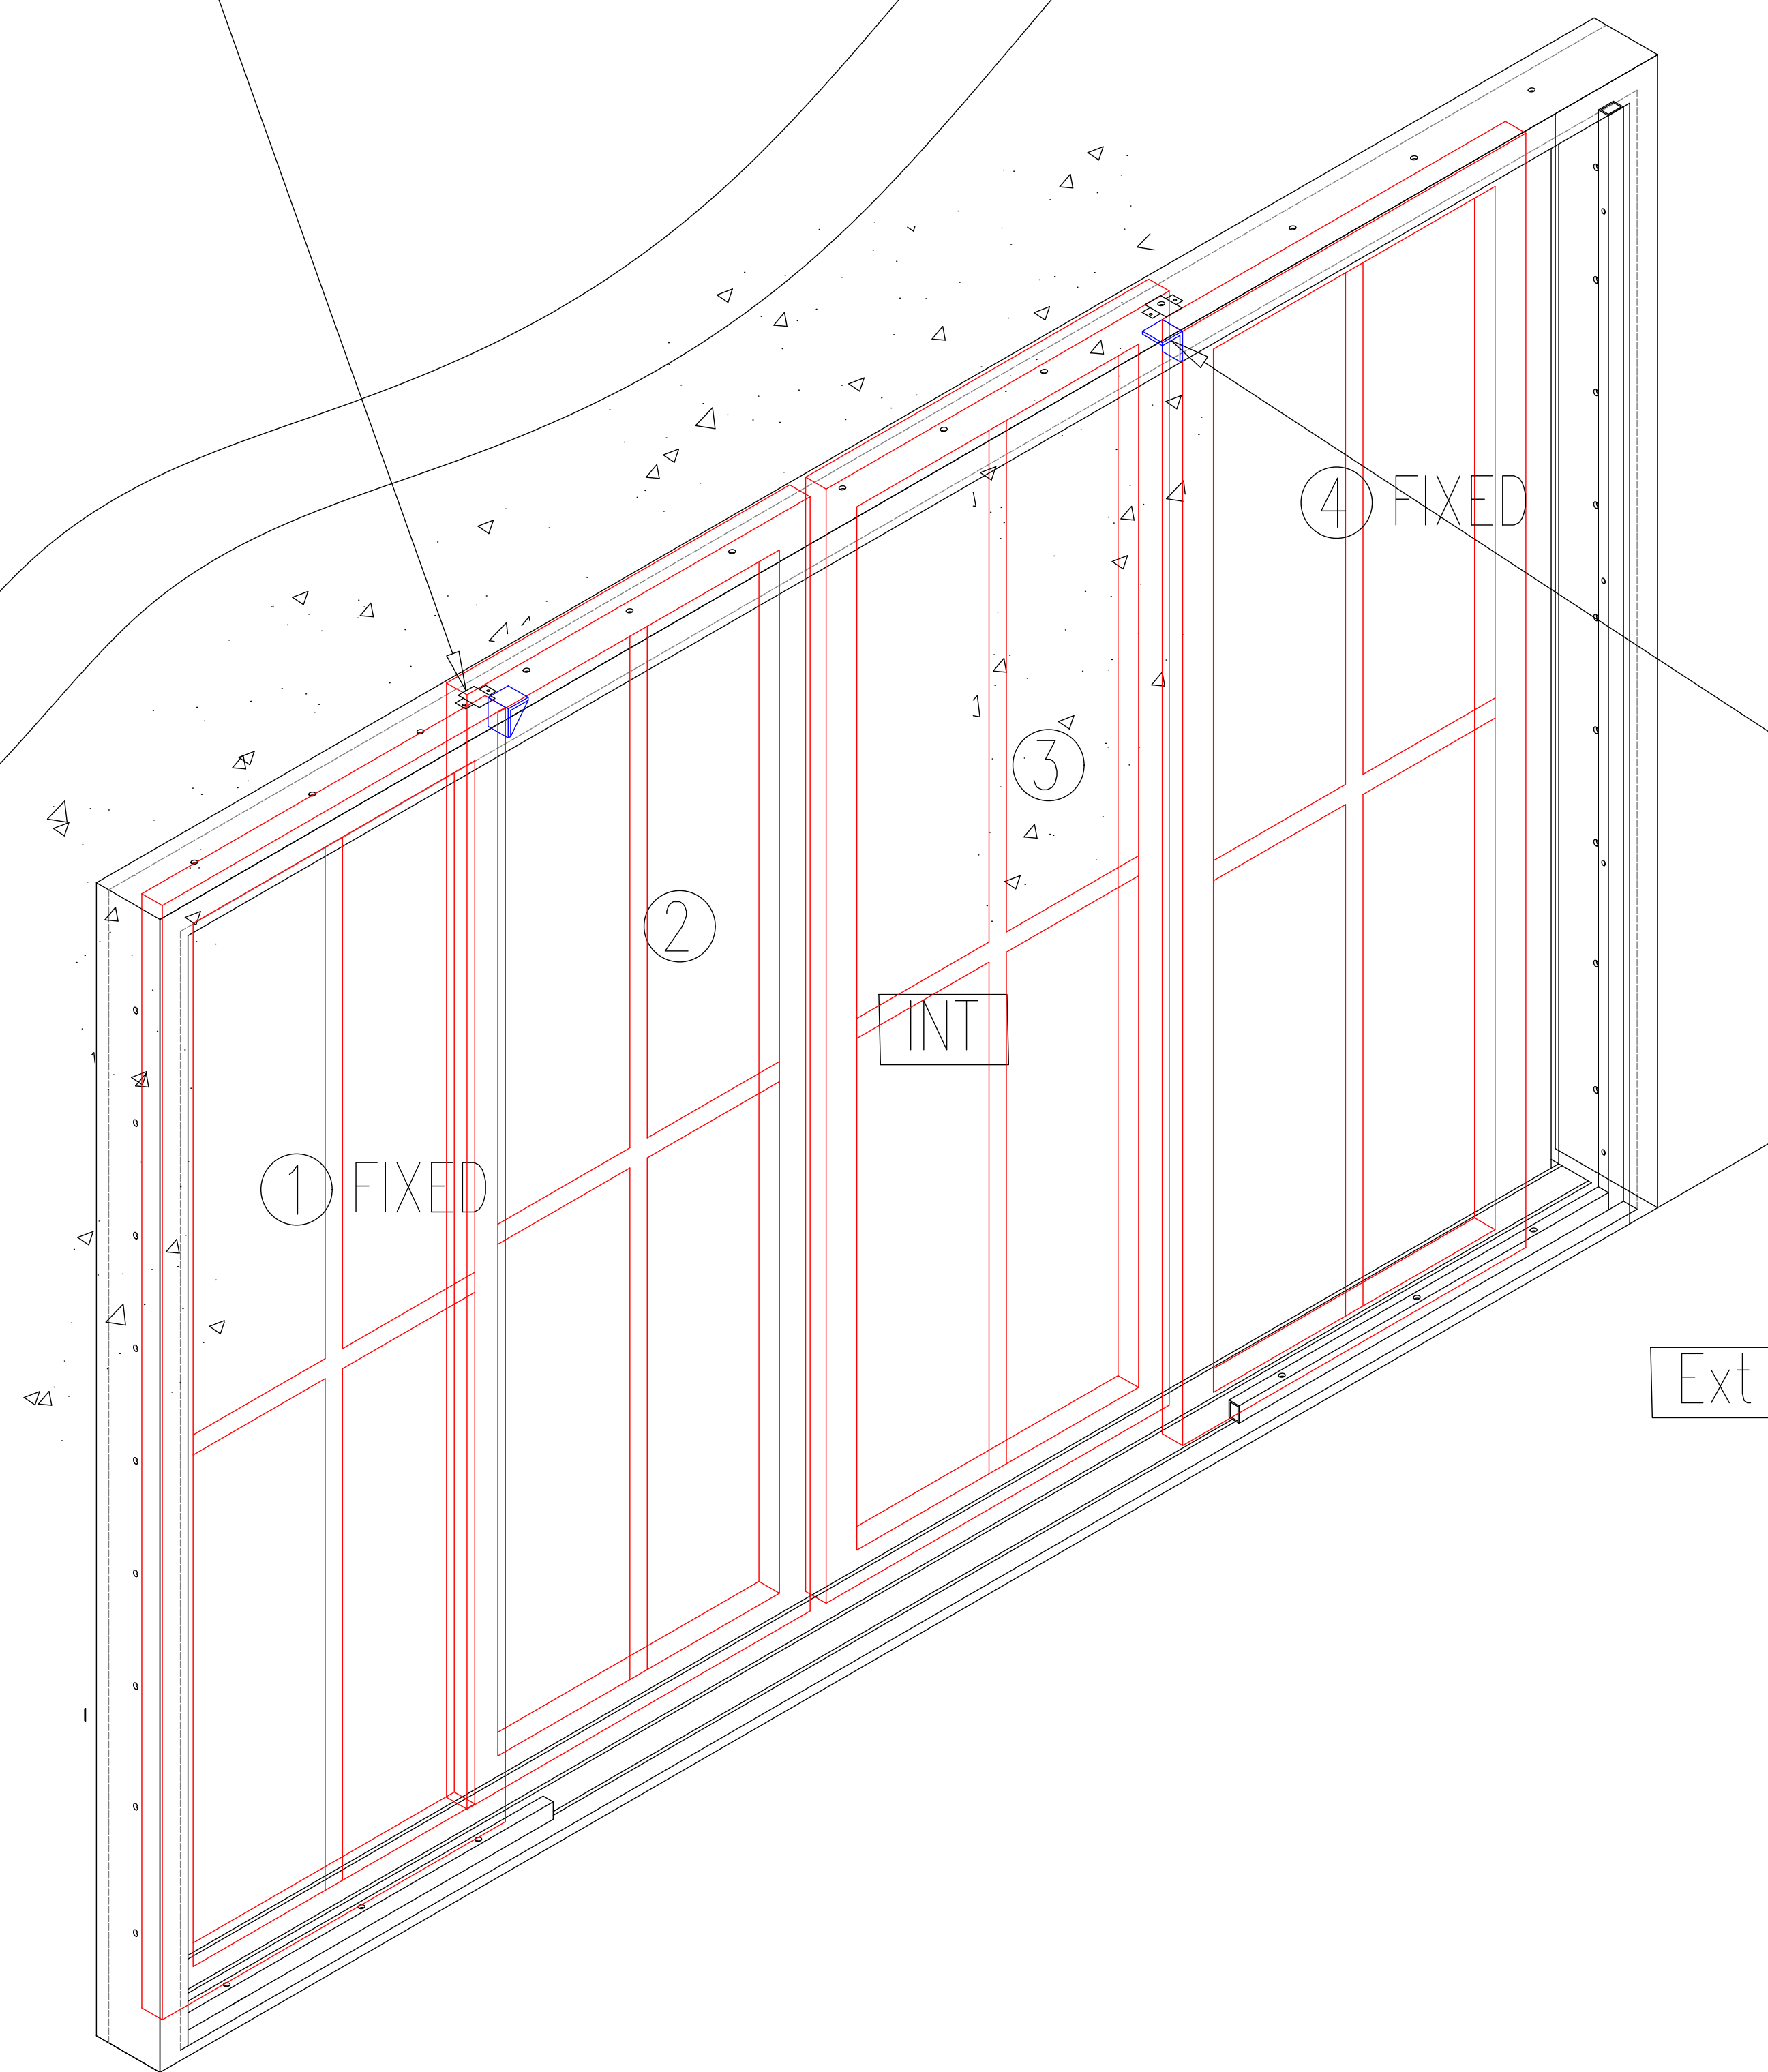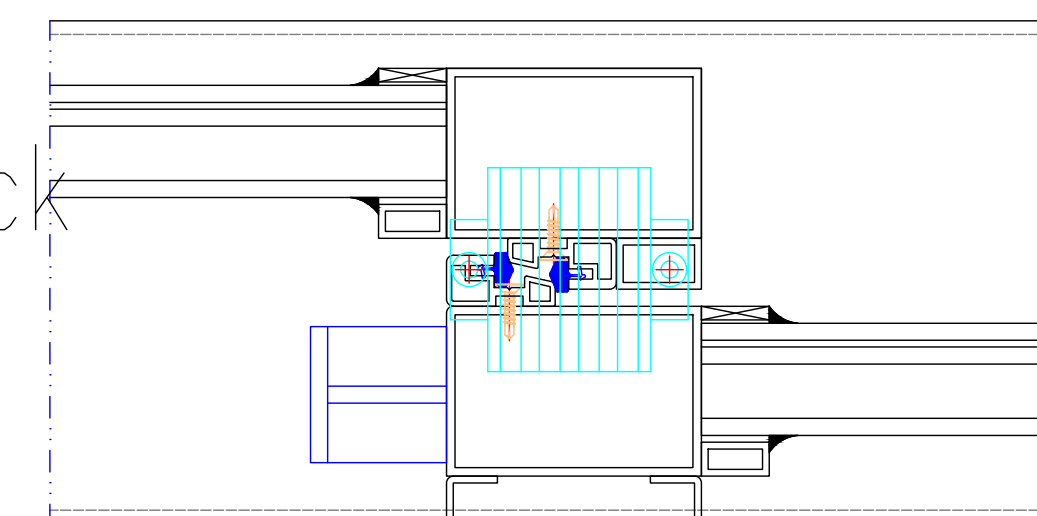

8. Install the accessories.