

W32

ED19

W33

Inside




Complete Installation of Window Frames.
Ensure with a laser level both frames
are at a perfect 90 degree angle.

STEP 1


W32

ED19

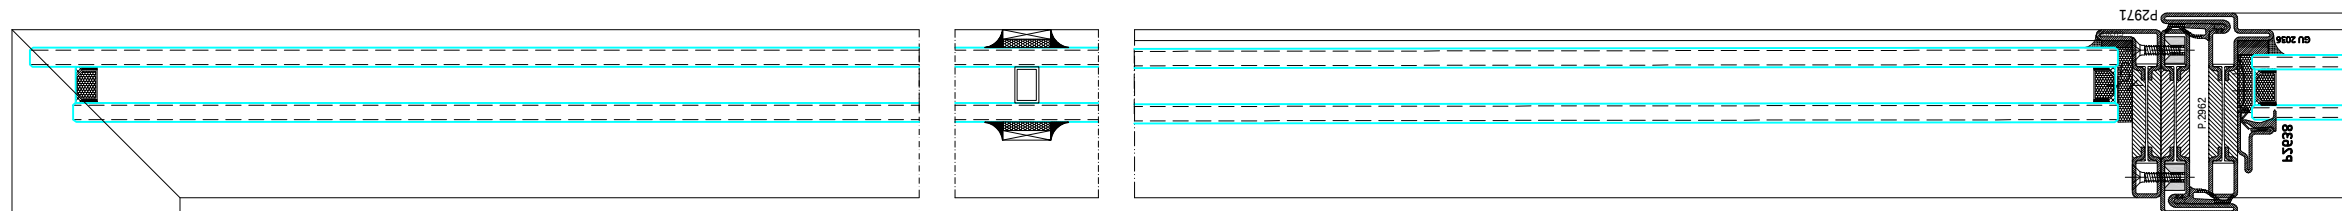

W33


Inside

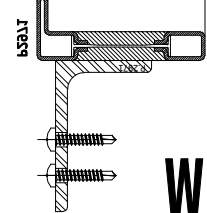

WALL

Install Glass into First Window Frame


STEP 2

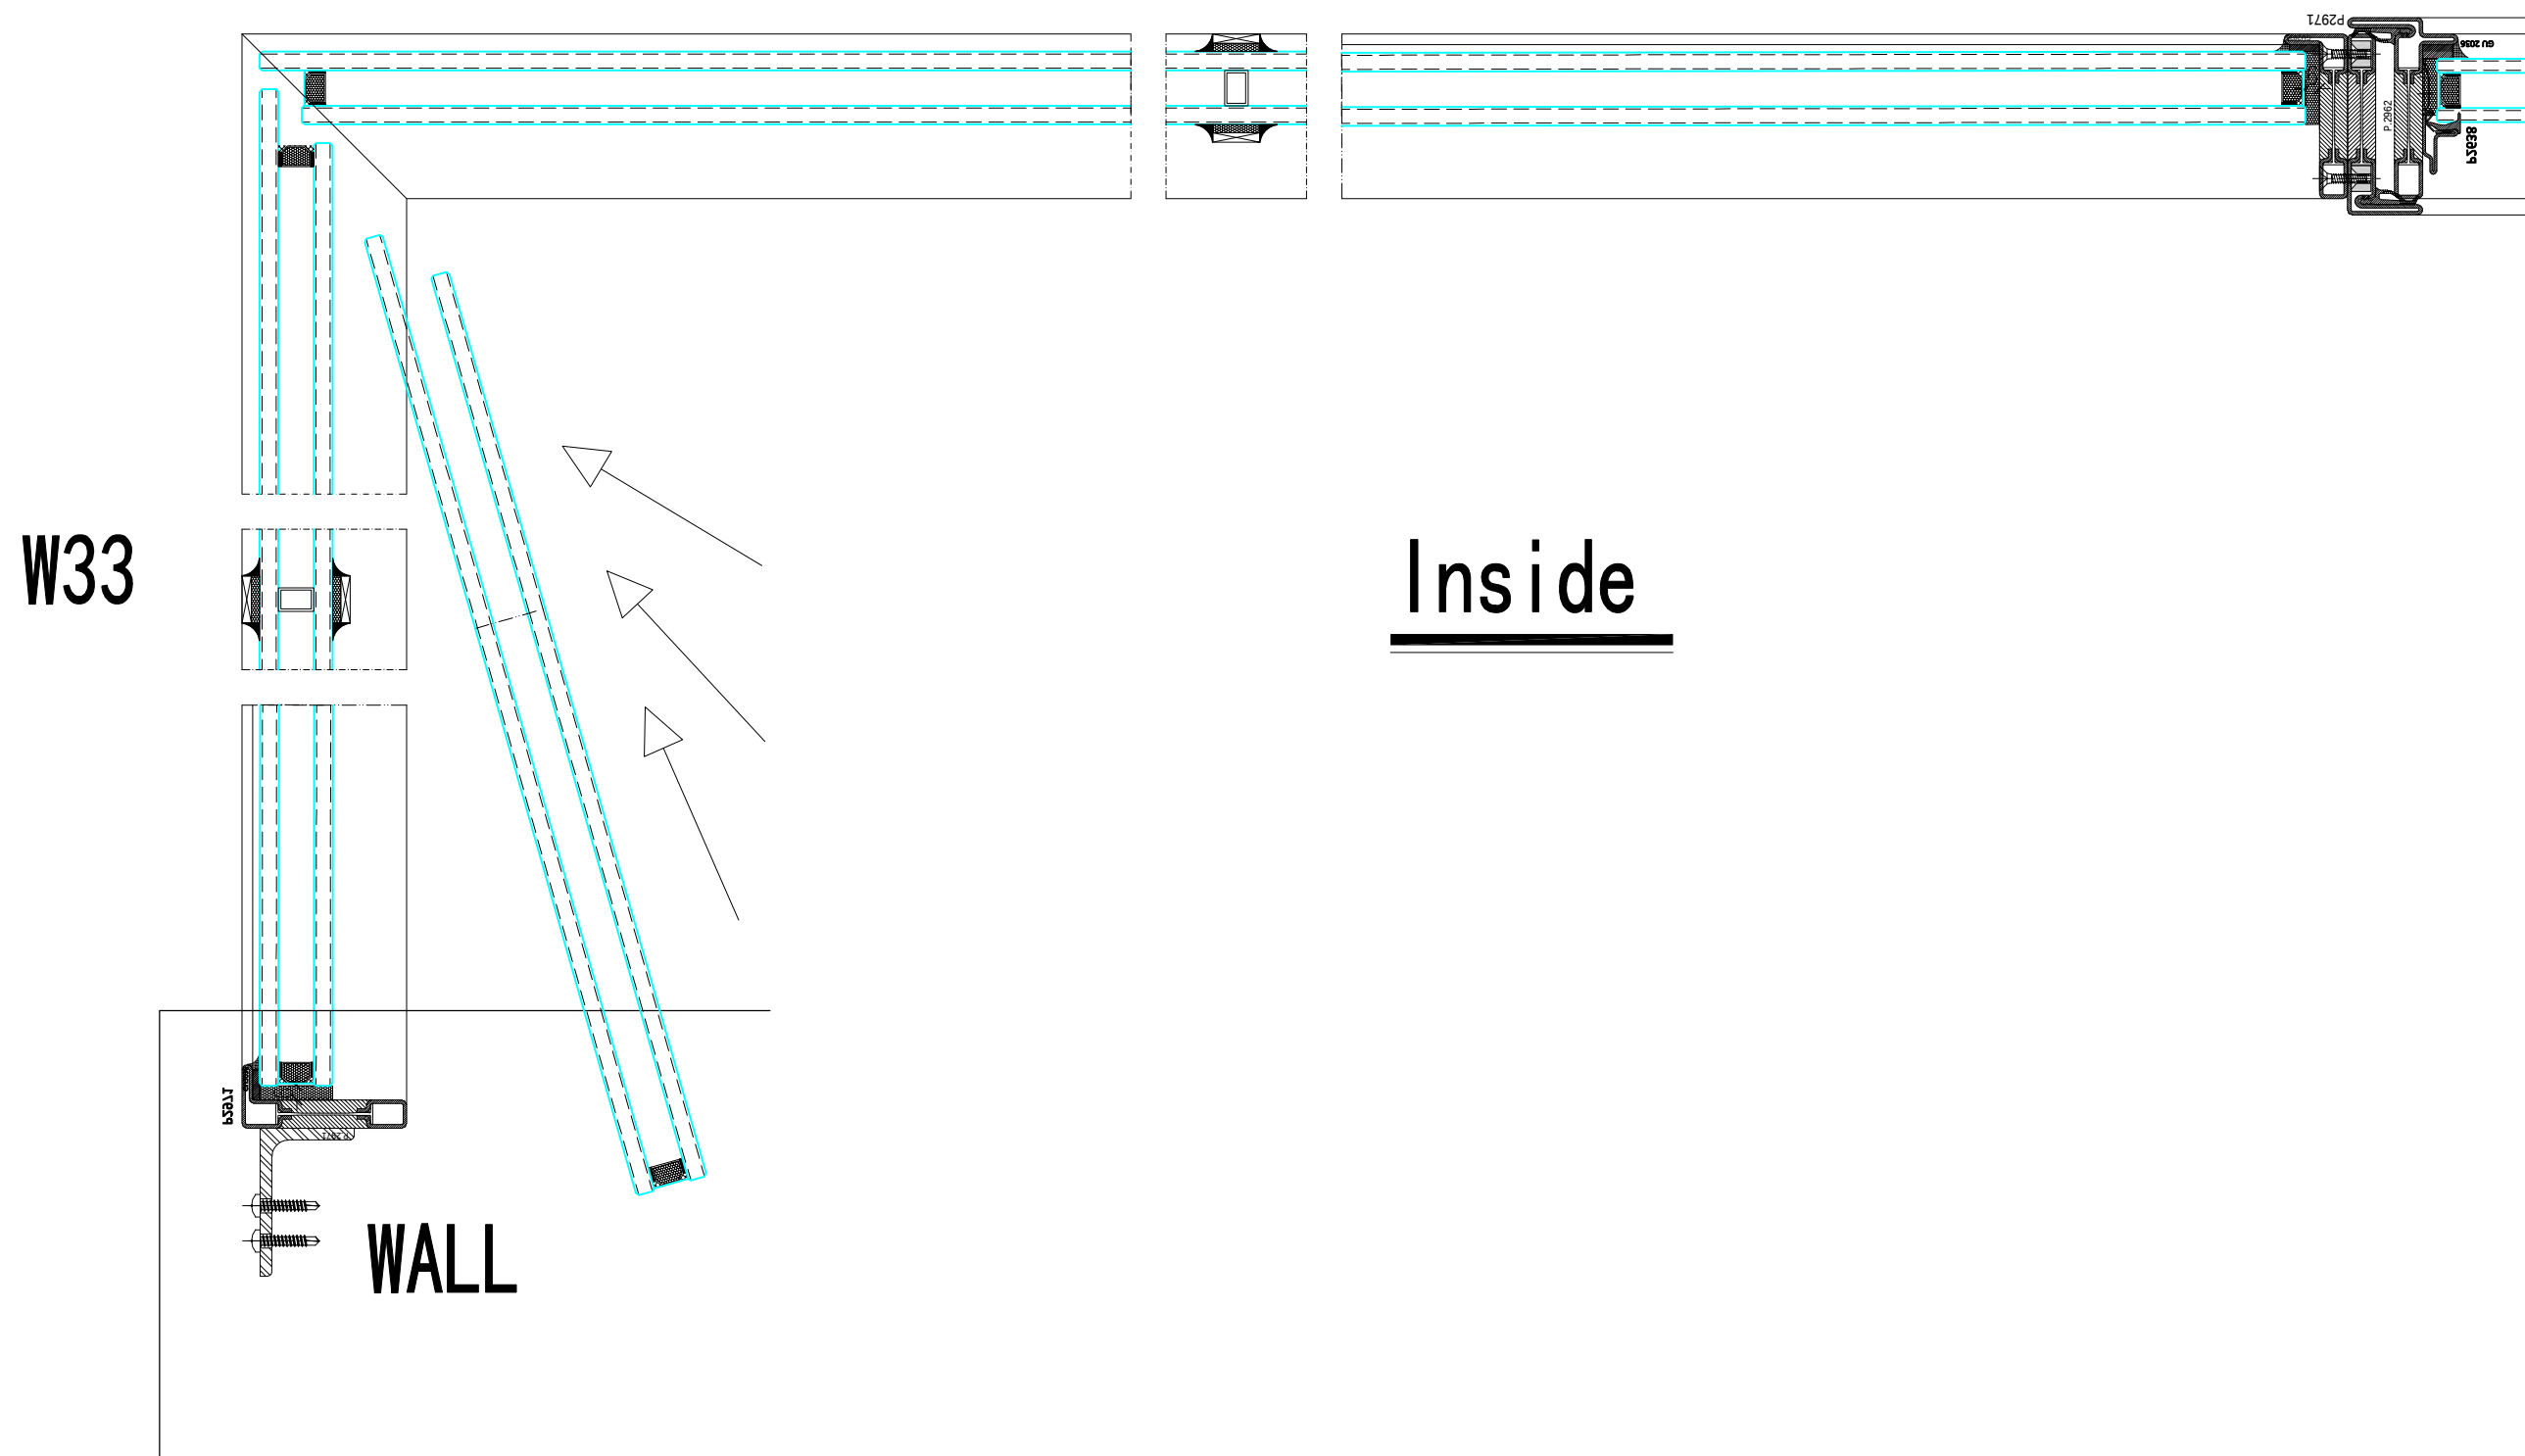


Install Glass into Second Window Frame, Keeping Glass Panel at an Angle to Interlock the Offset Glass Pieces and create a Seal.

W32


ED19

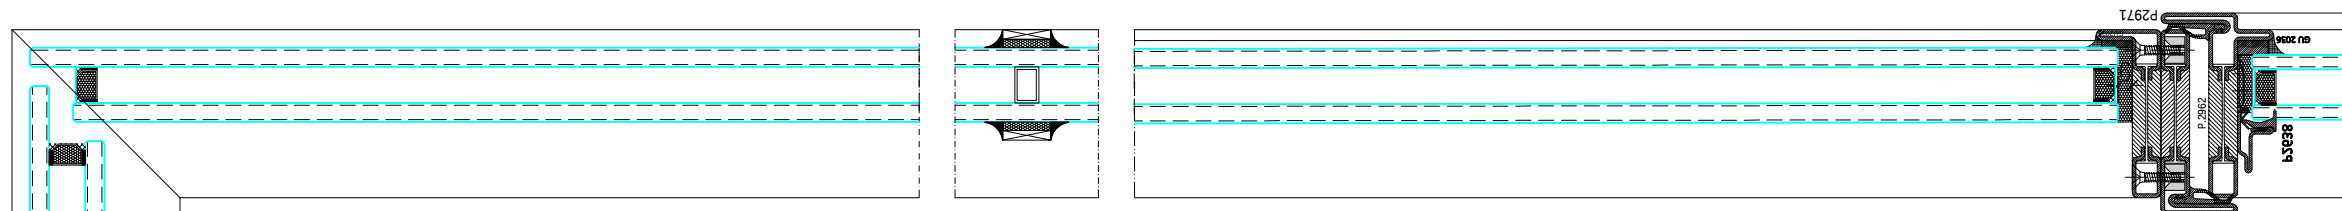

W33

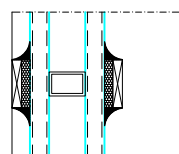



Inside

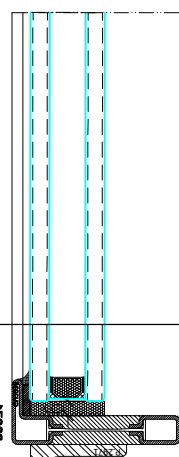

WALL

Use Laser to Ensure Both Glass
Panels are Installed at Exactly
90 Degrees.

STEP 4

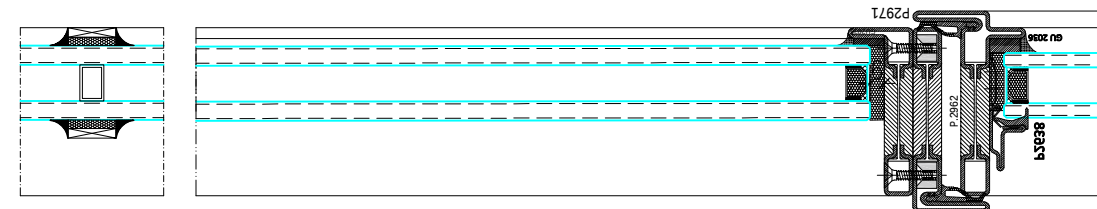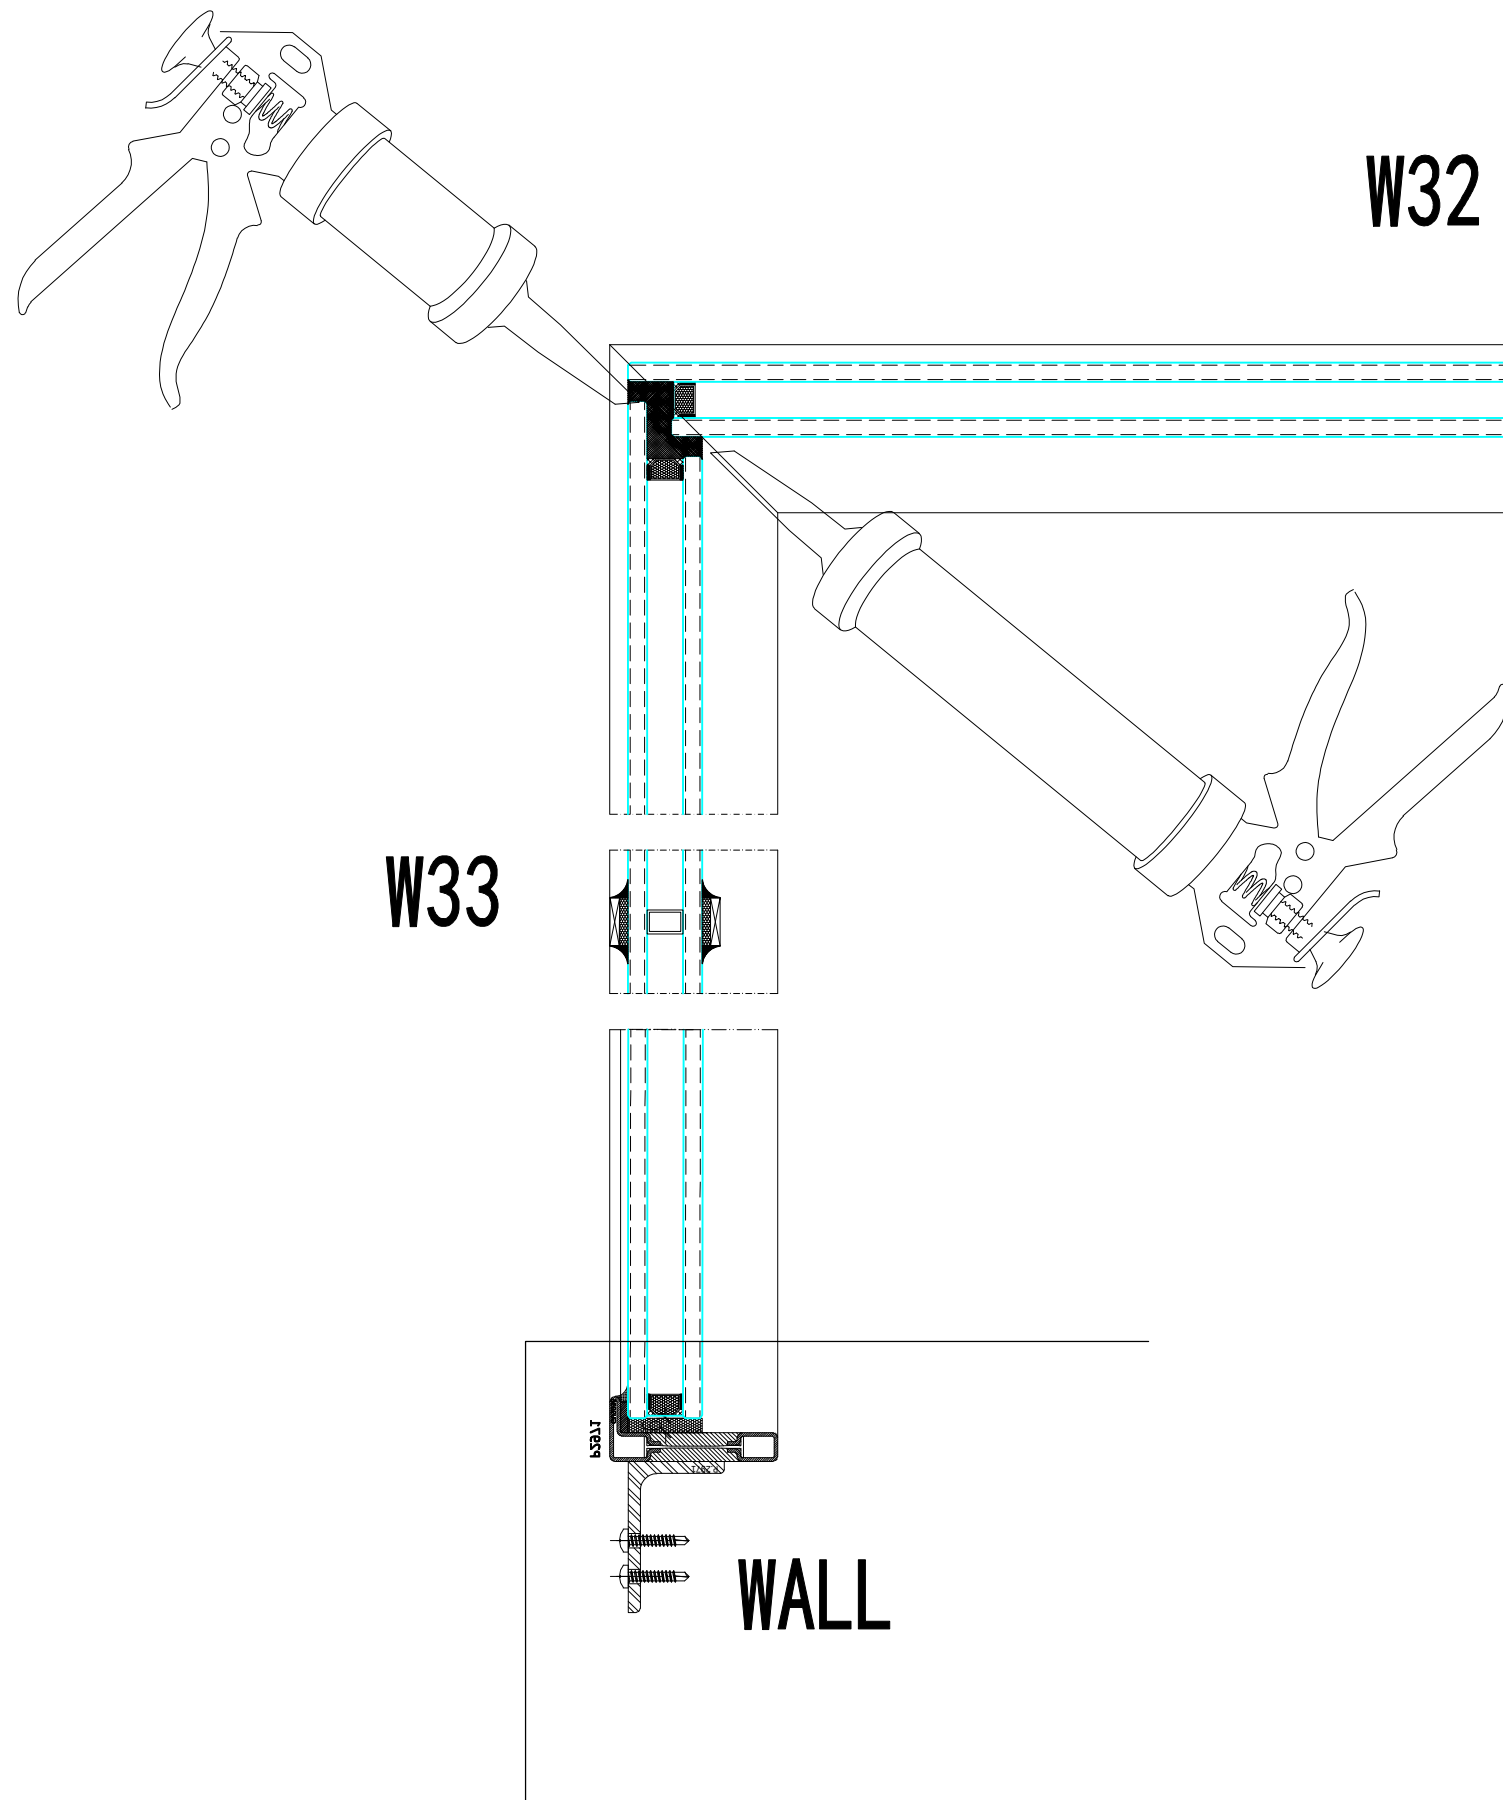

W32

ED19

W33

Inside

WALL


W32

ED19

W33

Inside

WALL

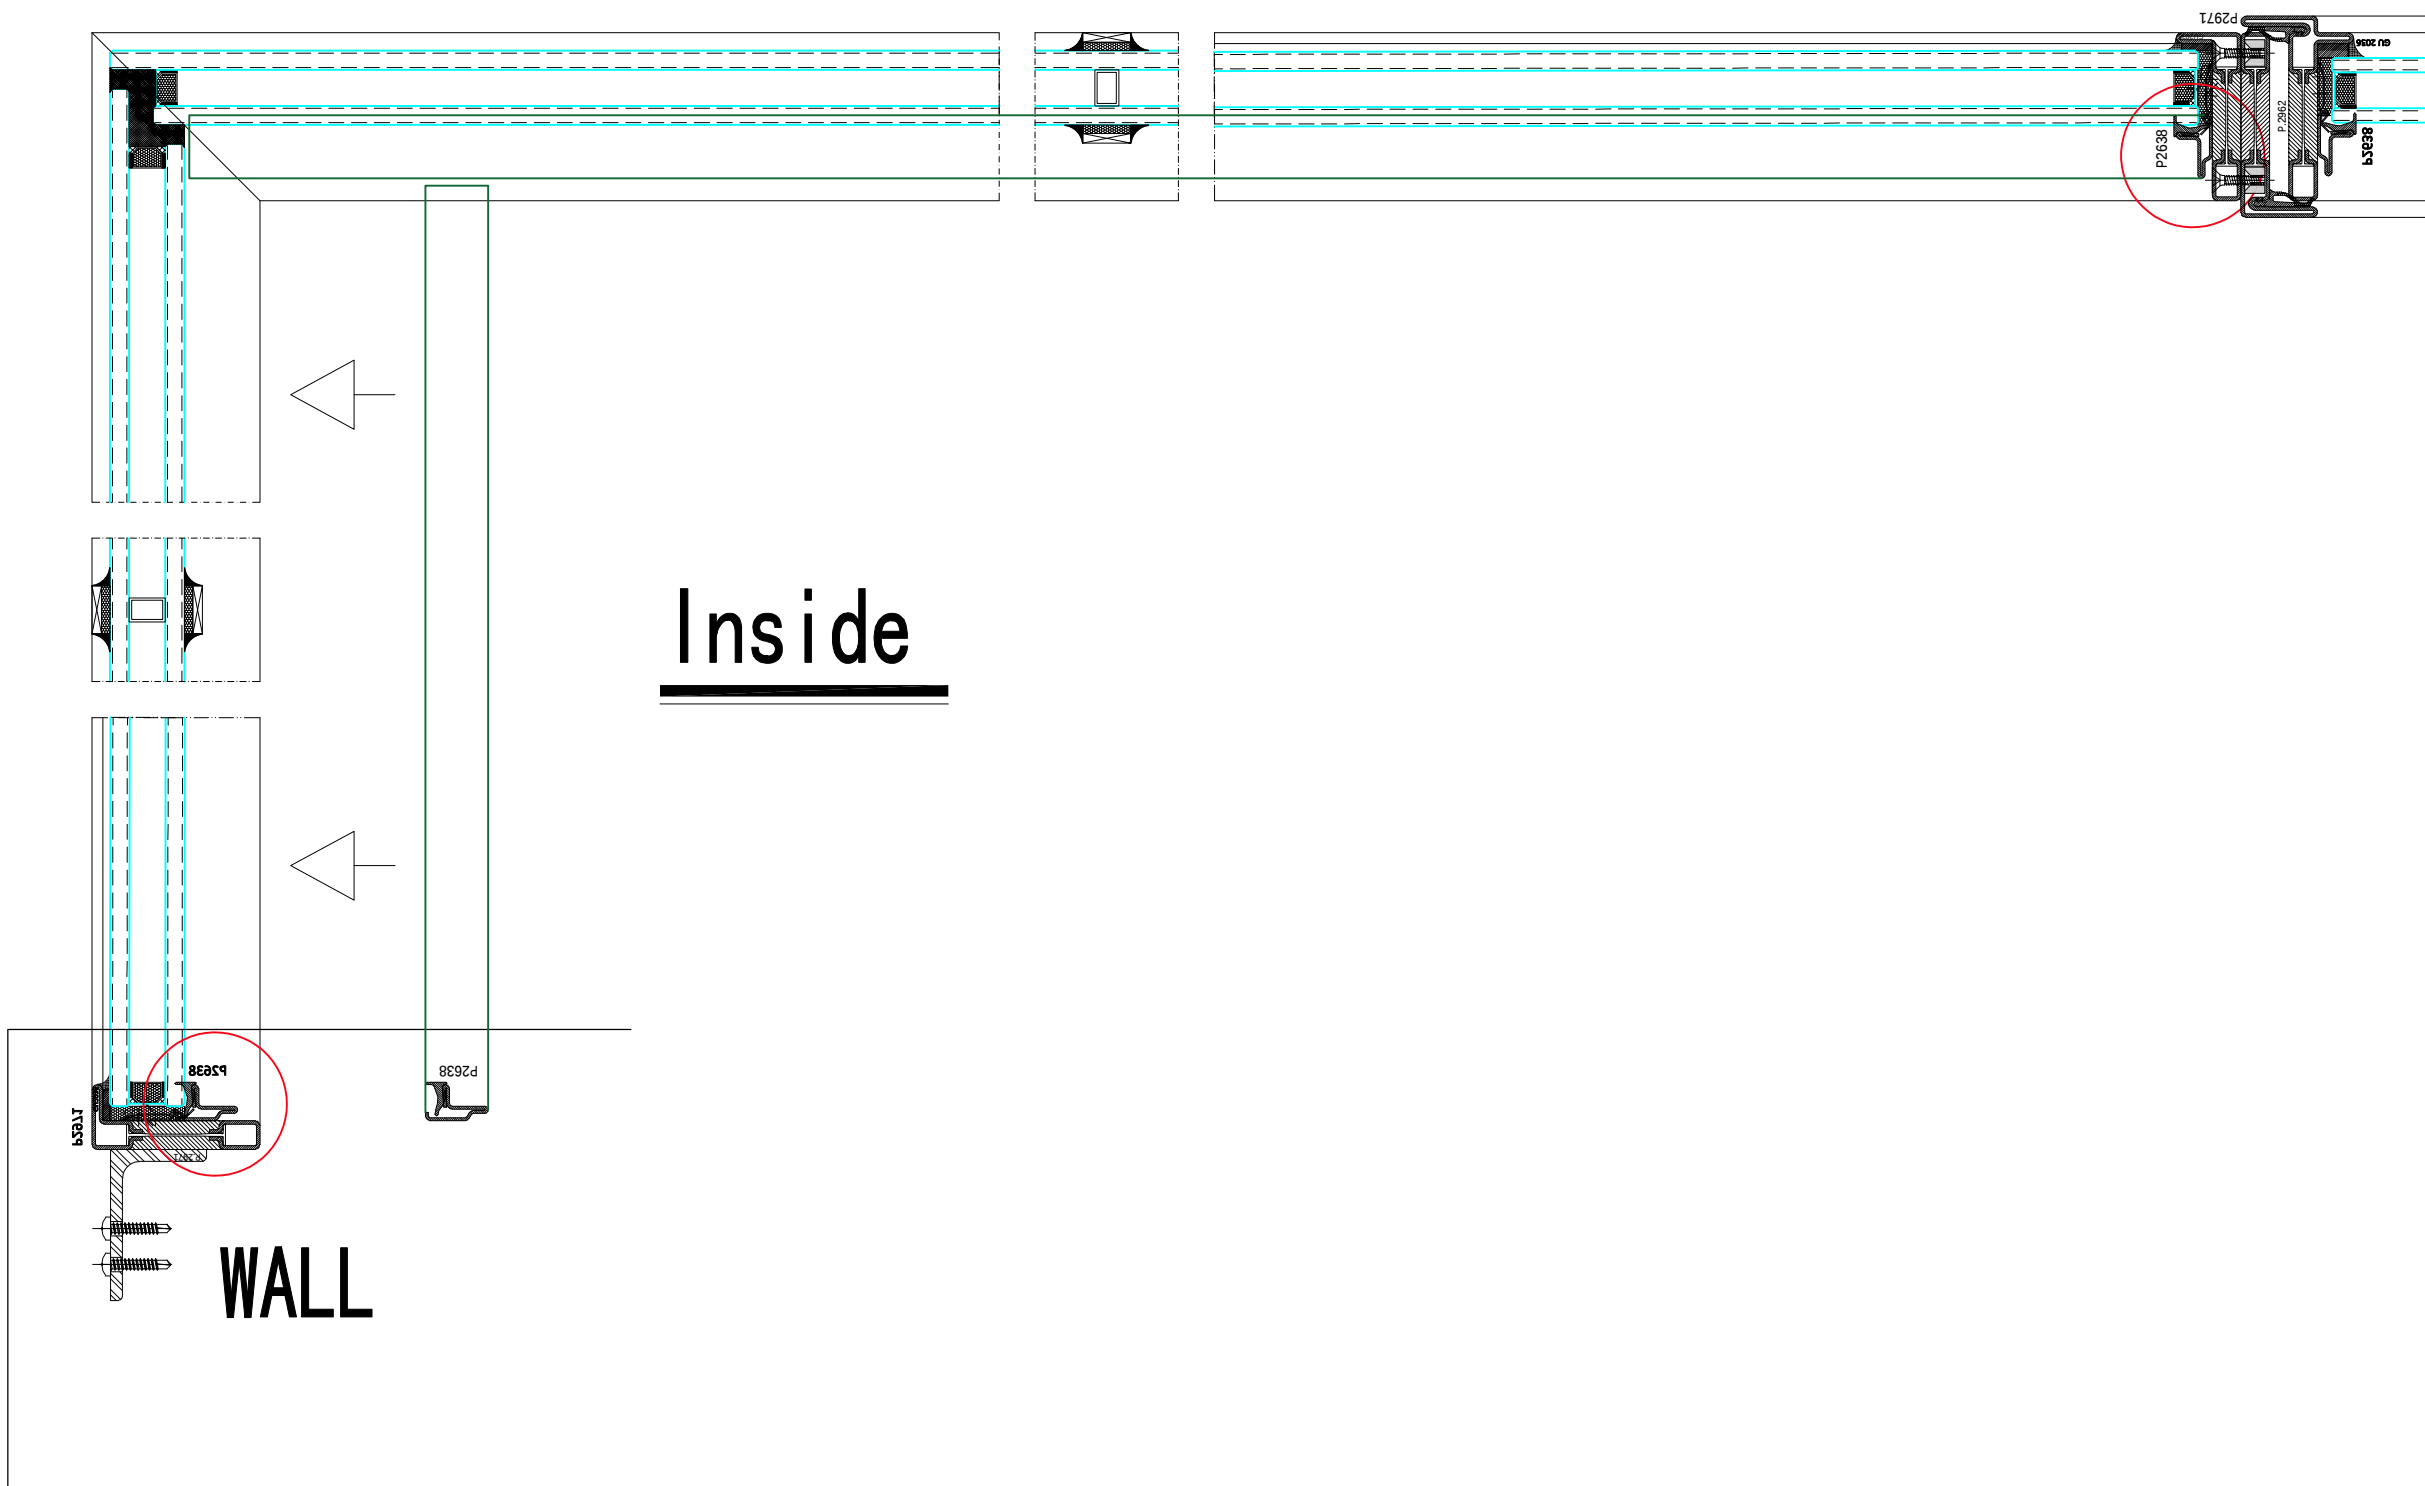

Install Glass Stop (glazing bead)
for Second Window

STEP 7