



Installation Instructions (Single door)

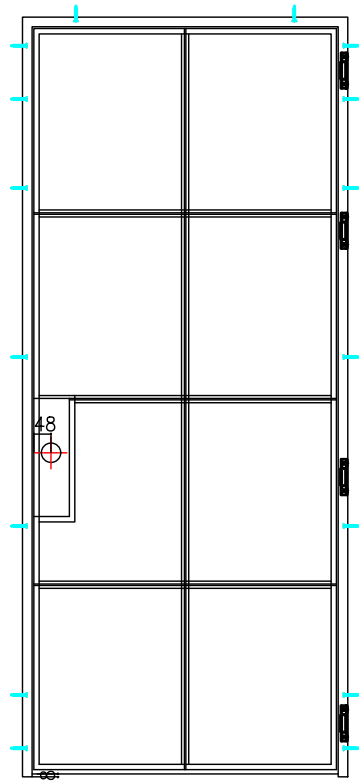


Mounting Holes

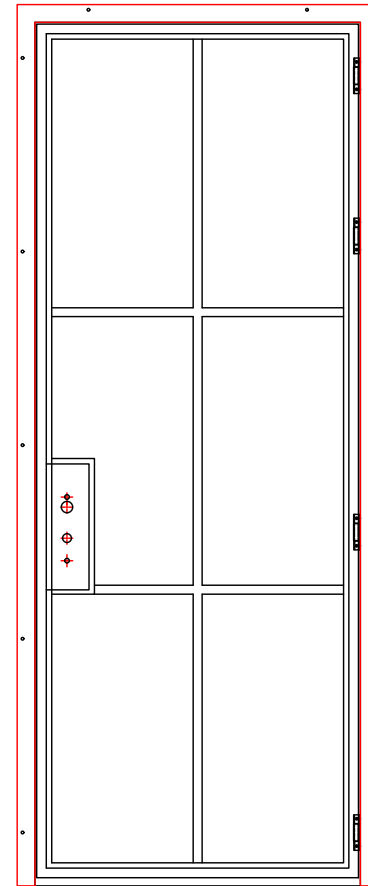


Mounting tabs

Step1: Confirm rough opening size, clean debris, and check level & plumb.
If uneven, use wood blocks to adjust and ensure proper alignment.


Use wood blocks to level and
plumb the rough opening.

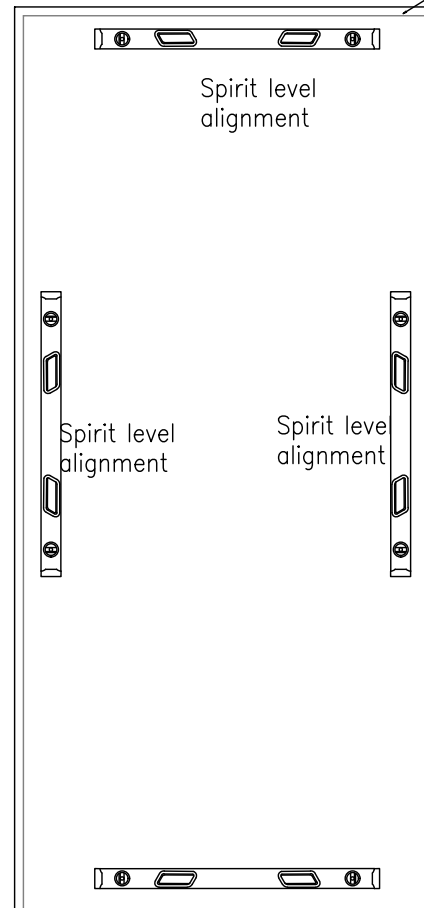

Step 2: Unpack the door, place it in the opening, use spacer blocks in the gaps, and ensure it is level and plumb.

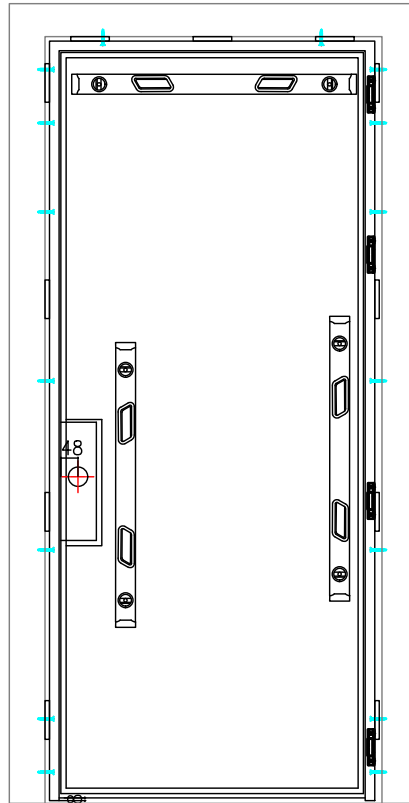


Mounting Holes

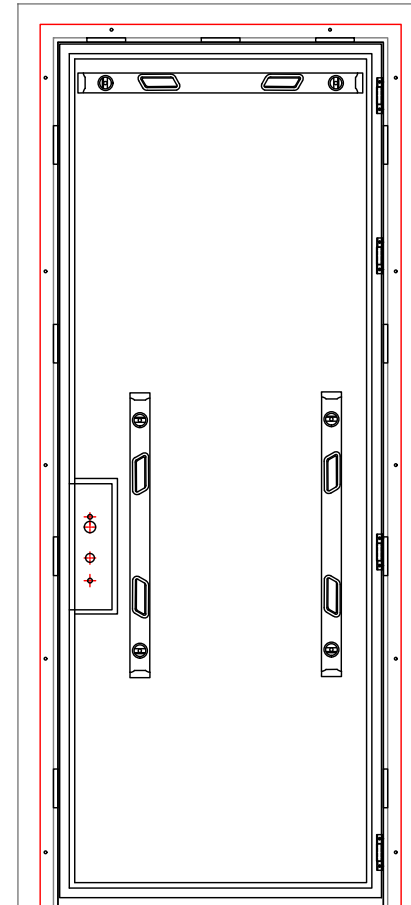


Mounting tabs

Step 3: Open the door slightly (at an angle suitable for screw installation), support the bottom with wooden blocks, raise it about 1 mm, then install screws.


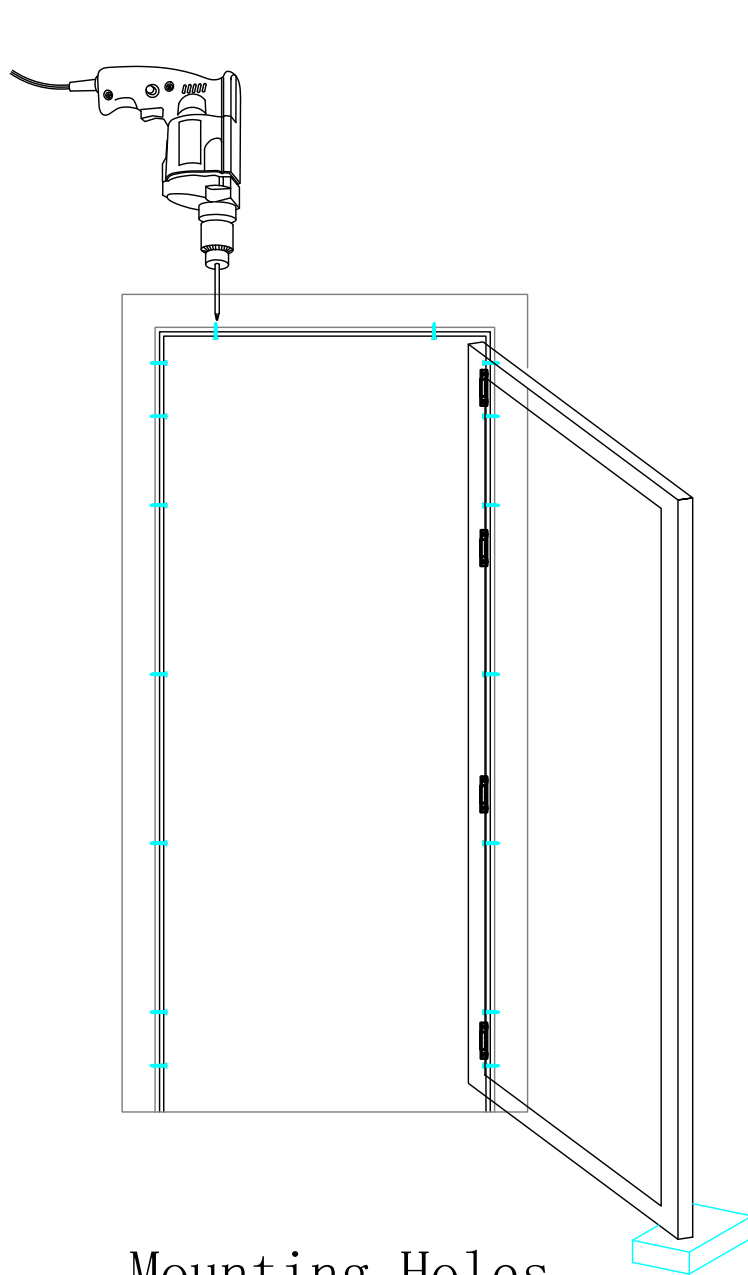


Mounting Holes

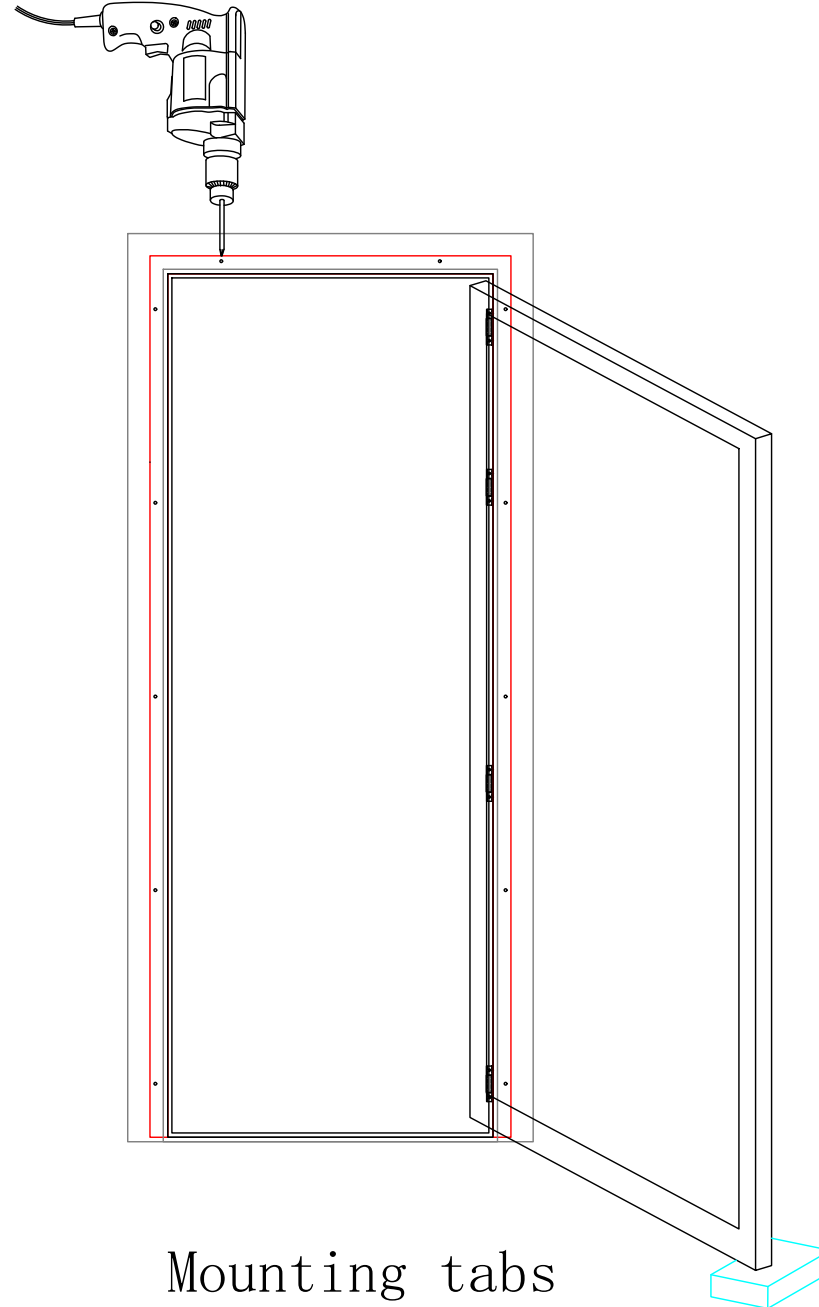



Mounting tabs

Step 4: Install the lock body by inserting it through the side opening, align the screw holes, and secure it with screws. If a separate lock cover is provided, fix it to the lock body with screws. Then install the lock cover, align the handle and keyhole with the pre-cut openings on both sides of the door, and tighten the screws on the cover to complete the installation.

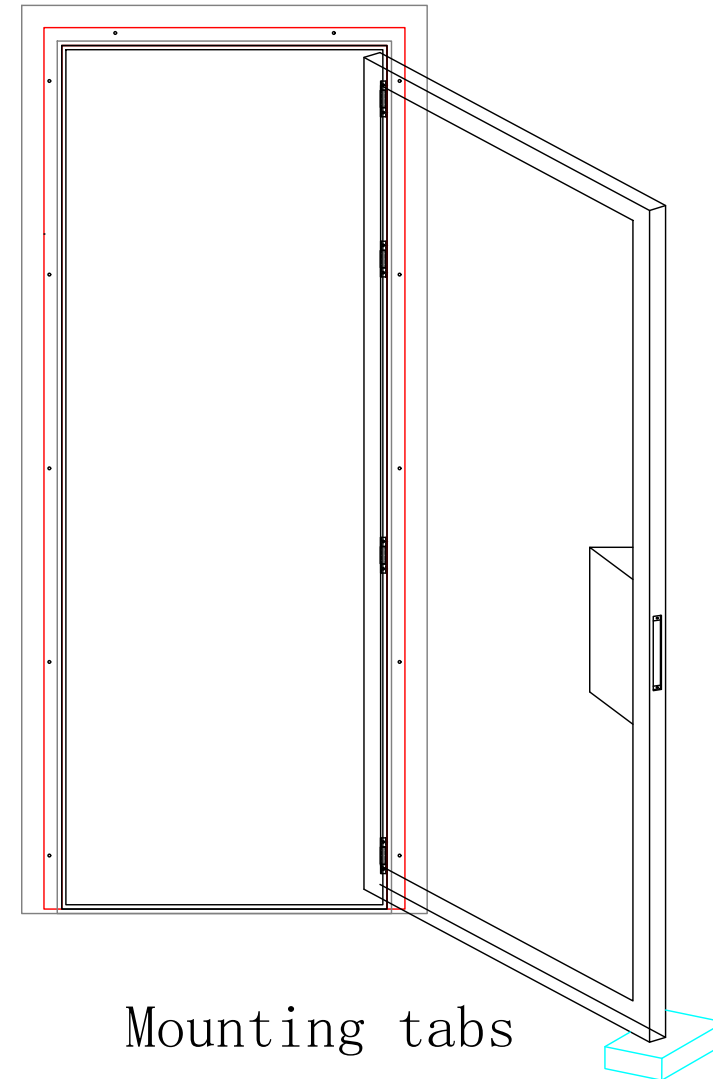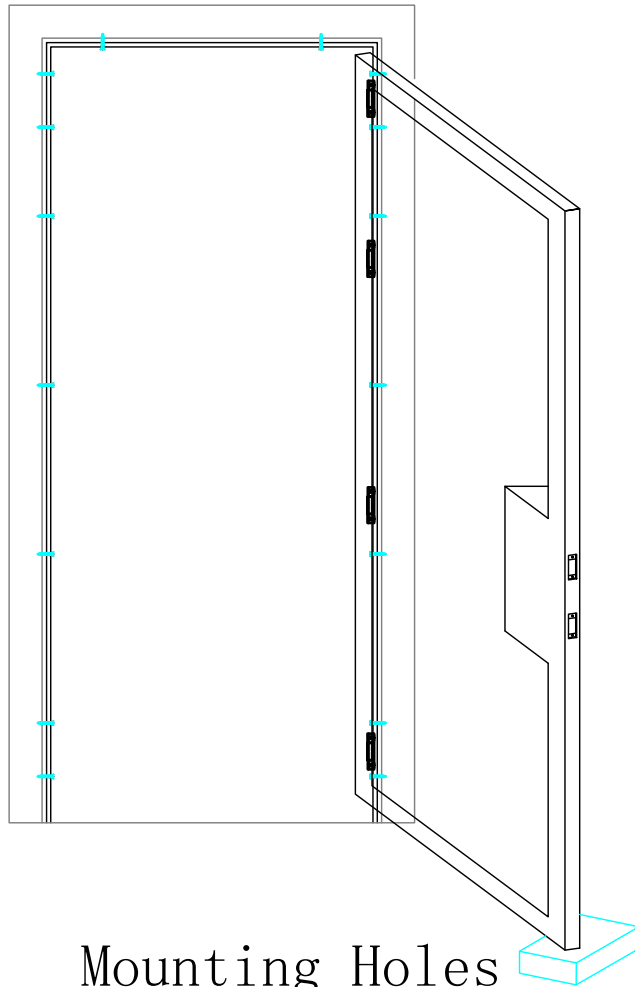


Step 5: After installing the lock body and lock cover, remove the spacer blocks under the door panel and check that the door operates smoothly and the lock functions properly.

Note: If the door sags or drags, use hinge shims (0.5 mm or 1.0 mm) as shown. Insert into the hinge gap to adjust until the door operates smoothly.

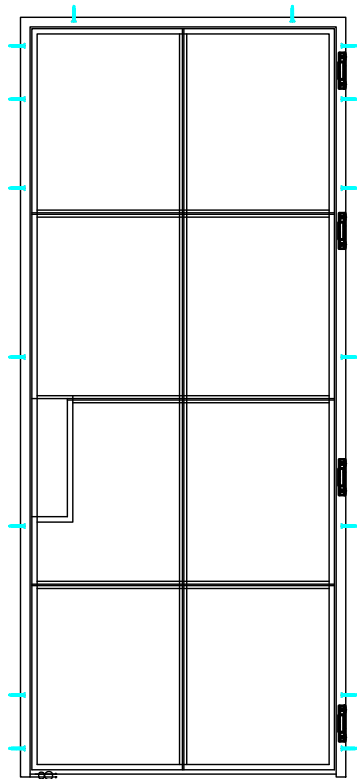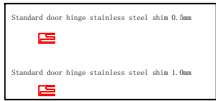

Mounting Holes

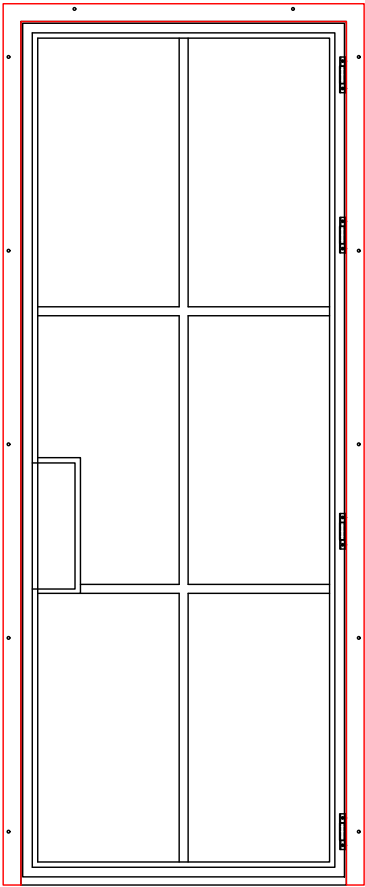

Mounting tabs