



Installation Instructions (Awning with hinge)

Take mounting holes installation as an example.

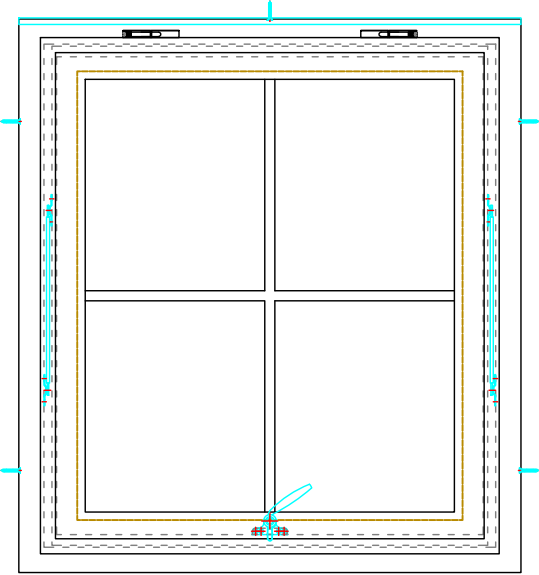


Mounting holes

Step 1: Confirm the window opening size and clean any debris. Check that the opening is level and plumb. If not, use wood shims or a sub-frame to correct it and ensure proper alignment.

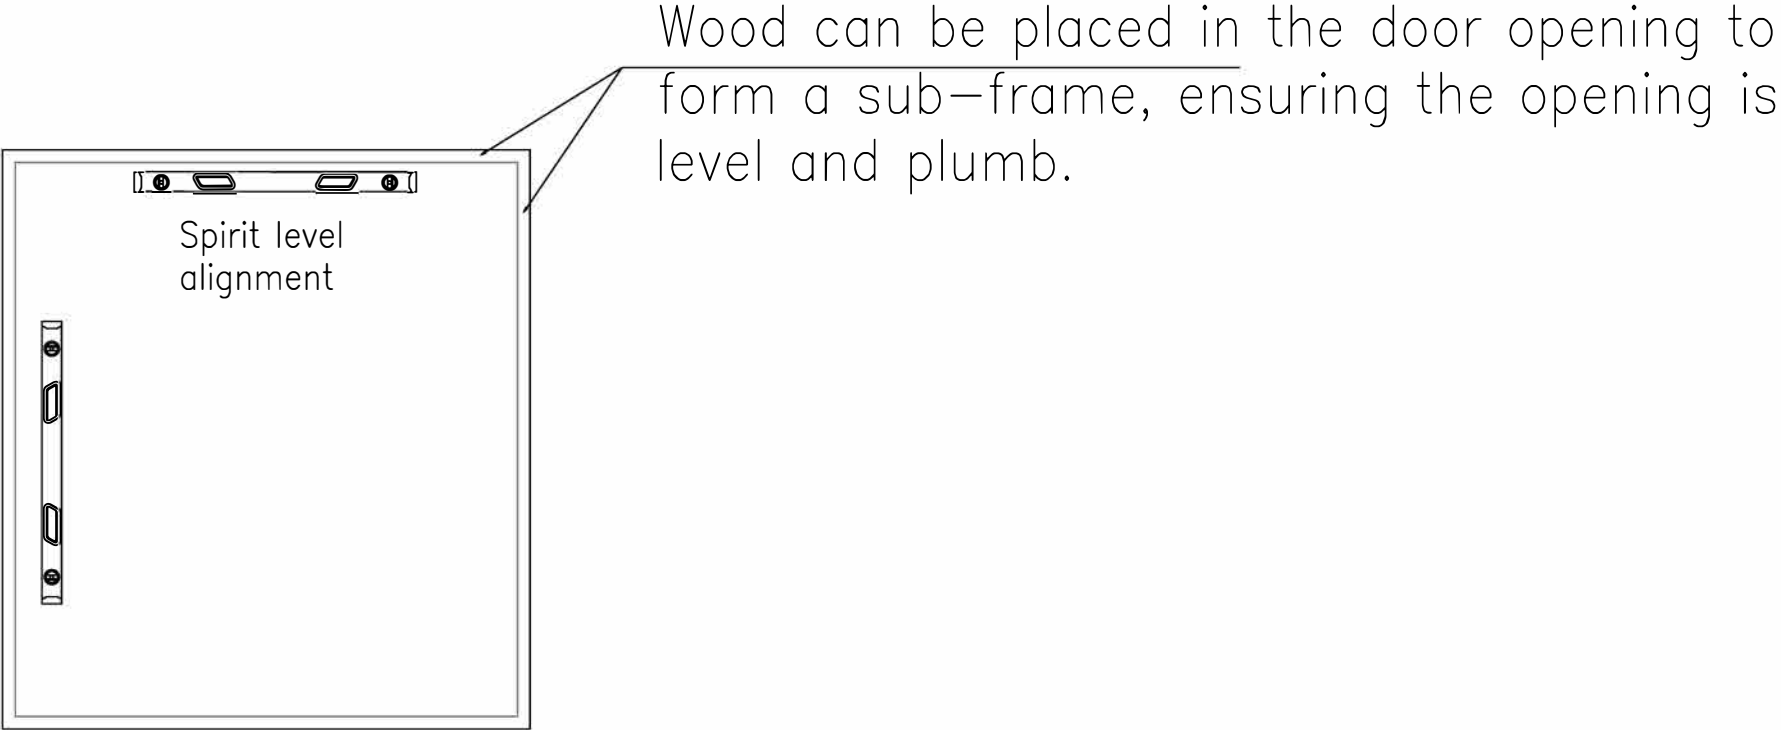


Step 2: Remove the window frame and sash from the packaging and take off all protective wrapping. Lift the frame into the opening and align it properly. Insert spacers (green blocks as shown) into the gaps between the frame and the opening, pack them tightly, and ensure the window is level and plumb.

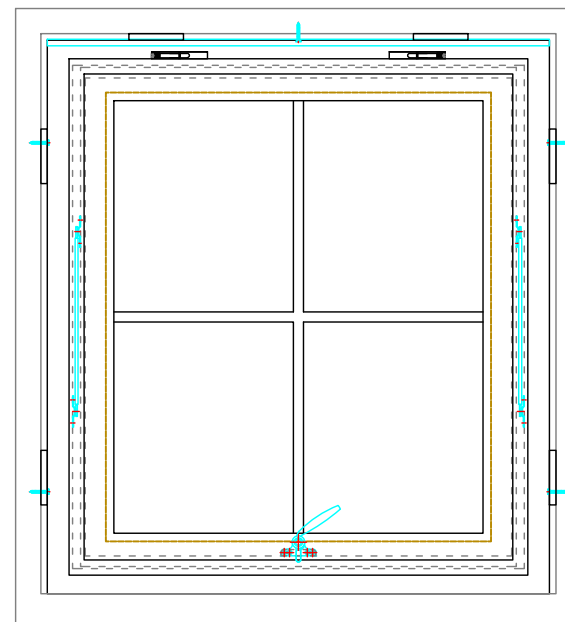

frame and sash packed as one unit

Step 3: After confirming the window frame is level and plumb, secure it with installation screws.

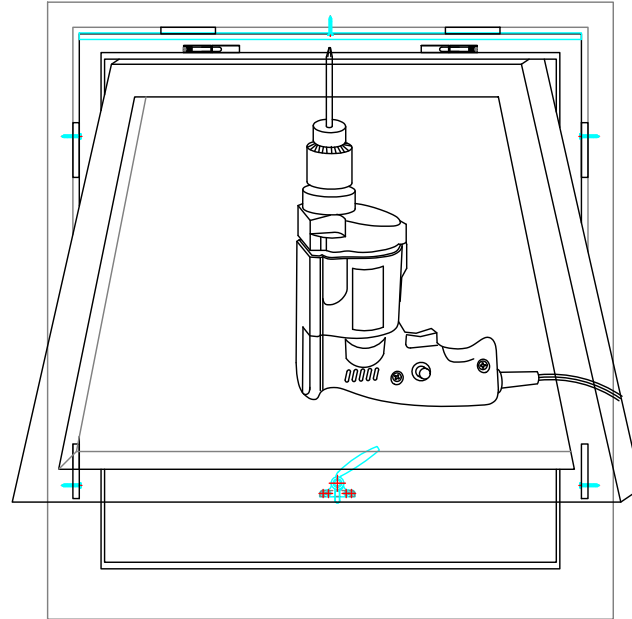

Note:

When the frame and sash are packed as one unit, open the sash to a position that allows easy access for screw installation, then secure the window with screws.

Step 4: Open and close the sash: 1) check whether the window stay bar operates properly (window has limited opening angle); 2) ensure the handle operates smoothly.

