


Installation Instructions (Hafele Slider)

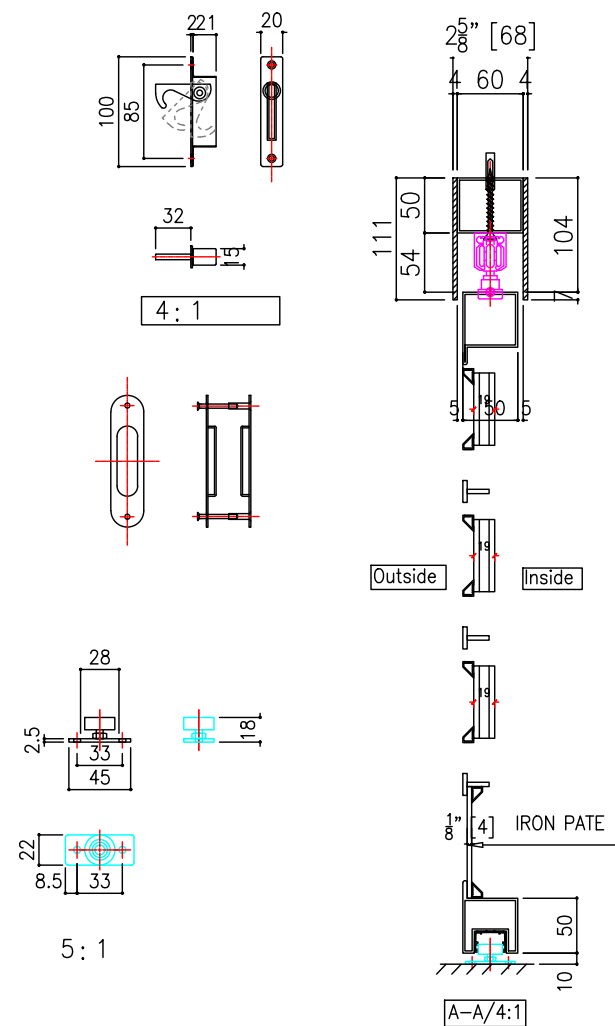




Inside

Outside




Inside

Outside



Step 1: Confirm the opening size and clean any debris. Check that the opening is level and plumb. If not, use wood shims or a sub-frame to correct it and ensure proper alignment.

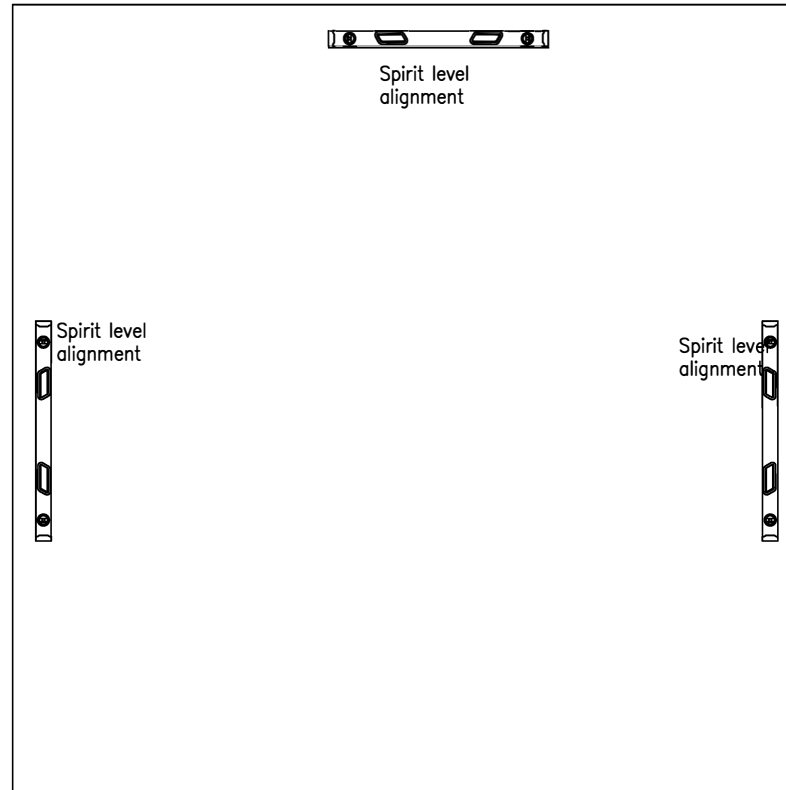

Step 2: Remove the frame, track, and door panels from the packaging and remove all wrapping. Take out the hardware and check that all parts are complete.

①



Hanger roller assemblies × 2

②



Positioning devices × 4

③



Bottom guide blocks × 2

④



Damping triggers × 4

⑤




Allen key screw accessories × 2

Step 3: Take out the track and install the sliding door top track accessories into the track in the order shown in the diagram.




① Positioning devices ② Hanger roller assemblies ③ Damping triggers

Note: As shown in the diagram, the damping trigger side must face the open side of the track.

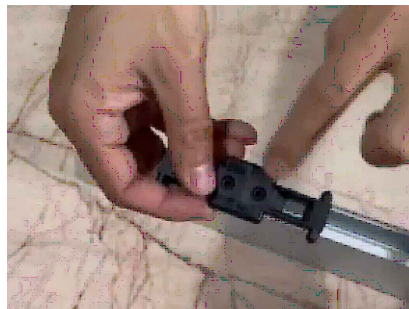


Step 4: Install all required accessories for both door panels into the track in order.


Step 5: Lift the door frame into the opening and align it. Insert spacers to secure it, ensure it is level and plumb, then fix the vertical sides with screws.

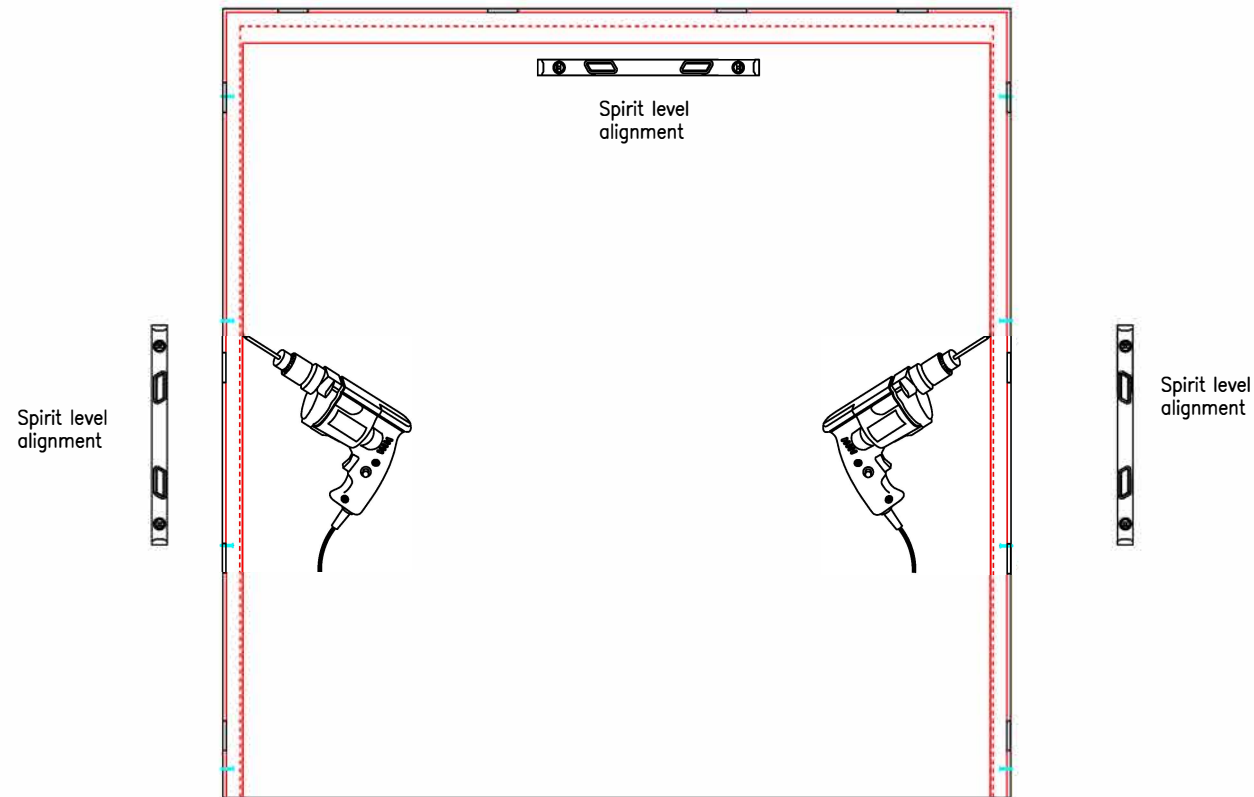


Step 6: Center the track under the top frame and secure it by fixing screws through the track into the wall, fastening both the track and the entire frame.

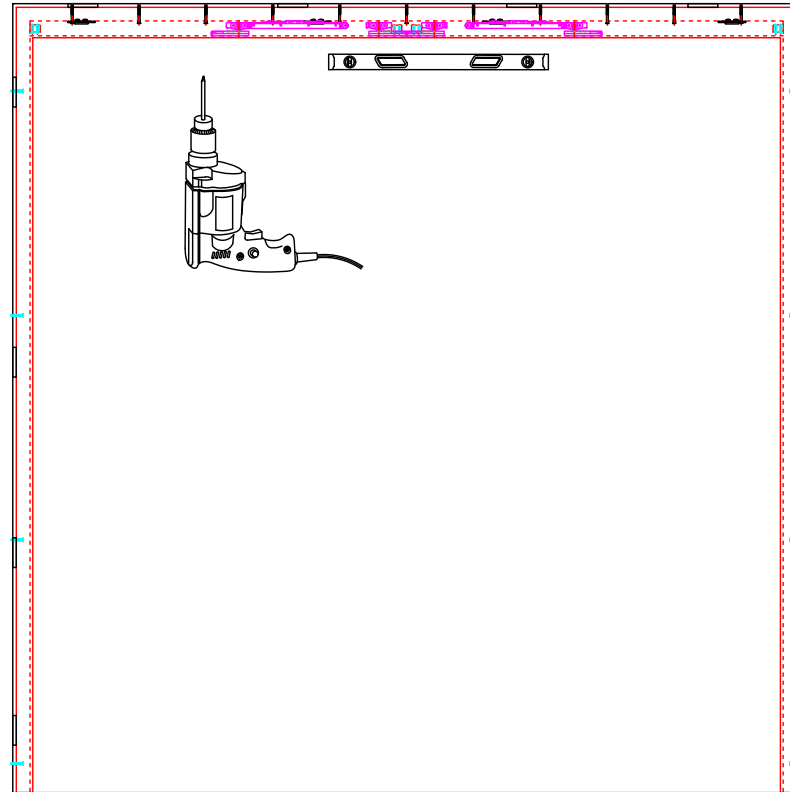


Step 7: According to the required clear opening width, install the bottom guide blocks on both sides of the floor and secure them to the ground with screws.

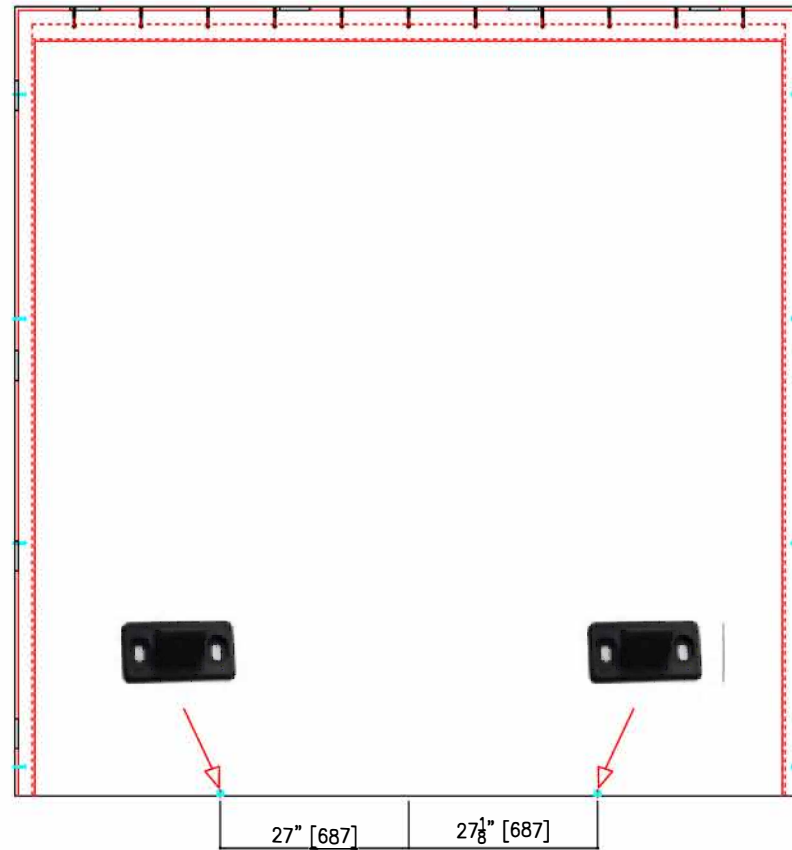


Step 8: Lift the right door panel into the frame, align it with the top center, and raise it into the cover panel. Ensure the bottom guide block fits into the groove, then connect and secure the top hanger roller assemblies with screws.

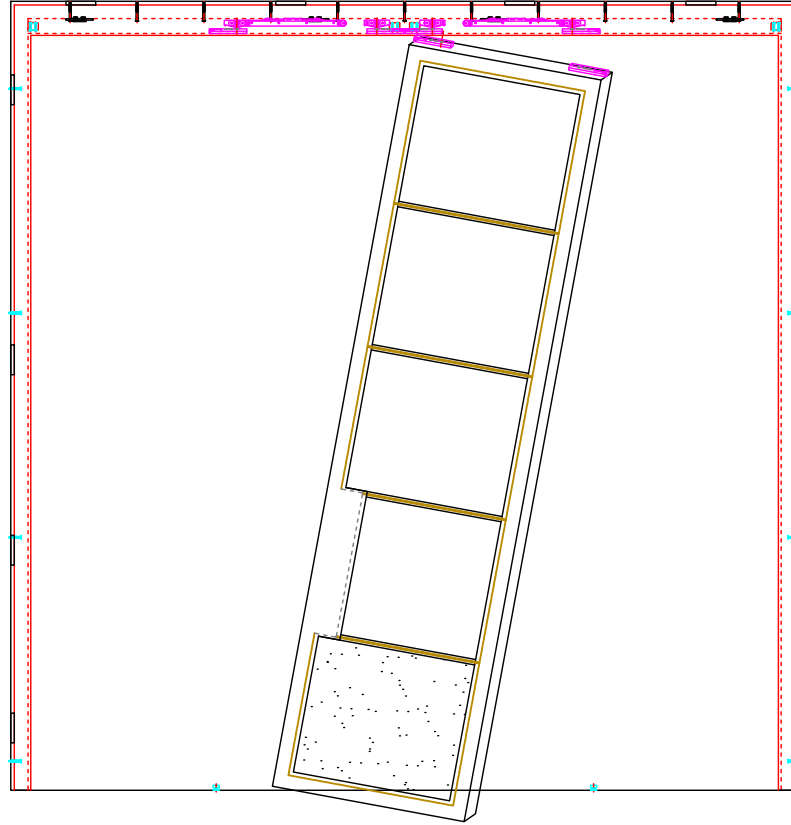

Step 9: Install the positioning devices and damping limiters in the right track at the designated positions and secure them with screws. Slide the door panel to check if it moves smoothly

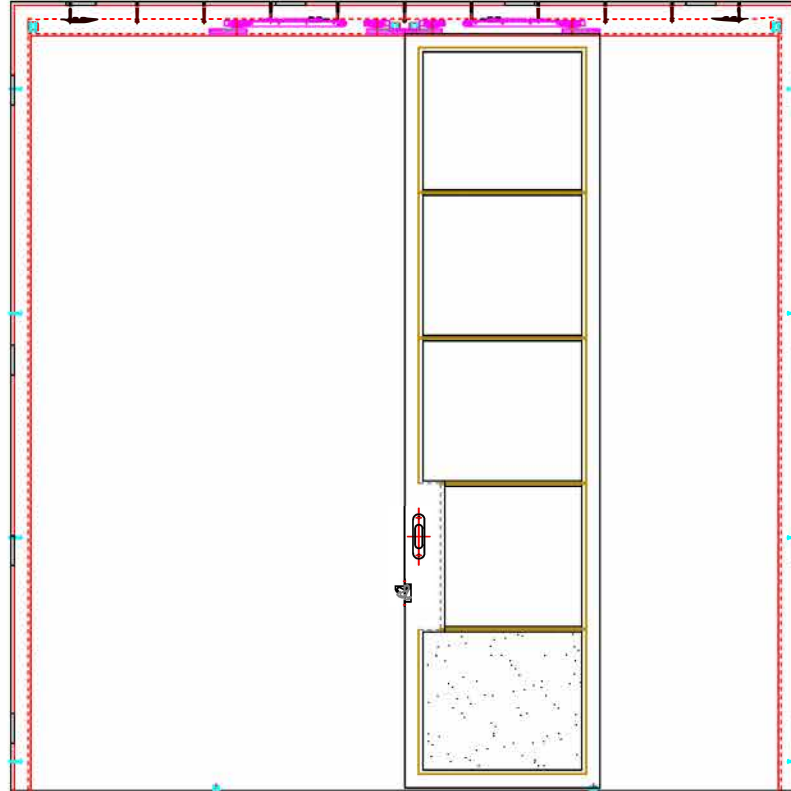

Step 10: Slide the right door to the far right. Lift the left door into the frame, align it centrally, and raise it into the cover panel. Ensure the bottom guide block engages the groove, then secure the top hanger roller assemblies with screws.

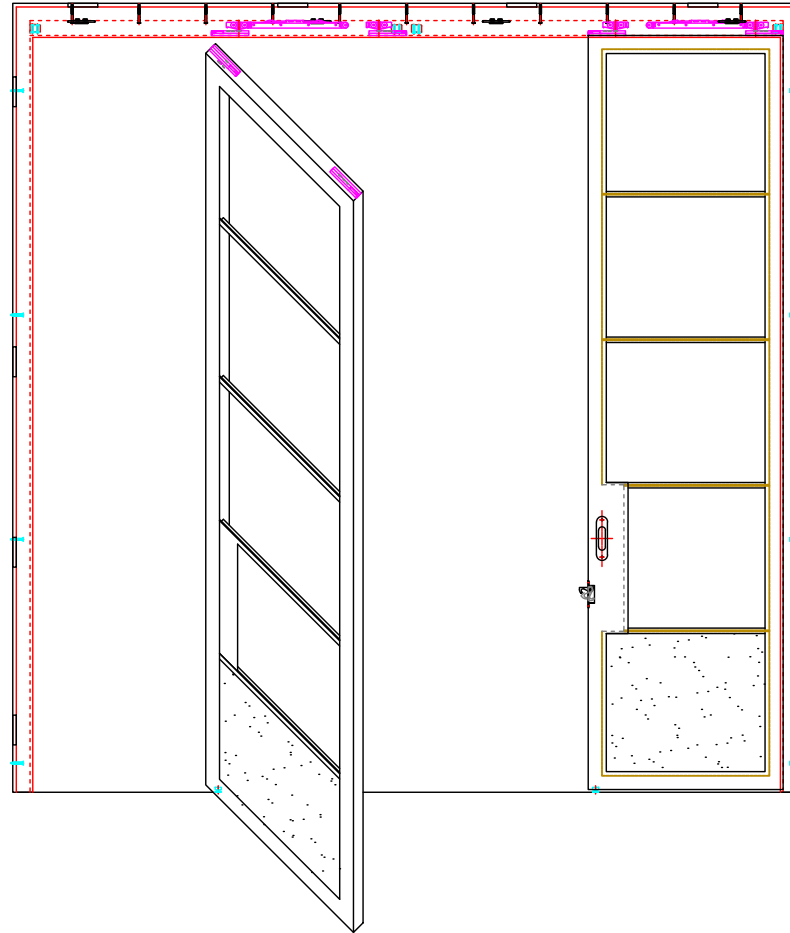

Step 11: Check whether both door panels slide smoothly and whether the damping function works properly. If so, the installation is complete.

