



Installation Instructions (Single door)

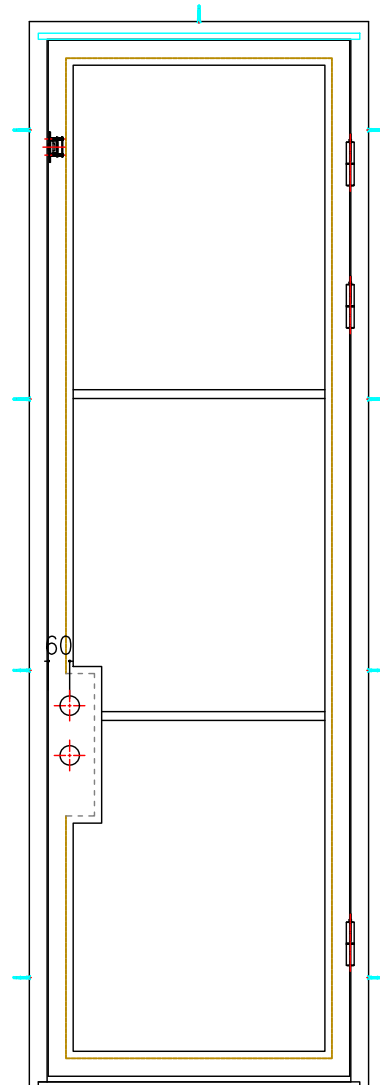

Take mounting tabs installation as an example.




Mounting holes

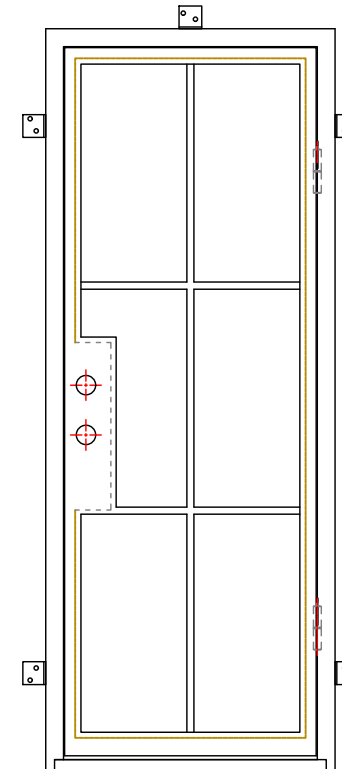


Mounting tabs


Step 1: Confirm the opening size and clean any debris. Check that the opening is level and plumb. If not, use wood shims or a sub-frame to correct it and ensure proper alignment.

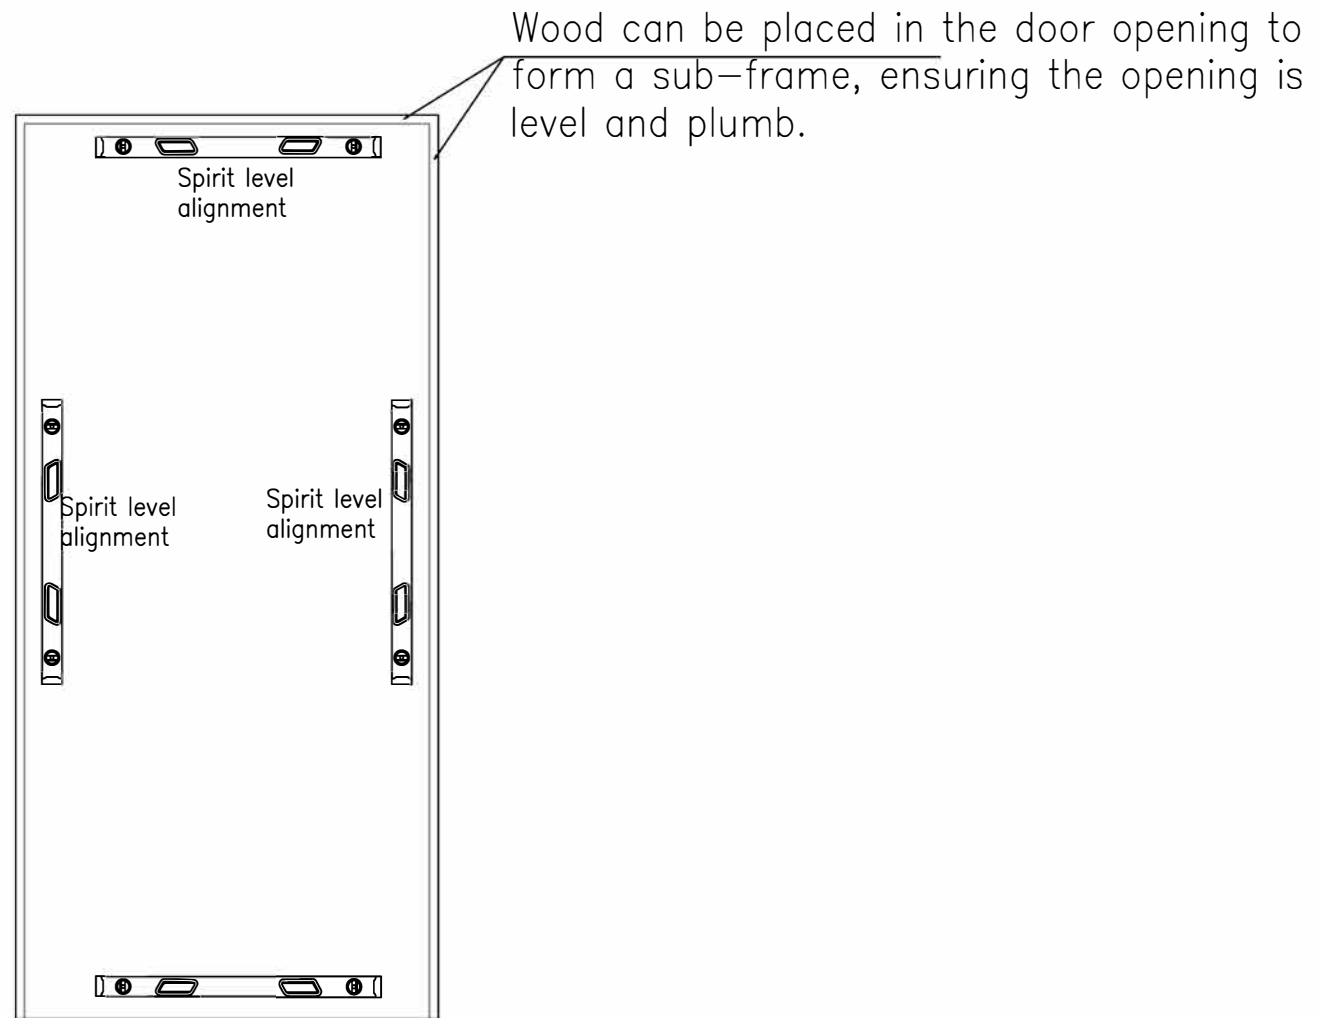

Step 2: Remove the frame and door panels from the packaging and take off all wrapping. Install the frame into the opening, insert spacers to secure it, and ensure it is level and plumb.

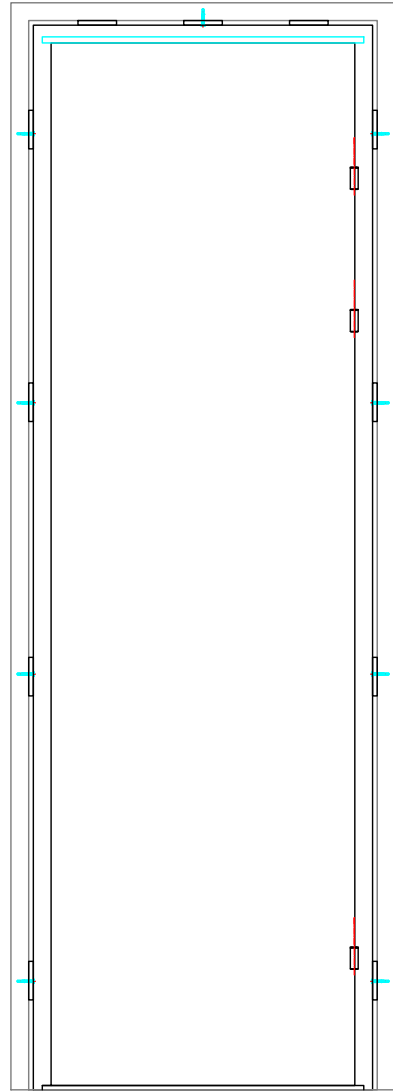


Mounting holes

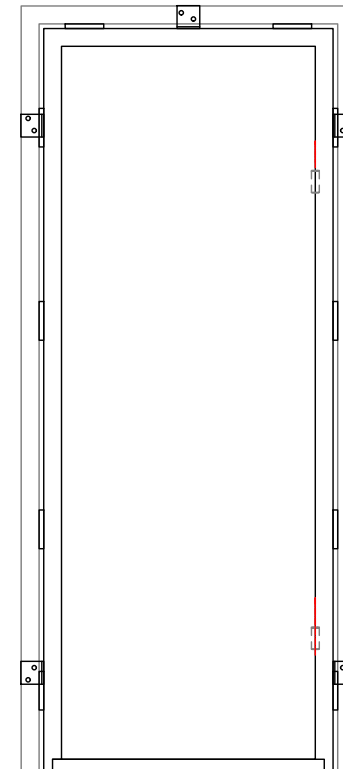


Mounting tabs

Step 3: After confirming the door frame is level and plumb, secure it with screws three sides.

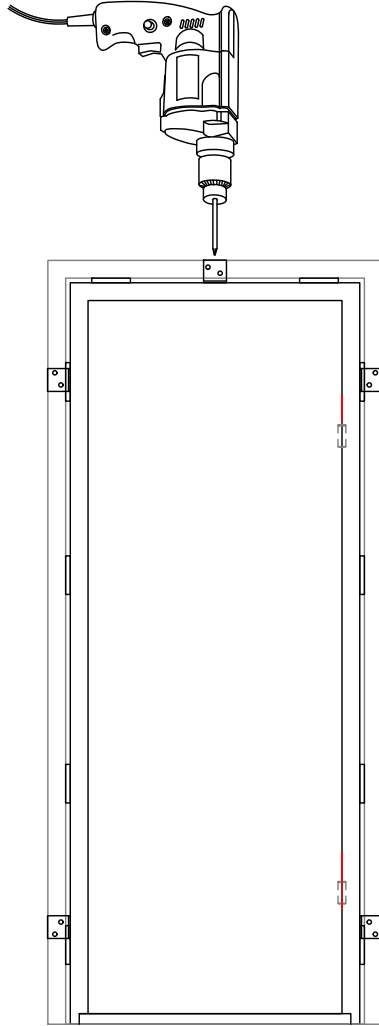


Mounting tabs

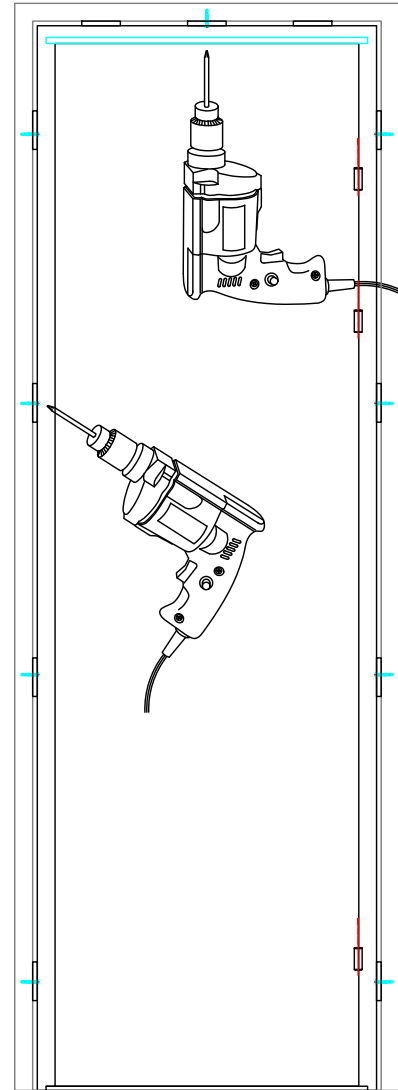


Mounting holes

Step 4: After installing the screws, fit the hinge spacer onto the frame hinge. Lift the door panel, align its hinge with the frame hinge, and insert it. Rotate the door to check whether it opens and closes smoothly.

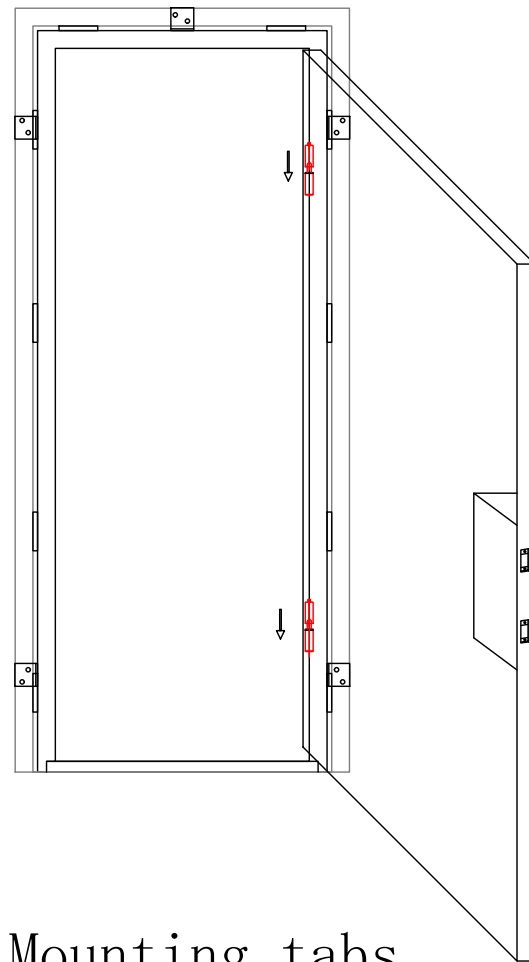

Mounting tabs



Lift the door panel upward to allow the sash hinge to fit into the frame hinge.

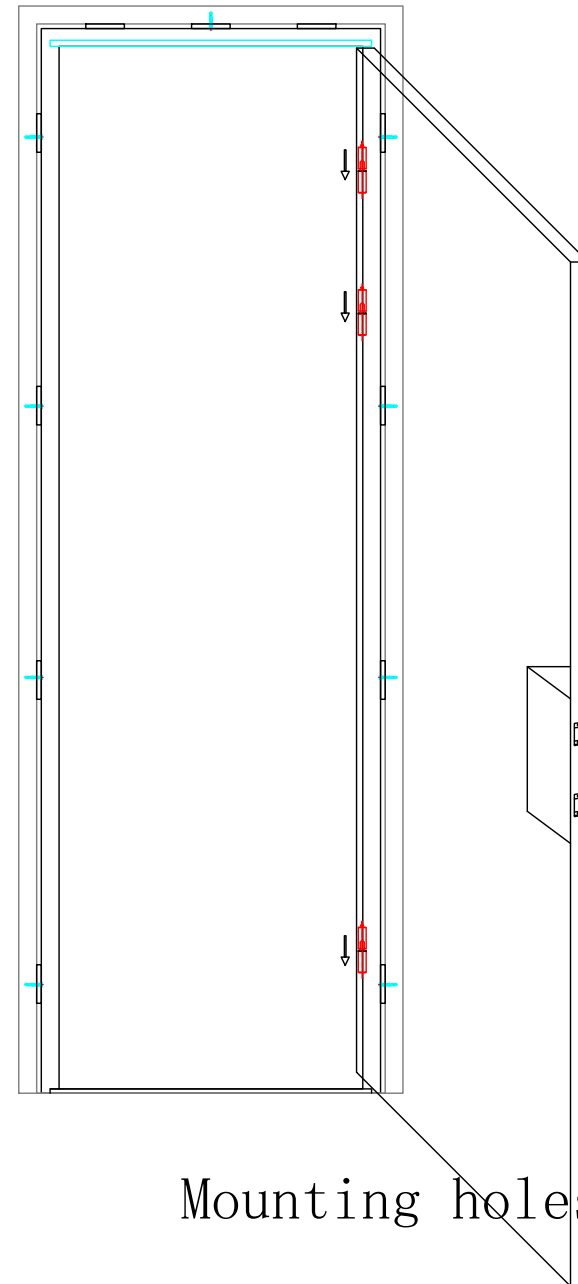


Mounting holes

Lift the door panel upward to allow the sash hinge to fit into the frame hinge.

Step 5: Open the door panel to about 45°, and place a wooden block under the bottom of the door according to the floor clearance to prevent sagging. Install the lock body on the side of the door panel, then fit the lock cover, cylinder, and other related hardware on both sides.

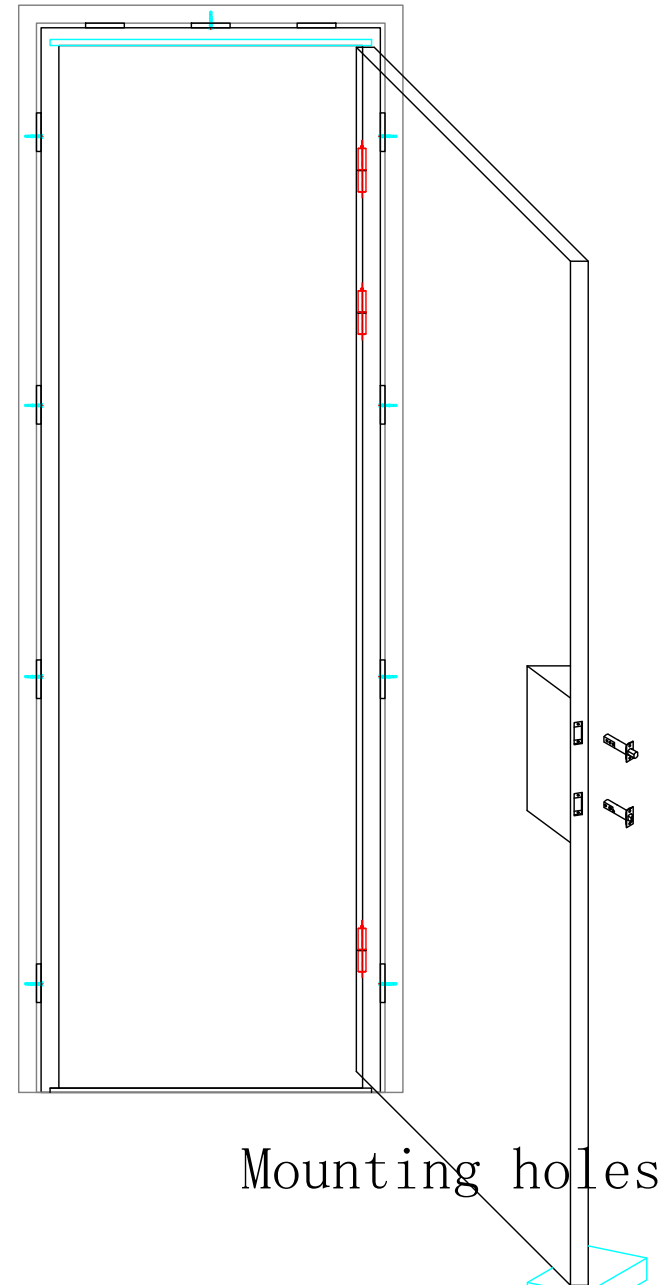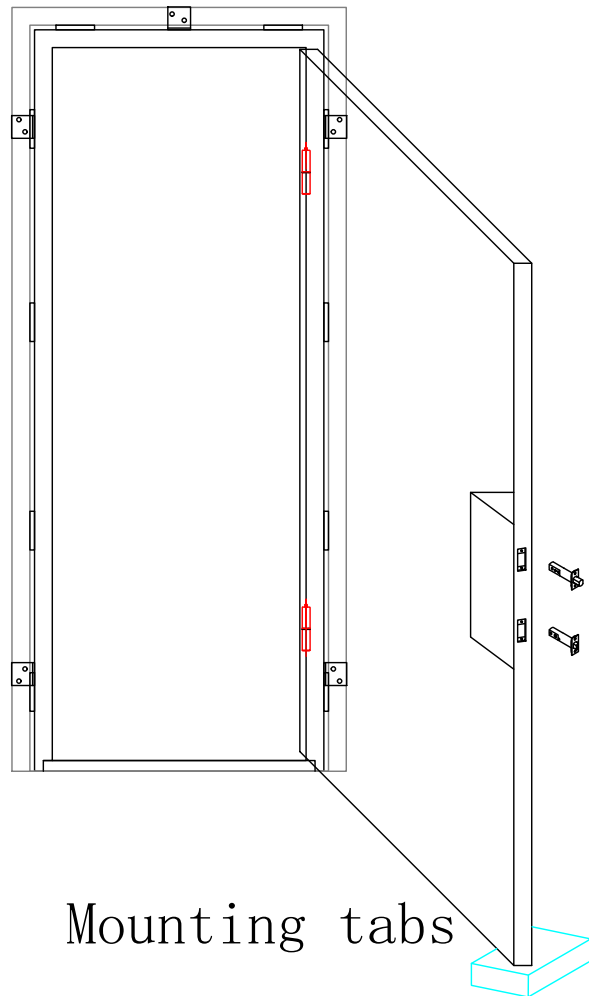


Step 6: After installing the lock body and cover, remove the wooden block under the door panel. Check whether the door opens and closes smoothly and whether the lock operates properly..

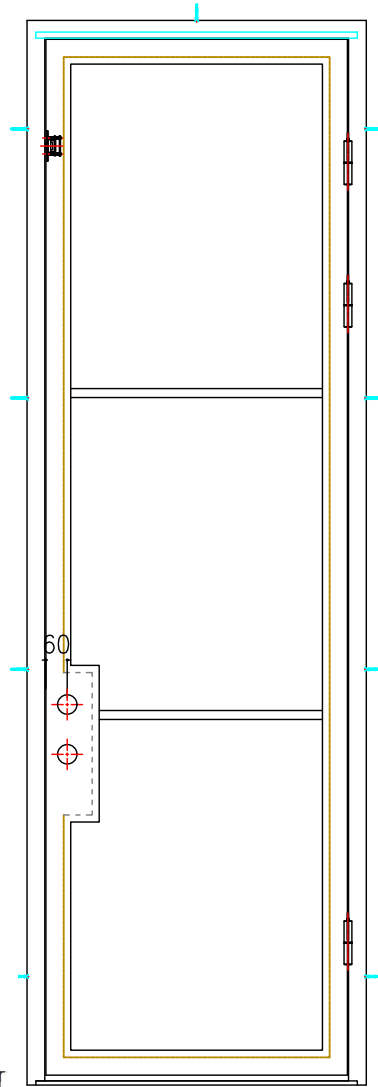

Mounting holes

Note: If the door sags slightly or the corner lifts, insert a wooden shim into the gap near the lower hinge to adjust it and make the gaps even.

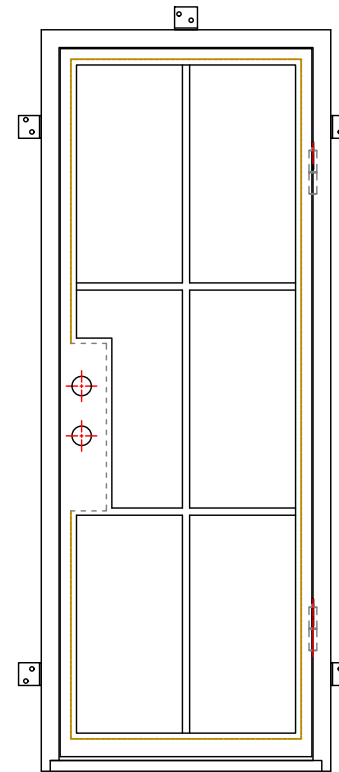

Mounting tabs